

Warranty:

The Battery Operated Stainless Steel Salt and Pepper Grinder Set comes with a 12-month warranty from the date of purchase as long as you purchase it directly from Jovial Kitchen or our authorized partners.

To activate the warranty, please visit our website and fill out the warranty form:

www.jovialkitchen.com/warranty

A proof of purchase is required to get a replacement product or a refund. The warranty shall not be extended if a replacement product is sent. The warranty does not cover purposefully damaged parts or products due to negligence or misuse.

If you have any questions or concerns, please contact our friendly staff at **customers@jovialkitchen.com**.

Please follow us on:



**User Guide
and
Instructions**

Batteries:

- 1) Twist the top part of the grinders until the lines match and lift to open;
- 2) Insert the batteries so that the top part of the battery corresponds to the "+/-" symbol marked on the grinder;
- 3) Close the lid by placing it back on so that the lines match and twist until you hear a click.

Use:

- 1) Open the lower part of the grinder by twisting it until the black arrow matches the unlock sign and you hear a click;
- 2) Fill the container with the condiment you would like to use;
- 3) Close the lower part of the grinder by aligning the black arrow and the unlock sign and twisting it until the black arrow matches the lock sign and you hear a click again;
- 4) Remove the rubber lid from the bottom by twisting and pulling it slightly;
- 5) Adjust the coarseness by twisting the knob at the bottom so it corresponds to the desired size;
- 6) Press the button at the top of the grinder and enjoy your stainless steel grinders;
- 7) When not in use, place the rubber lid back so it keeps your countertops clean.

Troubleshooting Guide:

- 1) Please pay special attention when inserting the batteries. If you insert them wrongly, this will cause the grinding mechanism to work clockwise which

will lead to little or no grinding. The grinding mechanism should operate anticlockwise.

- 2) Make sure you have not set the coarseness to too fine. Tightening the adjuster too much may lead to little or no grinding due to factory settings.
- 3) Make sure the grinding mechanism is not clogged.
- 4) Make sure both the container and the battery lid are safely closed. If the battery lid cannot be closed properly, try inserting different brand batteries as the size may slightly vary depending on the brand that you use.
- 5) If the product is still not operating, opt for a different brand batteries.

For the best experience:

We have tested the product with well-established brand non-rechargeable batteries. We strongly recommend that you opt for a good quality batteries to ensure the maximum longevity.

We don't recommend mixing batteries from different brands, or using old and new batteries simultaneously.

Replace any batteries that have leaked, clean the area and wash your hands. To prevent leaking of the batteries, remove them if you don't plan on using the product for a long period of time.

Do not submerge the body of the product in water or any other liquid. The only washable parts are the rubber lid and the stainless steel stand.

We recommend that you clean the grinding mechanism every six months or as necessary. You will receive detailed instructions on how to do it once you send your warranty form.