

AT-ROBOT

SMART VOICE CONTROL ROBOT

P1. Correct battery install way

Step ①→②→③

① ② ③

P2. Two power connectors

Battery bay backside ①

P3.

If the robot can't work after installing the batteries, please check the battery bay. Make sure all the clips can be connected. If the clip can't be connected, please adjust it to connect to the robot.

P4.

Please make sure that this power connector is in the right position.

Note: The robot will be power off if you say "good bye", "sleep" to it, you should press the taking recording button in the chest to turn it on again.

1

AT-SMART ROBOT - FUNCTIONAL DESCRIPTION

1 Touch sense

- Short press: ① Robot language, music and action
② Walk in circle and sounds
③ Robot sounds "bipobipo" with "kiss" sounds and go forward
④ Laughter sounds with go backward
- Long press to enter the voice repeat mode. You say one word, it will repeat. Short press to exit.

2 Robot's eyes indicate

- Light color change oftenly when robot is working.
- When it is in sleeping mode, the light will turn off.

3 Touch sense

- Short press first, robot will speak robot language and walk backward with sound; short press twice, robot will speak robot language and turn right with sound.
- Long press: volume down, 7 volumes in total (usually in volume 5)

4 Voice message button

- When the robot is working, short press the button to stop it; when it is in standby, short press the button to play the recordings, press one time, play one recording; when it is sleeping, short press the button to wake it up.
- Long press the button for 2 seconds to enter the recording mode, you can take a 8 seconds recording each time, 3 recordings can be recorded in total.

5 Voice control receiver

- When it is in voice controlled mode, please speak to the receiver, the best distance is in 50cm.
- When recording, please keep quite to avoid recording error.

Note: The robot will be power off if you say "good bye", "sleep" to it, you should press the taking recording button in the chest to turn it on again.

6 Touch sense

- Short press first, robot will speak robot language and walk forward with sound; short press twice, robot will speak robot language and turn left with sound.
- Long press: volume increase , 7 volumes in total (usually in volume 5)

7 Independent steering wheel

8 Follower wheel



How to operate?
Please scan this QR code.

2

AT-SMART ROBOT - VOICE CONTROL FUNCTIONS

Power on:Go forward+power sounds+turn left+turn right+robot language+backward

	Hey at		01 "A...t..." +shake 02 "Here" + go forward +robot sounds 03 "Hey guy" + turn left & turn right
	Come here		01 "Yes" + go forward + robot sounds
	Go back		01 "Yes" + backward + robot sounds
	Turn left		01 "Yes" +turn left + robot sounds
	Turn right		01 "Yes" + turn right +robot sounds
	I love you		01 Robot sounds+go forward + sound as 'kiss' 02 Robot sounds+walk in circle + robot sounds 03 Robot sounds+ 'I love you too' + "kiss" sounds
	Are you happy		01 Robot sounds+laughter sounds 02 Robot sounds+song+dance moves 03 "mmm....."+light turn off
	Can you dance		01 "No problem" + random play one dance music + some dance actions.
	Music		01 "Ok,music" + random play one music
	Good-bye		01 "See you" + backward
	Soliloquy		Nobody01 Robot sounds+forward + turn right Nobody02 Robot sounds+backward + turn left Nobody03 Robot sounds+walk in circle Play one recording
	Sleep		Backward + sleep sounds
	Wake up		Forward + wake up sounds

3

About Battery Installation

Correct way to install the batteries

Use screw driver to open battery cover and take out battery jar

Product use 3*1.5v "AAA"battery (not include)

Attentions:

1. This is a phonetic recognition robot, it might make mistake if in noise environment.
 2. When in touch sense, please do not touch it twice or three times at the same time to avoid error action. If the robot speak 'didi' for a long time, just touch any touch sense to exit.
 3. Power full battery is recommended, which can help you have a more good operating experience.
 4. After sending one command, please do not send another command until it finish the first command. If you need to change to another command, please press the taking recording button to exit.
 5. When power low, the robot may do some action or play music automatically; please change the battery in time.
- Warning! Not suitable for children under 36 months. Choking hazard. We recommend that you retain this packing for future reference.

Warning! Nicht für Kinder unter 36 Monaten geeignet. Verschluckungsgefahr. Sie sollten diese Packung zum späteren Nachschlagen aufbewahren.

Waarschuwing! Niet geschikt voor kinderen jonger dan 36 maanden. Verstikkingsgevaar. Het wordt aanbevolen deze verpakking te bewaren voor raadpleging in de toekomst.

Attention ! Ne convient pas aux enfants de moins de 36 mois. Risque d'étouffement. Nous vous recommandons de garder cet emballage afin de vous y référer à l'avenir.
- Avvertenza! Non adatto ai bambini di età inferiore a 36 mesi. Pericolo di soffocamento. Si consiglia di conservare questo imballaggio per una consultazione successiva.

¡Advertencia! No adecuado para niños de menos de 36 meses. Peligro de asfixia. Le recomendamos guardar este embalaje para consultas futuras.

Advertência! Não adequado para crianças com menos de 36 meses. Perigo de asfixia. Recomendamos que guarde esta embalagem para referência futura.

Product maintaining: product with electronic components please keep away from water and play in dry environment. Use dry cloth wipe dirty from outside of robot. If there is something difference between product and package, please in kind prevail.

Thank you very much for choosing our products. Your product has been sent with care, we hope you are satisfied with our products and service.

4