

Fosmon


Mechanical 2-Outlet Outdoor Timer User Manual

Thank you for purchasing this Fosmon product. For optimum performance and safety, please read this user manual carefully before operating and keep it for future reference.

Disclaimer Statement

We are not liable for any damage or destruction to personal properties that are contained inside or outside of the Fosmon product.

Product Diagram

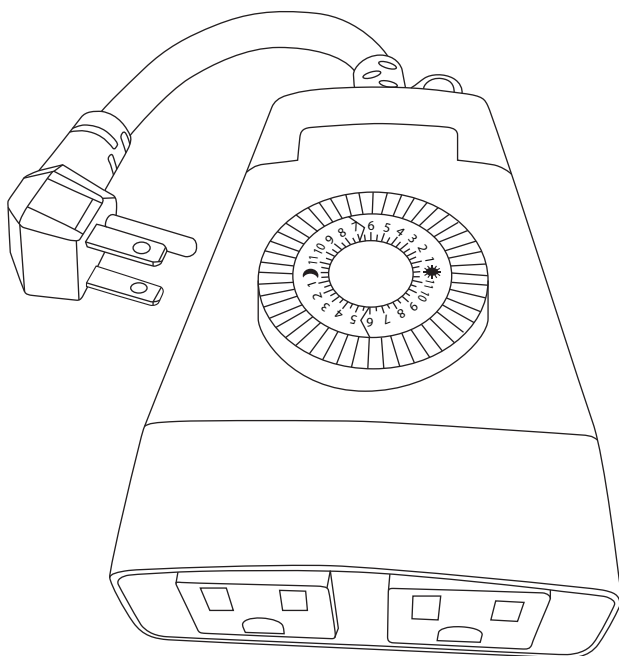

Specifications

- 110-125V AC outlet
- 15A MAX
- 125VAC 60Hz, 15A, Resistive
- 125VAC 60Hz, 15A, General purpose
- 125VAC 60Hz, 10A/1250W, Tungsten
- 125VAC 60Hz, TV-5, 3/4HP
- ETL Listed
- 3-prong female outlet x 2
- 24-hour, 30-minute interval programming
- Weather resistant lid
- Built-in 7-inch 3-prong cord

Package Includes

- 1x Two Outlet Timer
- 1x User Manual

Instructions

1. To Program

- There are 48 push buttons around the dial. Each is for a period of 30 minutes.
- When a push button is pressed down, the appliance connected to the timer will be on during that period of time.
- When a push button is lifted up, the appliance plugged into the timer will be off during that period of time.

2. Set Time of Day

- Turn dial clockwise one full revolution then advance until arrow points to the current time.
- The dark area denotes PM and the white area denotes AM.

3. To Activate/Deactivate The Timer

- Turn the dial following the arrow's direction till the mark pointing to the current time.
- Press down the pins according to the working duration of home appliances as expected. In contrast, lift up the pins, the home appliance will be off during that period of time (total 48 pins setting dial/30 minutes interval, adjustable for 24hr).
- Plug the timer into wall outlet and then plug home appliance into the timer.
- Turn on home appliance and start to work as expected timer settings.

Follow Us On Social Media



www.fosmon.com

support@fosmon.com

© 2018 Fosmon Technology. All rights reserved.

Limited Lifetime Warranty

This Fosmon product includes a limited lifetime warranty. Please visit our Fosmon website for more details.

Recycling the Product

To dispose this product properly, please follow the recycling process regulated in your area.

FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



DO NOT RETURN THE PRODUCT

There are good days and there are bad days. It is our BAD if the product is not working, or if you are not happy with it. PLEASE GIVE US A CHANCE and WE WILL MAKE IT RIGHT.

1-833-3-Fosmon (833-336-7666)
(612) 435-7508
support@fosmon.com