尺寸: 折叠100*60mm 双面两色印刷

注意: 成品不能有字体模糊

User Manual Please read this manual carefully before use.

Matters needing attention

- . Children are not allowed to play alone on the machine
- otherwise it may cause the loss of machine data or damage to the appearance of the product 3. To avoid damage to your hearing, please adjust the
- volume to an appropriate level when using Do not use chemical agents or cleaning agents to wipe the machine, which will damage the surface of the machine and corrode the appearance of the main
- 5. In order to ensure your driving safety, it is recommended that you do not use MP3 when driving
- motor vehicles or non-motor vehicles: 6. In order to avoid unnecessary trouble, please back up
- important files stored in this machine in advance; It is forbidden to use overloaded power supply so as not to cause heat and cause short circuit to burn out
- 8. When your hands are wet, it is forbidden to unplug the power supply with wet hands to prevent electric shock). If the actual settings and usage methods are inconsistent with this manual due to program upgrade
- Tips: If the machine is not used for a long time. please charge and discharge the product at an interval of 2 months to ensure the service life of the battery.

please contact your local dealer.

Product Appearance - Marking Diagram

Music playback Function: Support MP3, WMA, WAV. 000000 APE_FLAC_AAC-LC_M4A_OGG and other music Do not drop the machine or rub it against hard objects.

- Bluetooth Playback: Support MP3, WMA, WAV, APE. FLAC, AAC-LC, M4A, OGG and other formats; Recording Function: Support FM and MIC recording;
 - Supports MP3 and WAV formats; Photo browsing: JPG, BMP, and GIF formats are

Product Introduction

- Video Playback: Support AMV AVI format (need to convert to 320*240 resolution format through
- E-book function: supports TXT format:
- Other functions: support radio listening, folder, alarm clock and other functions:
- Support Micro SD external storage (expandable to

) Basic key operation

- Last/Next button: In the interface of playing music, short press this two button Idd Ibb to switch to the last song or the next song; Long press to achieve fast forward and fast rewind. In the main interface of MP3, short press Press these two buttons to move the selection left and right.
- Power switch: Long press to turn on and off the machine; short press to lock the screen.

Return: In any menu application, just press this button \(\tau \) to return to the previous menu.

- Volume up and down: In any interface, short press to enter volume adjustment.
 - Up/down selection key: Under the main interface or sub-menu, short press +/- to browse up/down or add or subtract value adjustment (Note: In the play or pause interface of music, recording and video, short press the up/down selection key + / - can also increase or decrease the volume level operation
 - OK key: In the play interface, short press this button to pause and play; in the setting interface, short press
 - Menu key: Short press the menu key in the playback interface to enter the submenu option setting. A-B Reneat function (In the playback state) In the music sub-menu interface, select the repeat mode

When entering, the A character in the middle of the

key to switch to the B character flashing. At the

moment when AB flashes and switches, it indicates

bottom of the LCD screen flashes, and the B character

does not flash. At this time, short press ▶► Next

that the start time of repeat reading is selected. At this

time, short press the Next button again, indicating that

Repeat the interval between the start time and the end

time. (Note: the machine will return to point A flashing

to exit the replay mode, press the play/pause button to

again after the set number of replay times. If you want

the ending time of repeat reading has been selecte

Fast forward/rewind: long press ◄ ▶ the button during playback to achieve fast forward/rewind

Play/Pause: Short press the OK button during

(□) Operation description Each function

Main interface: select each menu application, press

songs, press up/down key to select songs, press Oh

key to play (Note: In all songs list interface, short

Volume adjustment: Under any interface short

press the volume up and down keys to enter the

olume adjustment; (Note: The volume adjustment

operations for recording, video, radio, and Bluetooth

press I◄◀ ▶▶I button to turn the page.)

playback are the same.)

playback to realize pause/play

- Track switching: short press |◄◄ ▶▶| the button during playback to switch the previous/next track:
- Music setting: When music is playing or paused, hort press the menu key to enter the playback setting interface, and operate the playback node/replay setting/sound setting, etc., short press the un/down selection key +/- to select the setting function, short press OK key to confirm and save the settings:
- on any interface key to return to the previous menu step by step. Recording · Select the Recording menu short press
- the OK button to enter, short press Start Voice

Return: In each menu application, short press

Recording to enter the recording. During the recording process, short press Return key to prompt Save the recording? Select "Yes' to save the current

- Recording Playback: After the recording file is Music: Select music menu, press OK key to enter al saved successfully, enter the recording library, short
 - Recording settings: Enter the Recording menu interface, you can operate and set the recording format/recording bit rate and other functions, shor press the up/down selection key +/- to select short press the OK key to confirm the save (Note: Under the recording library file list interface, the
 - Video: select the video menu, short press the OK key to enter the video file list interface; short press the up/down selection key +/- to select the video short press the OK key to play (Note: in the video file When the picture is playing, you can short press the
 - Video settings: In the video playback interface, short press the menu key to enter the video sub-menu setting interface, you can choose the brightness and playback mode etc., short press the up/down selection key +/- to select, short press the OK key to confirm the save;

- Radio · Select the Radio menu, short press the OK
- button to enter the first-level sub-menu interface. select manual tuning or automatic tuning, and short press the up/down selection button +/- to select he recording file, short press the OK button to play;
- function of short press ◄ ▶ is to turning pages
- turning pages).
- Play/Pause: Short press the OK button during playback to pause/play;
- Fast forward/rewind: long press the I◀ ▶▶I button during playback to achieve fast forward/rewind;

- Video switching : Short press ◄ ▶ key during playback to switch the previous/next video
- nress the ok button to enter (Note: Refore searching for a radio station, the earphone must be inserted first so as to increase the antenna signal). Submenu setting: In the radio operation interface short press the menu key to enter the radio
 - secondary ubmenu setting interface, short press the up/down selection key +/ - to select, and short press the OK key to confirm the save. Picture: Select the Picture menu, short press the OK
 - button to enter, under the picture file list interface. short press the up/down selection button +/- to select a picture, and short press the OK button to
 - OK button to realize the automatic play and pause When the picture is playing, you can short press the up/dowr selection key + / - and short
 - Picture setting: When the picture is playing, short press the menu button to enter the sub-menu setting interface: you can choose brightness, slide show settings and other operations, short press the p/down selection button +/- to select, shor press the OK button confirm the save: (Note: In the picture file list interface, short press the |◀◀ ▶▶| key to turn the page).

- 6. E-book: 6.Select the E-book menu, short press the OK button to enter the e-book file list interface: Short press the up/down selection button + / - to select an E-book, and short press the OK button to play;When the e-book is playing, you can short press the OK button to realize automatic play and pause functions
- Page up/down: In playback state, short press the up/down selection button + / - to turn one page up

Note: In playback state, for e-book files with more than 10 pages, short press I◀ ▶► key, then it will jump to 10 pages directly:

- E-book settings: In the e-book reading interface. short press the menu button to enter the sub-menu setting interface, you can choose the setting function such as electronic bookmarks/delete bookmarks. short press the up/down selection button +/- to select, short press OK key to confirm the save (Note: In the e-book secondary sub-menu list interface, the function of short press | key is turning pages)
- Folder: Select the Folder menu, short press the OK button to enter the file list interface: Short press the up/down selection button to select a sub folder or a single file, and short press the OK button to enter (Note: In the file list interface, the function of short press I◀◀ ▶▶ key is turning pages).
- Settings: Select the Setting menu, short press the OK button to enter the setting interface: Tools/pedometer/language selection/display settings/shutdown settings/external sound switch/button light mode/date and time/information/formatting device/ Factory setting, etc;

- .1 Tools: Select tools menu, there are calendar, stopwatch, alarm clock function, short press up/dowr selection key + / - to select, short press OK button
- key to enter, press up/down key to select the required language, press OK key to confirm saving Settings.
- key to enter, press up/down key to select the required language, press OK key to confirm saving Settings. 4 Shutdown setting : select 'timed shutdown' or 'power

External sound switch: Select 'External sound switch' and short press the OK button to enter, you ca set the function of turning on and off the external

Button light mode: select 'button light mode', short press the OK key to enter, you can choose 'always on', 'on' and 'off'.

Date and time: select 'date and time', short press Of

Power switch (6) Next

(11) TF card slot

(-) Down selection key (3) USB jack

9 Volume up 14 Speaker hole

- saving shutdown' and short press the OK key to enter, you can set the required time as the shutdown time.
- The time for timer shutdown is 1-99 minutes optional, short press the ' + " - ' button on the front to adjust the required time, after setting, short press the OK button to save;

Note: The timed shutdown is the startup is in any state after the time is up -the system will perform a forced

- The power-saving shutdown time can be selected from 0 to 99 minutes. Short press the '+' and 'buttons on the front to adjust the required time. After setting, short press the OK button to save: Power-saving shutdown instructions: When the machine is in standby without any operation, after the set time is up, the system will automatically shut down

- key to enter, short press up/down selection key + / -Language setting : Select language menu, press OK to select time setting and date setting, short press Ok key to enter; Short press the up/down selection key +/- to adjust the value, short press the ► Display Settings: Select language menu, press OK key to switch the selection, after setting the required time and date, short press the OK key to confirm the
 - Information: Select 'Information', short press OK to
 - enter, you can view player information and disk space Format device : Select 'Format device' short press OK key to enter, the interface prompts 'All data will be deleted: do you want to continue? '. select "Yes', the machine will execute to clear all data in the machine isk (Note: Please make a backup of the file in advance, please operate this function with caution).
 - 10 Factory settings: select 'factory settings', short press the OK button, the interface will prompt 'restore to factory settings? . select 'Yes', the machine will be restored to the original factory settings. Bluetooth function: select the Bluetooth menu, shor
 - press the OK button to enter the Bluetooth menu interface, there will be three options: Bluetooth switch control, search device, device list; select search device conduct Bluetooth search, after the search is completed, the machine will list the searched Bluetooth levices, please manually select the name of the device to be connected, and make a matching connection: after the connection is successful, the small Bluetoot

icon will turn green, indicating that the connection is uccessful. At this time, press the return key to exit th Bluetooth background and enter the music application Just select the file you want to play;

Transmission of data

- Note: After the device fails to search, the interface will automatically jump to the Bluetooth menu interface after splaying 'no device', short press the up/down selection Special attention: The specification of selected key +/- to select the operation, and short press the OK
- Bluetooth can also achieve video, recording and radio playback (Note: When searching for connected devices. the audio device needs to be turned on in advance)

computer Music and other related data that need to be nsferred, and then switch to the MP3 player's capacity disk to paste, and then the data transfer can be realized

Connect MP3 to computer via LISB cable and conv in

Note: This machine has OTG function, only mobile phones with OTG download function can be connected to he product for operation Format the player: connect the MP3 player to the

'Computer' and a removable disk will appear.

computer with a data cable, open 'My Computer' or

right-click the removable disk, click Format, Start. Oh

and wait for the format to complete Formating is to clear all files in the machine, and it can repair the disk Note: Please make a backup of the file in advance, please operate this function with caution.

(四) Charging steps

- Use USB data cable: used for data transmission, car also be used to connect a charger for charging;
- MP3 Player can be charged with computer and
- charger must meet the following requirements, otherwise any external or fault occurs, we will regard it as man-made damage. Input: AC110-240V 50/60Hz Max: 100mA
- Output: DC5V 500mA-1A

Technical parameter Product Name MP3 Player

Dattery Capacity	450mAh
Dimensions	106*49.5*9.7mm (The specific size shall prevail in kind)
Display screen	TFT-2.4 Inch; Resolution: 240*320
Net Weight	86g
Bluetooth information	Version 5.0
Headphone jack	Standard 3.5 jack
Audio Format	MP3、WMA、WAV、APE、FLAC、AAC-LC、 M4A、OGG
Video Format	AMV/AVI
Image Format	JPG、BMP、GIF
E-Book Format	тхт
Language support	Chinese, English and other 29 languages
Operating temperature	0-40 Degree

(五) Frequently Asked Question

When in use, if the machine encounters anomalies caused by illegal operations, such as crash, black scree tc., you can short press the reset button to restart the machine to return to normal (Note: the reset button is set n the ear hole, you can use Slender and hard things go FM radio can't find stations

n and short press to reset) Connect to the computer

nsert one end of the USB cable into MP3 player, and the other end into the USB port of the computer. After connecting to the computer, the MP3 player will utomatically turn on; For the first connection, the computer will prompt to create driver information and fine new hardware information until it is recognized in "My Computer". A new disk indicates that the connection is successful; after the file transfer is completed, please click the removable disk in the lower right corner of the computer desktop to eject it safely, and finally unplug the

MP3 Player does not turn on

- ♦ Please check whether the machine is completely out ◆ Check the power of the machine again after
- connecting the power adapter ♦ If it still cannot be turned on after charging, please contact our customer service:
- Severe noise
- Please check whether the music file is damaged; you can try other normal music files to judge: If the file is damaged, there may be serious noise and other abnormalities during playback:

No sound can be heard in the headset

◆ Please check whether the volume is set to 0: ♦ Please check the quality of the headset and connection problems:

- Please confirm whether the external device is turned
- ♦ Please check whether the pairing is successful between the external device and the MP3 Bluetooth

- Note: What language is set in the MP3 system, then the content of the e-book must correspond to the national language to be displayed normally.

Product warranty card

Please check whether the earphones are inserted to

Note: It is normal that the radio station cannot be found

Can't connect to bluetooth

◆ Please confirm whether the file is damaged, the

- Product Model:
- Dealer Name: Date of Purchase: Dealer stamp: If it is a replacement service, it must be marked in

the "replacement/repair record"; the warranty card must be presented at the same time as the official purchase invoice, and it is valid with the seal of the dealer; please fill in the contents of the warranty card carefully and in detail, if any Altered, this card