



OPERATING INSTRUCTIONS

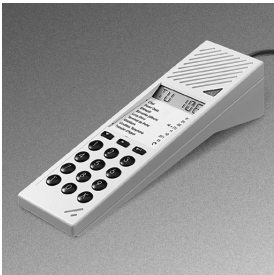

**Master
Station
Series 200
Series 400
Series 411**

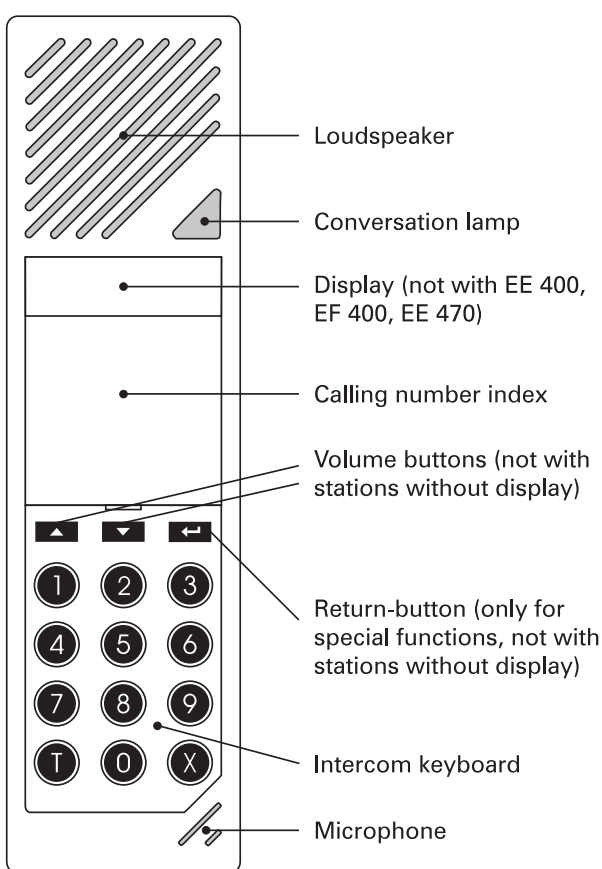

Important Precautions

Please keep this description in safe custody!

■ RANGE OF APPLICATION:

- As stations for the intercom centrals GE 100 (only series 400 and 411), GE 200 and GE 700.

■ ATTENTION:

- Never push objects of any kind into the station through loudspeaker or microphone slots.
- Mind that no liquid may enter the housing.
- The station may be opened only by authorised service engineers.
- Avoid dropping the station.
- Do not expose the station to extreme temperature (under -10°C or above $+60^{\circ}\text{C}$) or to direct insolation.
- The stations EE 411 and EE 211 contain a mercury switch, therefore correct disposal procedures have to be followed.

■ CLEANING:

- For cleaning a soft, lintfree cloth is recommended. Stubborn stains may be removed with a cloth lightly dampened with a mild detergent solvent.
- Never use strong solvents, abrasive cleaners or compressed air for cleaning.

■ CONNECTION:

- Plug the station only to predefined sockets, never to telephone- or computer sockets.
- Use only the enclosed connector cable.
- Never plug other equipment to the intercom station sockets.

Make A Call

- Dial the desired calling number - *Talk after the Dial Tone*
- Cancel the call: ⓧ

Handset Function

For private conversations (only EE 411, EE 420, EE 211, EE 220):

- Hold the loudspeaker grill to the ear

Control Of Speech Direction

Calls to noisy rooms may require manual control of the speech direction ("Simplex")

- Talk: keep Ⓢ pressed
- Listen: release Ⓢ

Called Number Busy

- Wait for automatic re-call (Busy Tone can be switched off with Ⓢ, or
- Intrude with Ⓢ (keep button pressed while talking)

Send Re-call Request *

Called subscriber is busy, in privacy mode or does not answer

- Send re-call request: Ⓢ - *Call is cancelled automatically*
- Delete re-call request: call subscriber once again, Ⓢ - *Call is cancelled automatically*

Receive Re-call Request *

The number of the station that has called is indicated blinking in the display, the Conversation Lamp blinks

- Answer re-call request: ⏪ or dial the calling number (stations without function keys can also answer with ⓈⓈ) - *Call is set up, re-call request is cancelled automatically*
- Cancel re-call request without answer: press ⓧ for at least one second

Minute Tone

- Single Minute Tone: a call is running
- Double Minute Tone: a call is holding for you or your conversation partner
- Triple Minute Tone: the conversation time expires in a few seconds, but you can extend it with ⓈⓈ

Inquiry *

- Ⓢ - *Tone Signal is heard*
- Dial the desired number - *Talk after the Dial Tone*
- ⓧ: another number can be dialled, or
- ⓧ once more: back to previous conversation partner

Transfer *

- Ⓢ - *Tone Signal is heard*
- Dial the desired number - *Talk after the Dial Tone*
- Connect your conversation partner with your previous conversation partner: Ⓢ

Microphone Cut-off

During a running call:

- With ⑦ the call can be disconnected temporarily
- *the waiting subscriber receives a Tone Signal (Privacy Tone) and the Conversation Lamp blinks*
- Reconnect the call with ⑦

All Call / Group Call with Answer

- Initiate All Call with ②② (Group Calls with ②①② to ②①③, depending on the programming) - *Talk after Gong Signal, as soon as Conversation Lamp lights*
- Terminate announcement:
 - ⑦ wait for answer, or
 - ⓧ cancel call without answer
- Answer All Call/Group Call with ⑦⑦

Secretary Transfer

- Activate with ②③ and the calling number of your secretary station - *Acknowledgement Tone* (EE 411/EE 211 can be turned to the side for activation)
- Deactivate with ②③② - *Continuous Tone* (or turn back station)

Door Opener

During running call with the Door Station:

- Open the door with ①

Follow Me

Only EE 411, EE 211

- Own station: turn to the side to activate
- Target station: ②③ and your own calling number
- *Acknowledgement Tone*
- Deactivate: turn back your own station

Conference *

During a running call:

- Invite further participants:
 - ③ - *Tone Signal is heard*
 - Dial the desired number - *Talk after the Dial Tone*Repeat for each participant
- Start the conference: ③⑦
- Participant who wants to talk: ⑦
- Terminate the conference: ⓧ

Privacy

- Activate: ②③① - *Acknowledgement Tone* (EE 411/ EE 211 can be turned to the side for activation)
- Answer call: any button (or turn back station)
- Deactivate: ②③② - *Continuous Tone* (or turn back station)

Reconnect Last Call

- ②⑦ - *Talk after the Dial Tone*

 
Background Music

- Switch on: ④⑦① (up to ④⑦③ with several music programs)
- Switch off: ④⑦②


Display-Information

Not with EE 400, EF 400, EE 470.

Different functions depending on central type and programming, but in general:

- Idle Mode: If no call is running the own calling number is displayed, e.g.: 
- Conversation: During a conversation the calling number/name of the conversation partner is displayed, e.g.: 
- Waiting subscriber: A busy subscriber called by another station gets the following indication:
 - Double Minute Tone
 - The calling number of the waiting station is blinking in the display
 - Afterwards the conversation partner is indicated again
- Privacy Function: Activated Privacy is indicated in the display, e.g.: 
- During an activated Call Transfer (e.g. Secretary Transfer) the target of the transfer is indicated, e.g.: 
- Display Texts can be freely programmed, e.g.: 

Tone Signals

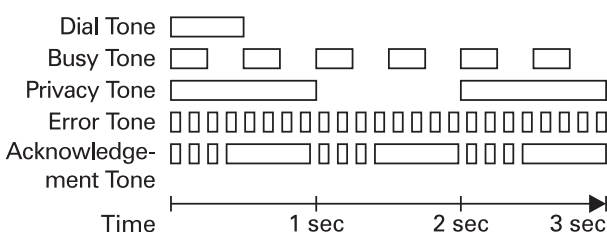

Volume

During a conversation the volume can be adjusted with ▼ and ▲



File: B_400DE.CHP

Version: 1.4/1100

Type: D-BA-400DE



This equipment fulfils the requirements of the EU-standard 89/336/EEG (Electromagnetic Interferences, EN 55022/50082-1).

Therefore this station is CE-labelled.

The features depend on the type of subscriber card, the software version and the programming.

* For central GE 100 available from software Pro 03