

WUBEN E01 EDC Keychain Flashlight User Manual

Home » WUBEN » WUBEN E01 EDC Keychain Flashlight User Manual

Contents

- 1 WUBEN E01 EDC Keychain
- **Flashlight**
- 2 Product operation
- 3 Parameters
- 4 Maintenance
- 5 FAQs
- **6 Warranty Conditions**
- 7 Documents / Resources
 - 7.1 References
- **8 Related Posts**



WUBEN E01 EDC Keychain Flashlight



Dear customer,

 
Thank you for purchasing our product. Please read the following instructions carefully before first use and keep this user manual for future reference. Pay particular attention to the safety instructions. If you have any questions or comments about the device, please contact the customer line.

Warnings

- 1. Please read user manual carefully before using the light.
- 2. Product will generate heat while working, please be cautious with that to avoid any possible harm.
- 3. Please don't shine into eyes directly to avoid harm to eyes.
- 4. Please keep the light away from children.
- 5. Please use WUBEN or WUBEN recommended batteries.
- 6. Please don't disassemble the light or it will not be covered by WUBEN warranty policy.
- 7. Please don't throw the product into fire.
- 8. This is not a diving product, please don't use it underwater for a long time.

Package list

Before using this product, please check whether the contents of the package are complete.







E01 x 1

AAA Battery x 1

Key chain x 1






Spare O-ring x 2

Manual, warranty card, quality certificate x 1

Product operation

1. About product

WUBEN E01 is a tiny portable EDC flashlight. E01 utilizes 1 × CREE XP-G3 LED, powered by 1 pcs AAA battery, emits 100 lumens max output.

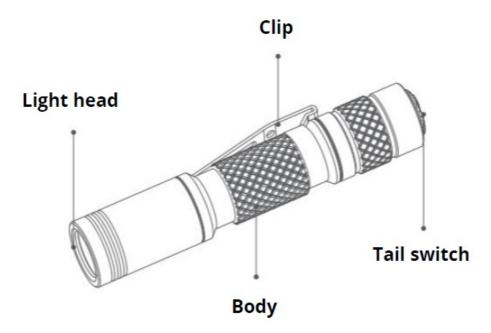

2. Installation

Please remove the insulation plate before using.



3. Operation

ON/OFF: Click on the tail switch to turn on the flashlight, click again to turn off the flashlight.

Output selections: When the light is on, tap on the tail switch to cycle through Low-Med-High.

SOS: When the light is on, double tap on the tail switch to activate SOS, tap again to exit.

4. Battery status indication

When the battery is low power, the flashlight will dim automatically until battery totally runs out.

Parameters

FL1 Standard	High	Med	Low	sos
THE	100 LM	20 LM	1 LM	20 LM
(S)	2.5 h	5 h	100 h	/
	40 m	N.	1.5	5 m
	395 cd	m -	IP68 (2 m unde	erwater for 1 h)
$\Delta I \Delta$	18 g/0.63 oz (without battery) 29 g /1.02 oz (with battery)			
	82.5mm × 15mm 3.25in × 0.59in (L × D)			

WARNING: All data from experiments of WUBEN lab according to the ANSI/NEMA FL1 standard, may vary because of different experiment equipment, experiment environment or other factors. Experiments are based on AAA alkaline battery (1200 mAh).

Maintenance

- The O-Ring may be damaged for a long-time use, please replace the O-Ring in time to ensure the waterproofness of the product.
- Please use WUBEN battery or WUBEN recommended batteries.
- When the flashlight indicates low power, please charge, or replace the battery in time to avoid affecting the durability of the battery.
- Please use alcohol and rag to clean the conductive parts of the flashlight in time.
- When not in use for a long time, please remove the battery to prevent the battery from leaking or exploding, store the flashlight in a dry and ventilated place.

FAQs

Problems	Causes	Solutions
	check if the switch is turned on correctly	turn on the switch
	check if it is assembled in place	tighten the assembly parts
Abnormal flash or failure to turn on	check if the battery is no power	try the battery on other products
	check if the battery is reversed	remove the battery and reassemble it correctly
	check if the conductive position is dirty	clean the surface with alcohol
Abnormal noise	check if foreign matter falls in the tube	pour out possible foreign matter
	part damage	contact your seller

If your problems still not solved yet, please contact WUBEN Headquarter for after-sales service.

Warranty Conditions

A new product purchased in the Alza.cz sales network is guaranteed for 2 years. If you need repair or other services during the warranty period, contact the product seller directly, you must provide the original proof of purchase with the date of purchase.

The following are considered to be a conflict with the warranty conditions, for which the claimed claim may not be recognized:

- Using the product for any purpose other than that for which the product is intended or failing to follow the instructions for maintenance, operation, and service of the product.
- Damage to the product by a natural disaster, the intervention of an unauthorized person or mechanically through the fault of the buyer (e.g., during transport, cleaning by inappropriate means, etc.).
- Natural wear and aging of consumables or components during use (such as batteries, etc.).
- Exposure to adverse external influences, such as sunlight and other radiation or electromagnetic fields, fluid
 intrusion, object intrusion, mains overvoltage, electrostatic discharge voltage (including lightning), faulty supply
 or input voltage and inappropriate polarity of this voltage, chemical processes such as used power supplies,
 etc.
- If anyone has made modifications, modifications, alterations to the design or adaptation to change or extend the functions of the product compared to the purchased design or use of non-original components.

Documents / Resources



WUBEN E01 EDC Keychain Flashlight [pdf] User Manual E01, EDC Keychain Flashlight, Keychain Flashlight, EDC Flashlight, Flashlight

References

- <u>Raza.sk rýchly a pohodlný nákup odkiaľkoľvek | alza.sk</u>
- 🍇 alza.at
- **alza.co.uk**
- <u>alza.de</u>
- 🍇 alza.hu
- <u>alza.sk</u>

Manuals+,