



# XAVAX 095304 Kitchen Timer Countdown Instruction Manual

[Home](#) » [xavax](#) » XAVAX 095304 Kitchen Timer Countdown Instruction Manual 




## 095304 Kitchen Timer Countdown Instruction Manual

### Contents

- [1 095304 Kitchen Timer Countdown](#)
- [2 Packaging Contents](#)
- [3 Controls and Displays](#)
- [4 Safety Notes](#)
- [5 Getting Started](#)
- [6 Warranty Disclaimer](#)
- [7 Technical Data](#)
- [8 Recycling Information](#)
- [9 Documents / Resources](#)
  - [9.1 References](#)
- [10 Related Posts](#)

## 095304 Kitchen Timer Countdown

### Kitchen Timer “Countdown”

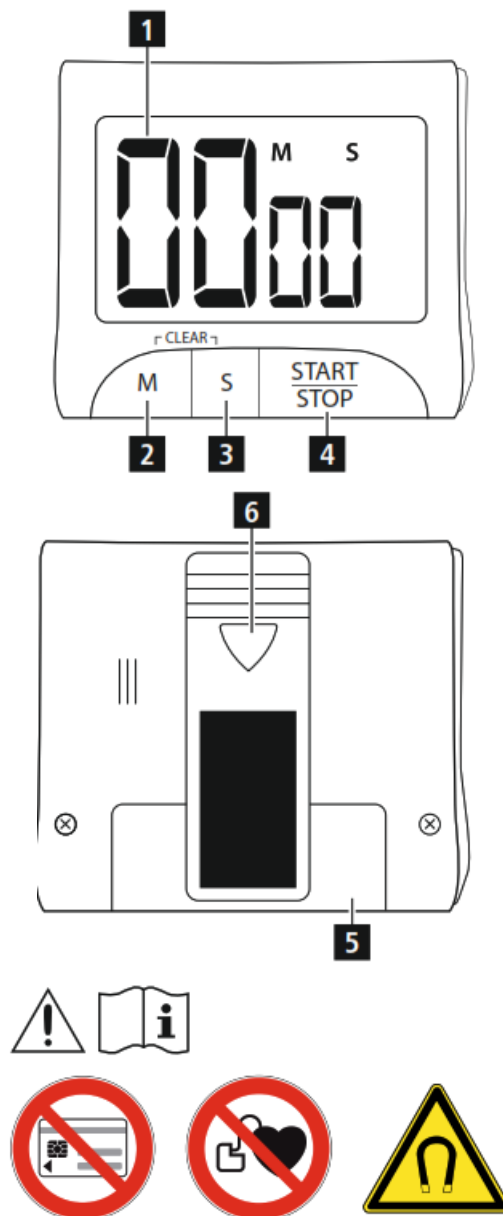

## Packaging Contents

- Kitchen timer
- 1 AAA batteries
- These operating instructions

## Controls and Displays

1. Time
2. Minutes button
3. Seconds button
4. Start/Stop button
5. Battery compartment
6. Hanging hook

## Safety Notes

- Protect the product from dirt, moisture and overheating, and only use it in a dry environment.
- Do not drop the product and do not expose it to any major shocks.
- Do not attempt to service or repair the product yourself. Leave any and all service work to qualified experts.
- Do not open the device or continue to operate it if it becomes damaged.
- The product is intended for private, non-commercial use only.
- Use the product for its intended purpose only.
- Do not use the product in the immediate vicinity of heaters or other heat sources or in direct sunlight.
- Do not use the product in areas where the use of electronic devices is not permitted.
- Do not modify the product in any way. Doing so voids the warranty.
- Keep the packaging material out of the reach of children due to the risk of suffocation.
- Dispose of packaging material immediately according to locally applicable regulations.
- Do not operate the product outside the power limits given in the specifications.
- Keep this product, as all electrical products, out of the reach of children!
- Use the item only in moderate climatic conditions.



### **Warning – Batteries**

- When inserting batteries, note the correct polarity (+ and – markings) and insert the batteries accordingly. Failure to do so could result in the batteries leaking or exploding.
- Only use batteries (or rechargeable batteries) that match the specified type.
- Before you insert the batteries, clean the battery contacts and the polar contacts.
- Do not allow children to change batteries without supervision.
- Do not mix old and new batteries or batteries of a different type or make.
- Remove the batteries from products that are not being used for an extended period (unless these are being kept ready for an emergency).
- Do not short-circuit batteries.
- Do not charge batteries.
- Do not throw batteries in a fire.
- Keep batteries out of the reach of children.
- Never open, damage or swallow batteries or allow them to enter the environment. They can contain toxic, environmentally harmful heavy metals.
- Immediately remove and dispose of dead batteries from the product.
- Avoid storing, charging or using the device in extreme temperatures and extremely low atmospheric pressure (for example, at high altitudes).



### **Warning – magnet**

- Keep bank cards or similar cards with magnetic strips away from the magnets.  
The data on the cards' magnetic strip could be damaged or completely deleted.
- People with pacemakers should keep away from the magnets. The magnets can negatively affect the function of the pacemaker.

## **Getting Started**

#### 4.1 Timer function (counting down from a specific time to 0)

Set desired time by pressing the minutes and seconds button (programmable for max. 99 minutes and 59 seconds) and start countdown by pressing the Start/Stop button

#### 4.2 Counter function (counting up from 0 to a specific time)

By pressing the Start/Stop button the timer begins to count-down/up. To stop timer, press the Start/Stop button.

#### 4.3 Reset time

Pressing the Minutes button and Seconds button at the same time will reset the time to zero.

### Warranty Disclaimer

Hama GmbH & Co KG assumes no liability and provides no warranty for damage resulting from improper installation/mounting, improper use of the product or from failure to observe the operating instructions and/or safety notes.

### Technical Data

Power supply: 1 x AAA / Micro (1 x 1.5 V)

### Recycling Information

**Note** on environmental protection:



After the implementation of the European Directive 2012/19/EU and 2006/66/EU in the national legal system, the following applies: Electric and electronic devices as well as batteries must not be disposed of with household waste. Consumers are obliged by law to return electrical and electronic devices as well as batteries at the end of their service lives to the public collecting points set up for this purpose or point of sale. Details to this are defined by the national law of the respective country. This symbol on the product, the instruction manual or the package indicates that a product is subject to these regulations. By recycling, reusing the materials or other forms of utilising old devices/Batteries, you are making an important contribution to protecting our environment.



Service & Support



[www.xavax.eu](http://www.xavax.eu)



+49 9091 502-0

Distributed by Hama GmbH & Co KG  
86652 Monheim / Germany



**All listed brands are trademarks of the corresponding companies. Errors and omissions excepted, and subject to technical changes. Our general terms of delivery and payment are applied.**

00095304/00111319/06.22

### Documents / Resources



[XAVAX 095304 Kitchen Timer Countdown](#) [pdf] Instruction Manual  
095304 Kitchen Timer Countdown, 095304, Kitchen Timer Countdown, Timer Countdown, Countdown

## References

- [X Xavax - Die Starke Marke im Haushalt](#)