 




XGODY X1 4K Support Projector with 5G WiFi and Bluetooth User Manual

[Home](#) » [XGODY](#) » XGODY X1 4K Support Projector with 5G WiFi and Bluetooth User Manual 

XGODY X1 4K Support Projector with 5G WiFi and Bluetooth

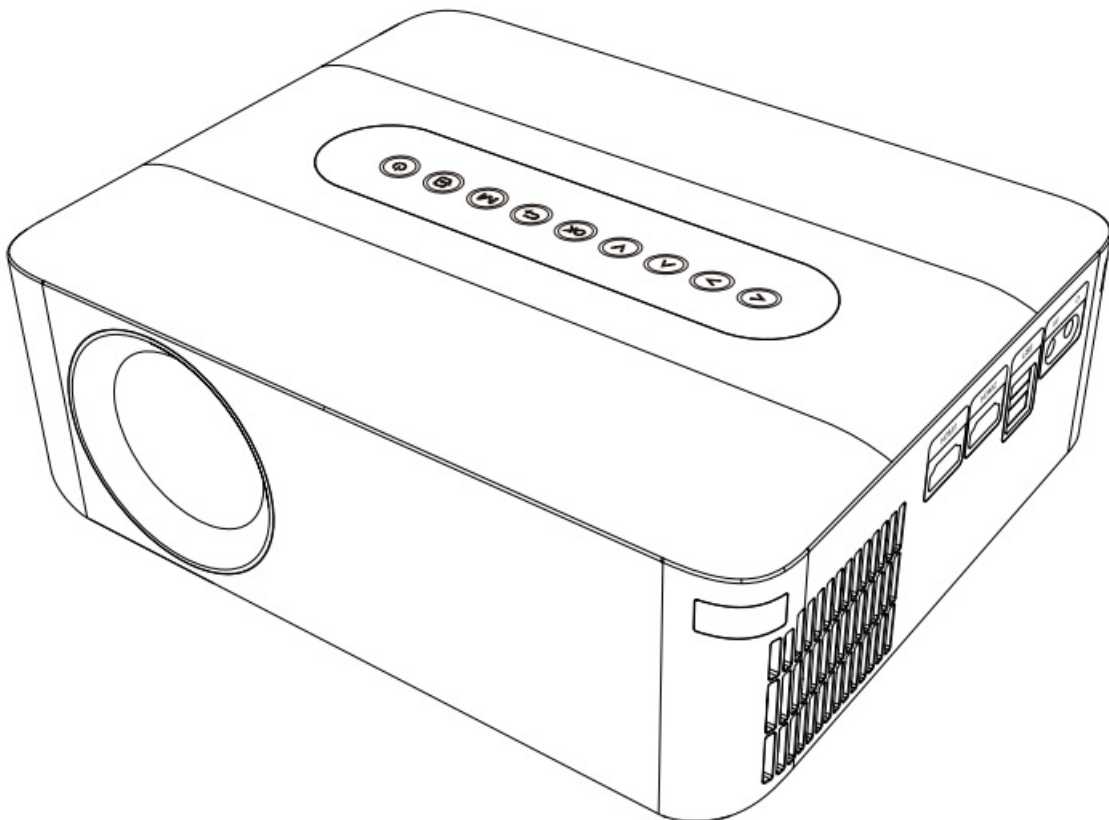

Contents

- 1 Important Safety Notes
- 2 Projector Accessories
- 3 Remote Control Button Function
- 4 Power-On/Off Operation
- 5 Projection Distance Reference & Screen Adjustment
- 6 Connection settings
- 7 HDMI & Bluetooth Connection
- 8 Screen Cast for Android Phone (support Android 5.3 and above)
- 9 Wireless Screen Mirroring for iPhone
- 10 Connection Settings
- 11 Filter Cleaning
- 12 Projector Common Troubleshooting
- 13 Warranty Card
- 14 Documents / Resources

Important Safety Notes

For the best viewing effect, please use the projector in dar1< room.

1. Do not install this projector in the area which directly blown by the air conditioner, to prevent projector failed caused by water vapor condensation or excessive temperature.
2. Ensure that the environment is ventilated to prevent overheat caused by heats build-up.
3. Prevent foreign objects from falling into the machine. Never insert any metal objects into the machine. If foreign objects fall into the machine accidentally, please power off immediately and seek professional assistance.
4. Do not place any liquid on the machine to avoid leakage.
5. Avoid violent vibrations when transporting. Please protect the lens from wear.
6. Do not touch the vents when using the projector to avoid burns due to excessive temperature.
7. Do not look directly at the lens while the projector is running to prevent eye injury.
8. Please clean the filter regularly to prevent malfunction caused by clogging.



Notice

Do not open the case of projector to prevent electric shock.
Please seek professional assistance for maintenance matters.




Do not touch! The inside of the projector contains uninsulated voltage



Warn.

Do not install the projector around flammable objects to prevent fire. Please use 3C-certified power adapter for charging.

To ensure the performance and stability of the projector, please place it horizontally and leave a space of about 30cm between the projector and the wall.

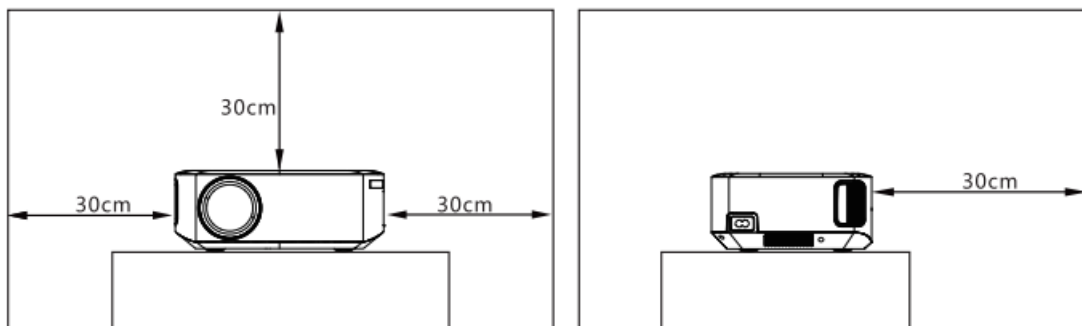

- Do not install in places with poor ventilation




- Do not install in high temperature or humid places




- Do not block the vents



- Do not install in dusty or smoky places

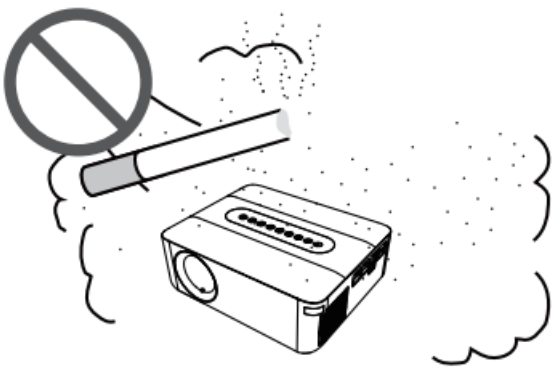


Projector Accessories

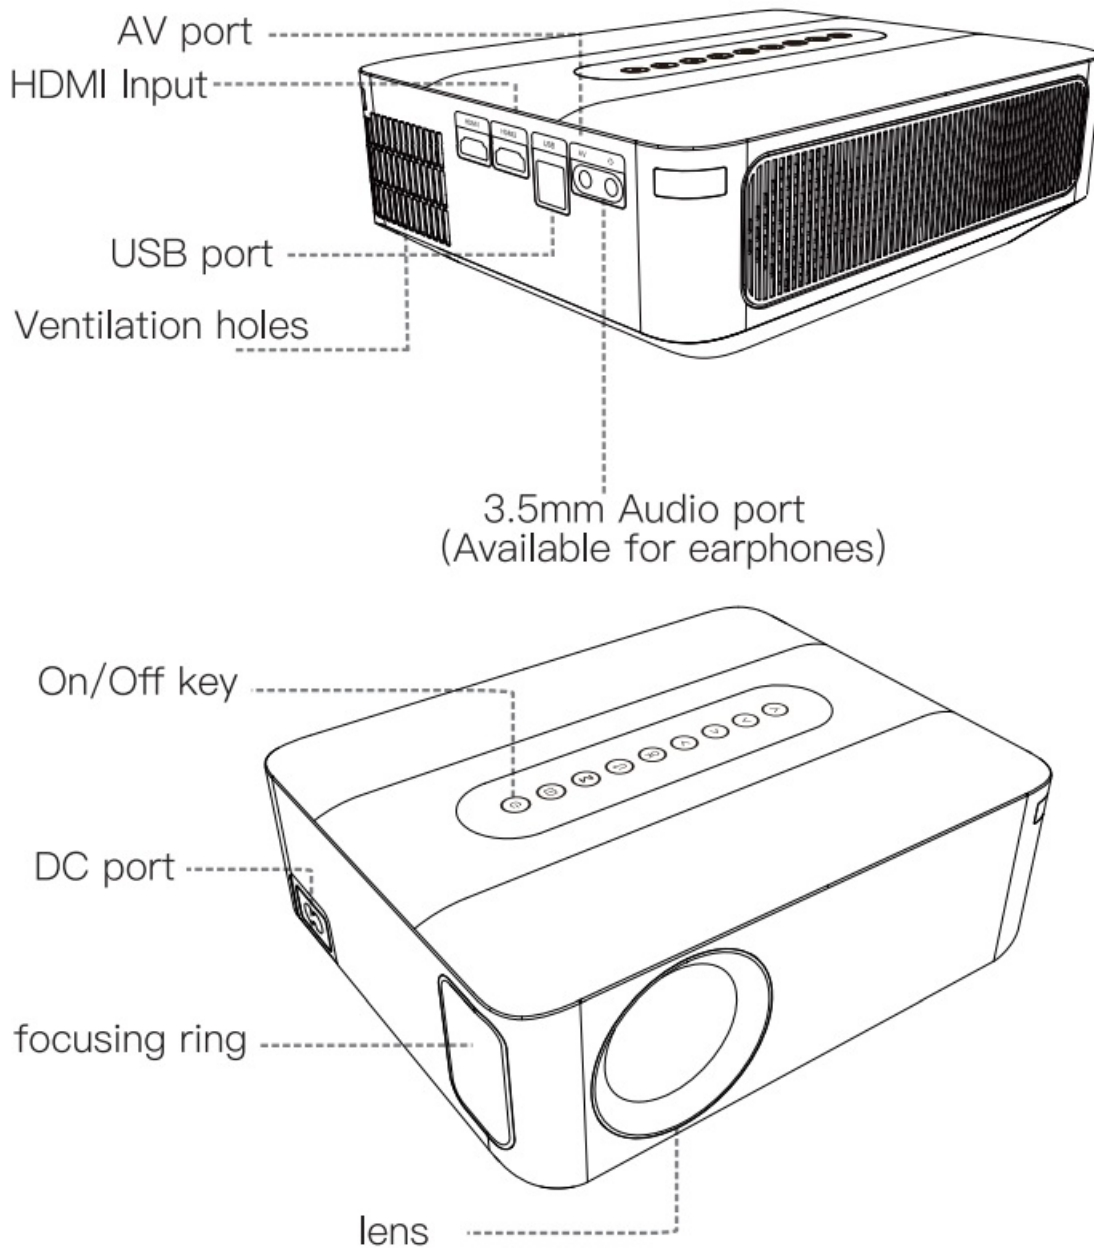

Notice: Do not look directly at the lens to prevent eye injury!


Remote Control Button Function

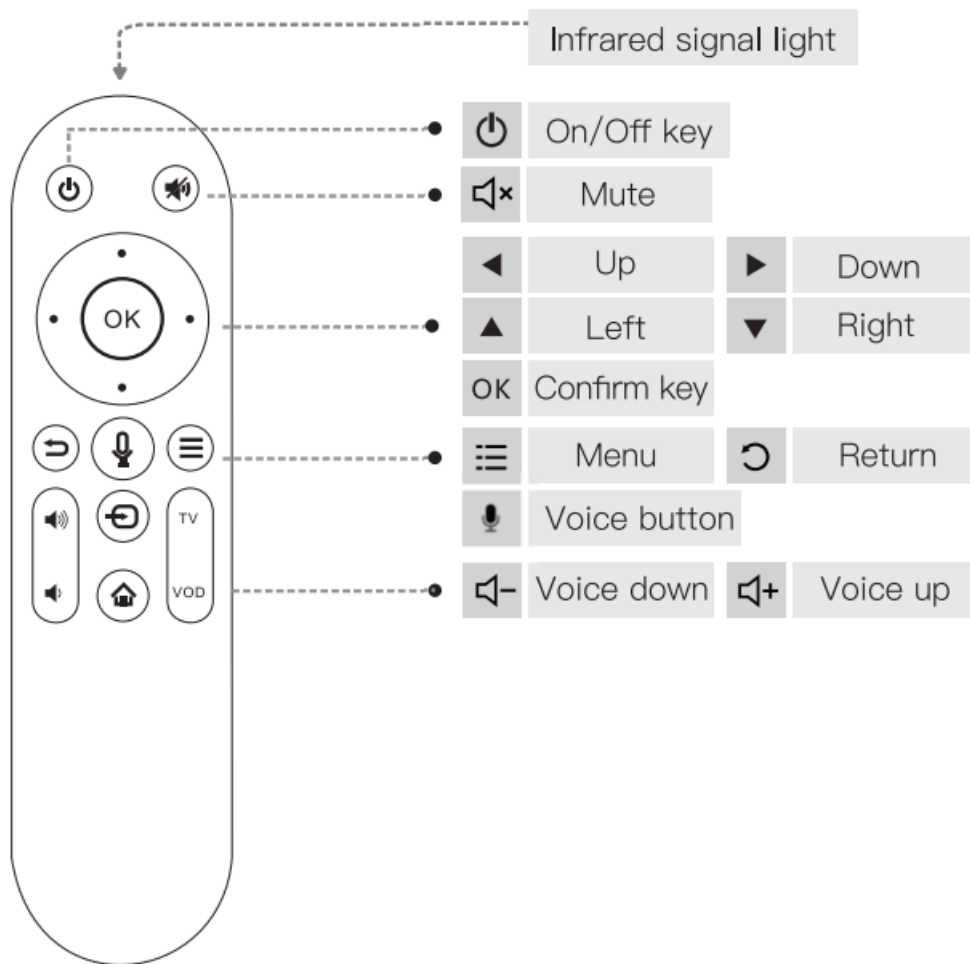

Voice pairing method


1. Press and hold the left & right direction buttons at the same time for 3-5 seconds until the red light flashes.
2. Open Settings – Remote Control & Accessories – click the name of the Voice Assistant to connect (as shown in the pictures)

Due to the continuous updates of the design, the appearance of the machine may be slightly different from that shown in above pictures. please refer to the actual product.

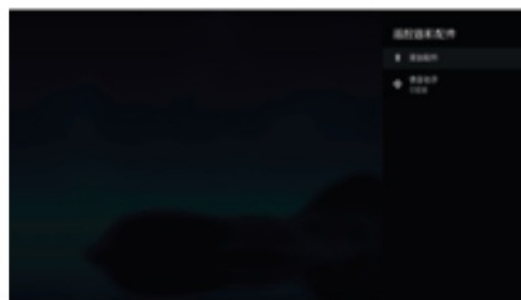

Power-On/Off Operation


1. Power connection
Connect the power cord with projector.

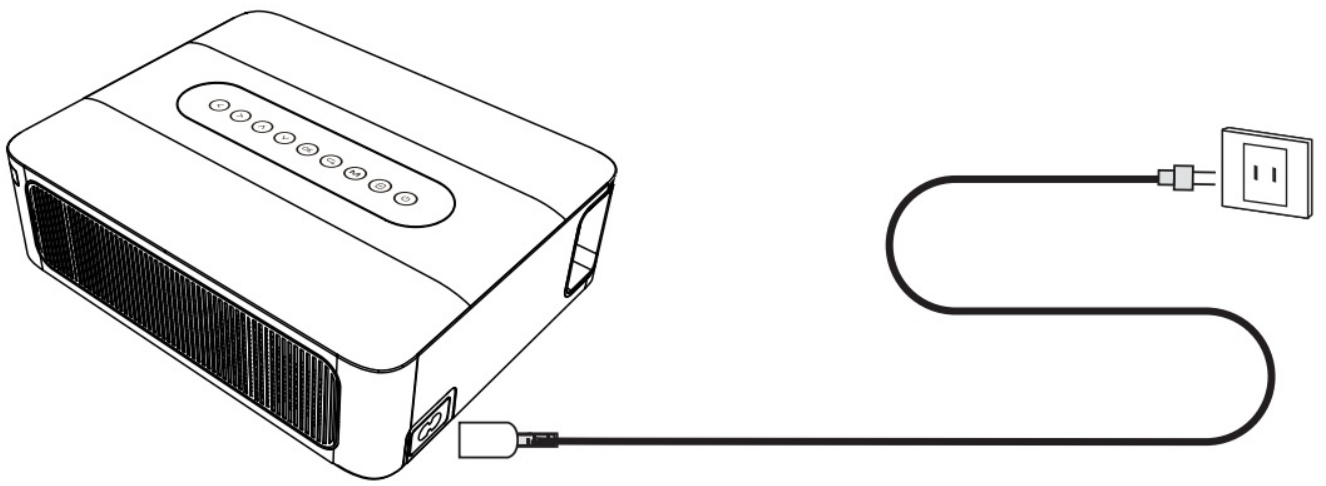


2. Boot & Shutdown

Power on/ off by the button on projector

- Press the power button to boot up projector

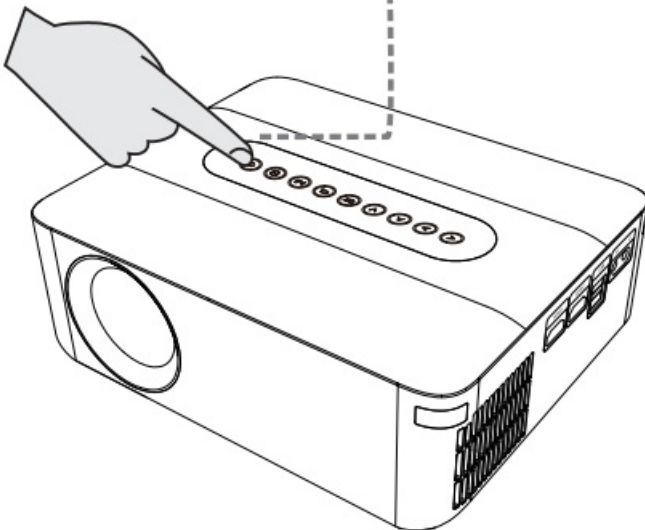


Power on/ off by remote control (optional choice)

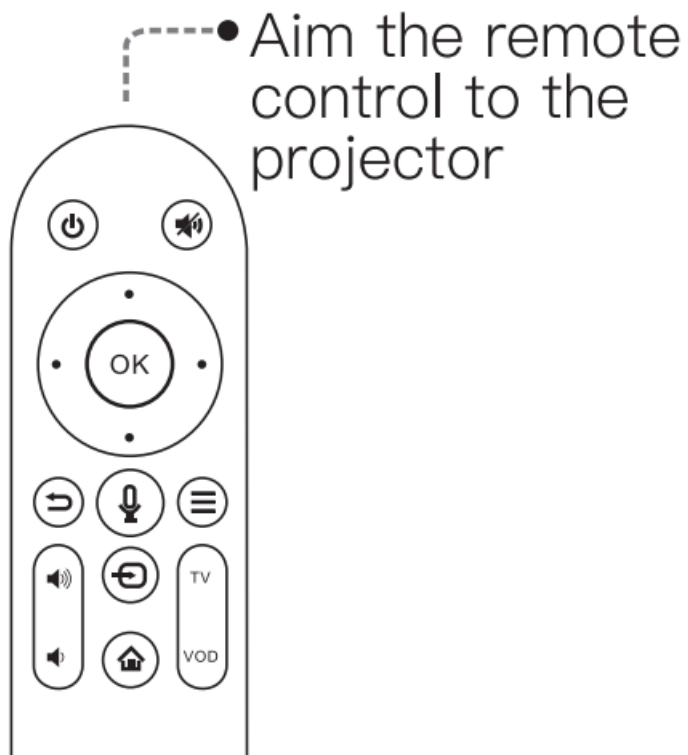


Projection Distance Reference & Screen Adjustment

1. Projection distance reference

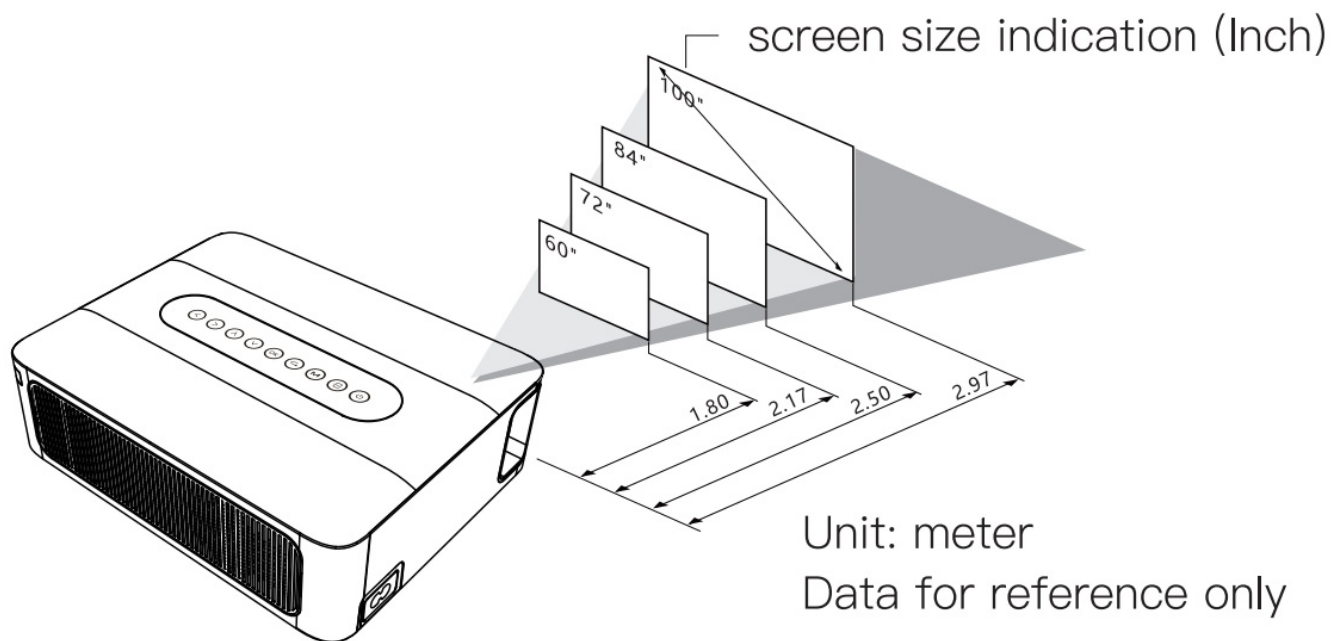

2. Sharpness adjustment

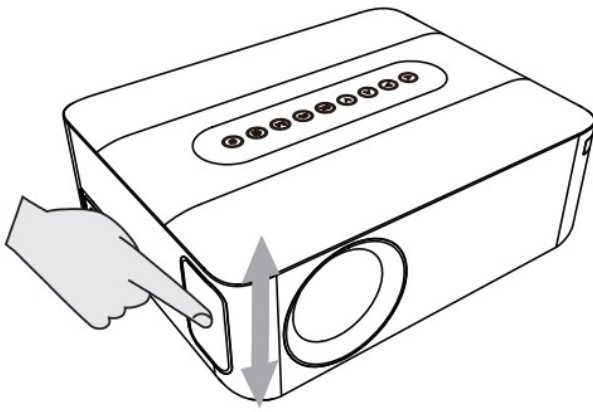

Focusing ring



Blurry image

1. After the machine is placed horizontally, turn the focusing ring up and down to adjust the picture to be clear.
2. If the machine is installed tilted, please set the keystone correction to adjust. If unable to get the satisfactory sharpness, move the machine slightly forward or backward.




Set keystone correction

Warn: The machine filter and air outlet must not be blocked or too close to the wall. Clean the filter regularly every month to prevent clogging.

Connection settings

WiFi connect (For Android device and Cast device)

1. Open Settings – Network & WiFi (picture 1) to enter the WiFi settings page (picture 2)
2. Choose the WiFi option and enter passwords to connect.

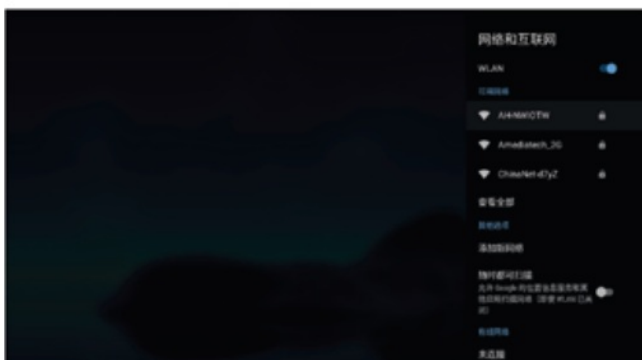

Tips:

1. Click ">" in software keyboard to connect WiFi after passwords entered.
2. If the pop-up window of "Problem with Authentication" appears, it means that the password is incorrect. If the pop-up window of "Saved", it may be that the router's WiFi settings are limited. It is recommended to check as follows:
 - A. Turn off the WiFi for seconds and turn on again to connect.
 - B. Reboot the router and connect again, try to reduce the connected devices.
 - C. Connect to the mobile phone hotspot to check if the projector WiFi work properly.

HDMI & Bluetooth Connection

HDMI connection

1. Press the "Switch" button on projector or the signal button of remote to choose the signal source. (As picture 1).
2. On home page, select [Signal Source] to source menu page or select [Settings] > [Signal Source]




Picture 1

Bluetooth connection


1. Connect to Bluetooth speakers and Bluetooth earphone: [Settings] > [Remote Control & Accessories] > [Add Accessories], open Bluetooth of your device, connect them.
2. Bluetooth speaker(set projector as a Bluetooth speaker): Settings]> [Bluetooth Speaker], follow tips on the screen to connect to your phone.

Screen Cast for Android Phone (support Android 5.3 and above)

1. Open "Miracast" App as below picture. Local device name is "Android_XXXX"

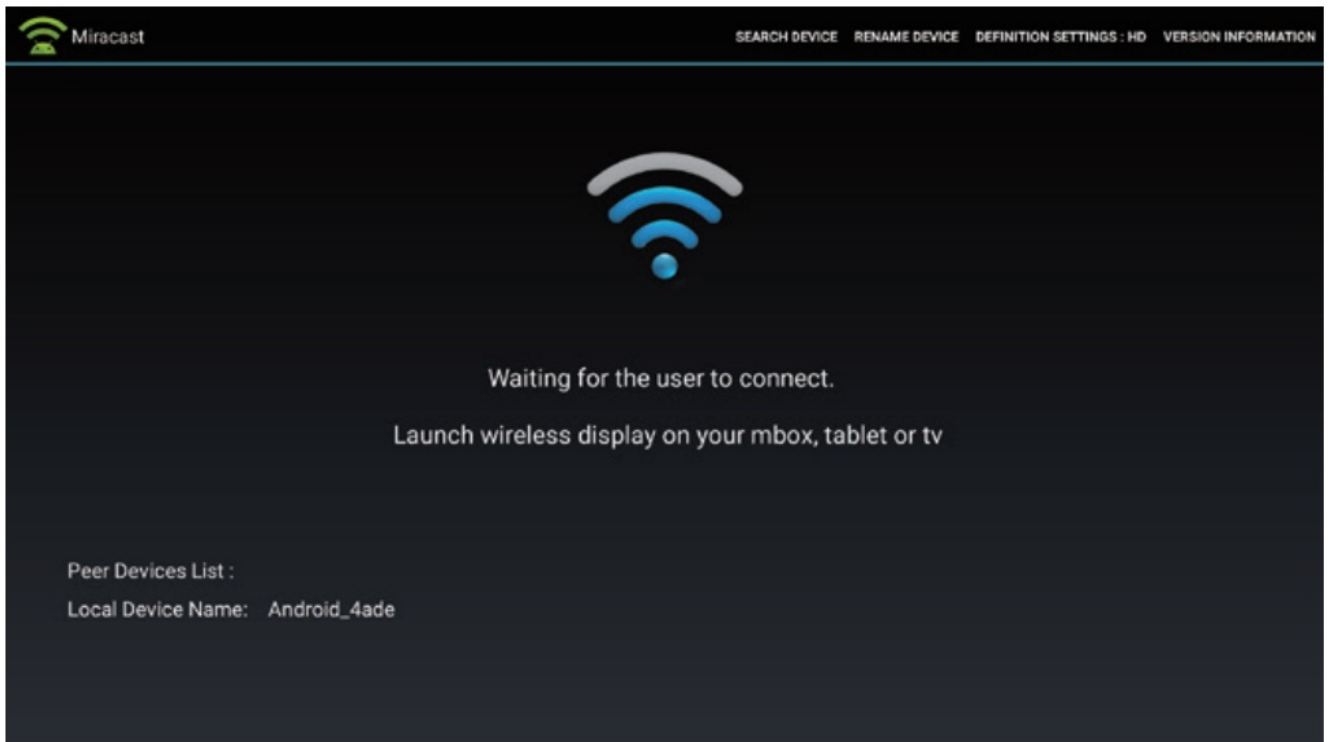


2. Open the Wireless Cast on Android phone to search available devices, click the “Android_XXXX” option to connect.
3. Click on the prompt box to accept the screen cast connection. If the screen is synchronized, means screen cast completed.

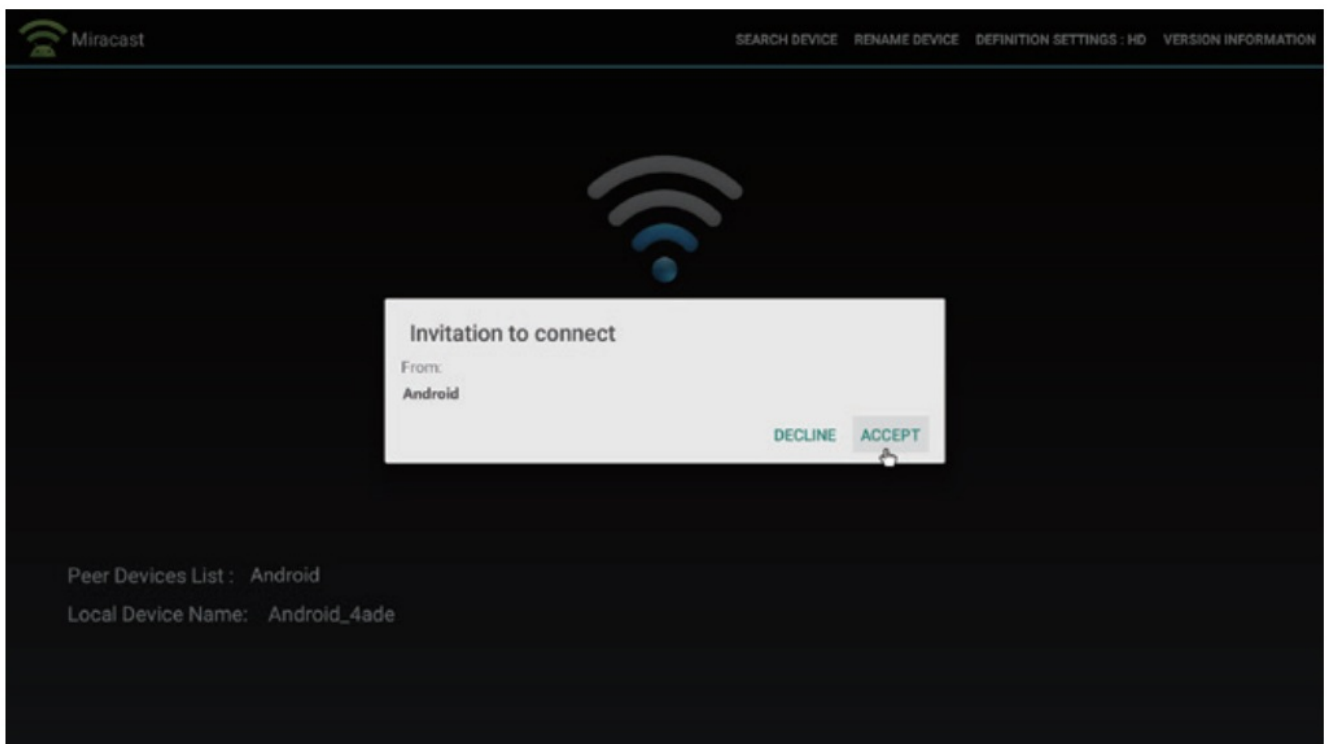

Wireless Screen Mirroring for iPhone

1. Please ensure the iOS device and projector connected to the same network.
2. Select [Cast] > Open [iOS Cast]

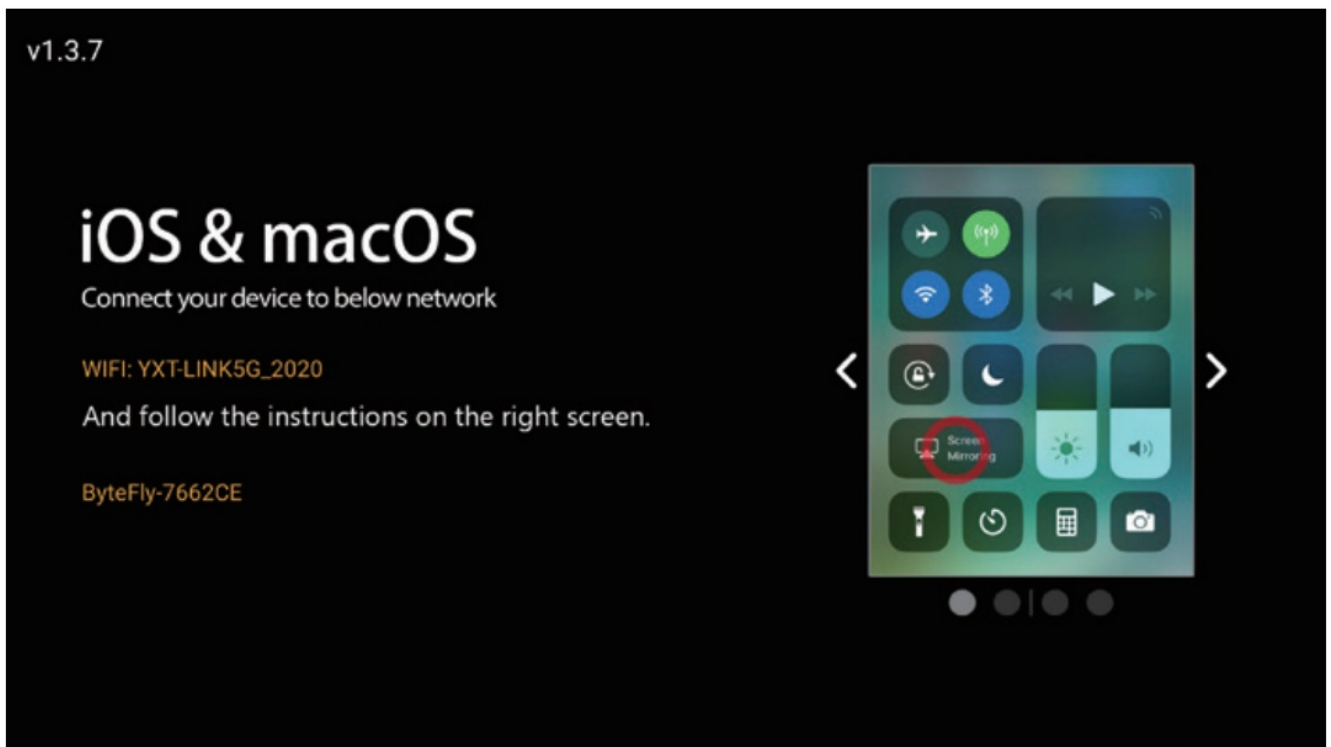

3. Open the Screen Mirroring from the control center on iPhone.
4. Search for available devices.
5. Connect to “ByteFly-XXXXXX” option to start mirroring screen.


Connection Settings

(Introduction of different versions)

Projector-Multimedia version

Multimedia version projector can play content from HDMI input or USB transmission from laptop or set-top-box.

Set-top-box, video player, etc

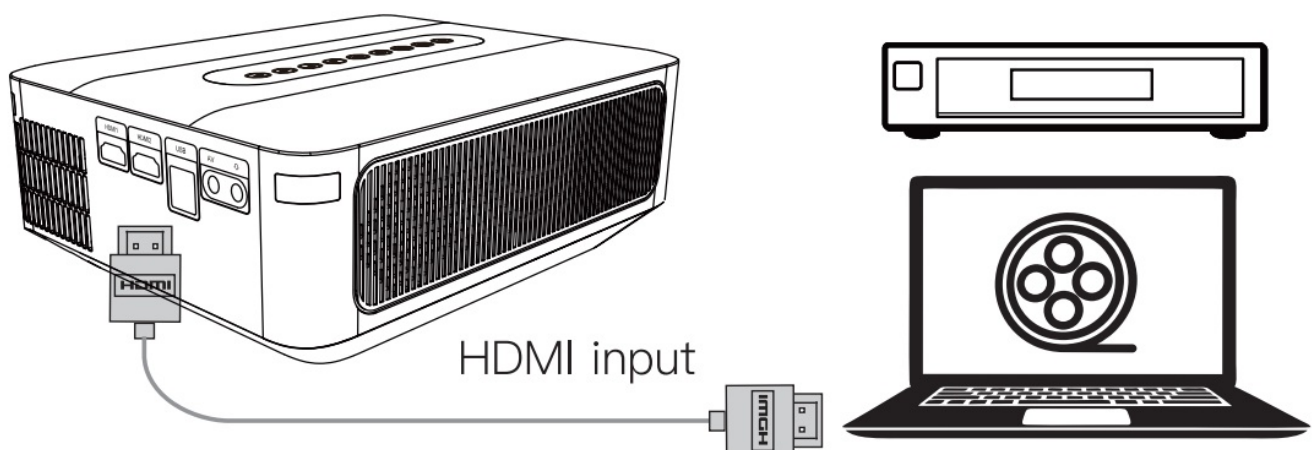

Projector-Cast version


Cast version projector can both play HDMI input content and the content shared by mobile phone screen mirroring.

Projector-Smart version

Smart projector available to preinstall various applications to play network video.

Filter Cleaning

Filter Cleaning

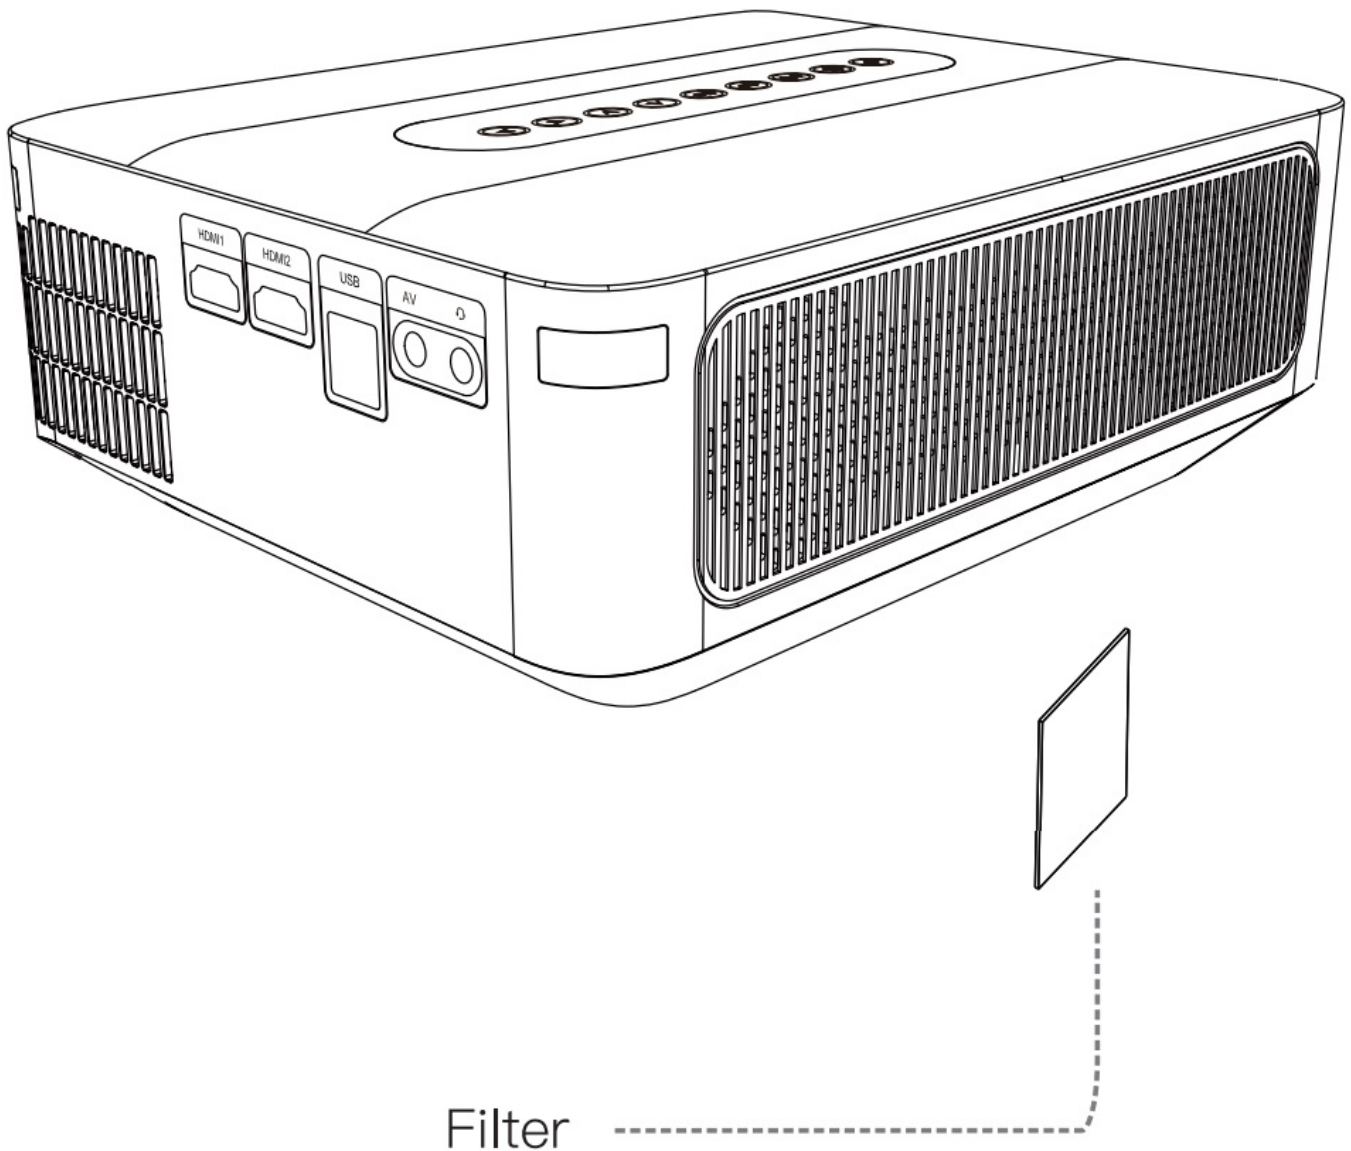

Pull out the filter and clean the dust on it, then install it back.

Projector Common Troubleshooting

1. Remote control is insensitive or unresponsive

- Please check if the batteries installed properly.
- Please replace with new batteries.
- Please aim the remote control to the projector to operate.

2. Unable to boot up

- Please check if the power cord is connected properly, and if the power light is on. Try to unplug and plug the power if the projector still cannot boot up.

3. Black screen or abnormal picture after booting for a while

- Please check if the vents are blocked.
- Please check if the cooling fan is working properly. If abnormal, please return for repair.
- Please try to reboot the projector.

4. No network connection

- Please check if WiFi connected properly, and if the WiFi signal is good.
- Please connect hotspot of smart phone to verify if router is working properly.

5. Blurry display

- Please check if the lens are clean.
- Please use the focusing ring to adjust the sharpness.
- Please check if the environment too bright.

6. Screen freeze

- Please reboot the projector to test again. If the screen still freeze, please turn off for 10 minutes and turn on again.

Warranty Card

1. This projector supports Three Guarantees Service. Warranty for 1 year from the date of purchase. (non-artificial damage).
2. Within warranty, we support warranty service for any failures caused by product technology.
3. The following situations are not covered by the warranty:
 - Accessories except the projector.
 - Products that have been disassembled and repaired without permission.
 - Damage caused by external force and other natural disasters.
4. When the product fails, please contact the dealer or supplier in time to arrange for repair withi this warranty card.
5. This warranty liability is limited to product failure repairs within the warranty period.

Warranty Card

Client Name: _____

Client ID: _____

Purchase shop: _____


Client Phone Number: _____

Return Address:_____

Fault description

(For quick repair, please describe in detail):

Documents / Resources



[XGODY X1 4K Support Projector with 5G WiFi and Bluetooth](#) [pdf] User Manual
X1 4K Support Projector with 5G WiFi and Bluetooth, X1, 4K Support Projector with 5G WiFi and Bluetooth, Projector with 5G WiFi and Bluetooth, 5G WiFi and Bluetooth, Bluetooth

Manuals+.