

Xiaomi Multi function Camping Lantern with Speaker



Xiaomi Multi function Camping Lantern with Speaker Instructions

[Home](#) » [Xiaomi](#) » Xiaomi Multi function Camping Lantern with Speaker Instructions 

Contents

- 1 [Xiaomi Multi function Camping Lantern with Speaker](#)
- 2 [Product Information](#)
- 3 [Product Usage Instructions](#)
- 4 [Frequently Asked Questions](#)
- 5 [Instructions](#)
- 6 [Key operation](#)
- 7 [Microphone button operation](#)
- 8 [Explanation Blue mode](#)
- 9 [Wireless microphone use](#)
- 10 [Basic product parameters](#)
- 11 [Documents / Resources](#)
 - 11.1 [References](#)
- 12 [Related Posts](#)



Xiaomi Multi function Camping Lantern with Speaker



Product Information

Specifications:

- Compliance: Part 15 of FCC Rules
- RF Exposure: Meets general RF exposure requirements
- Usage: Portable exposure condition without restriction

Product Usage Instructions

Caution and Compliance

Ensure the device is used in compliance with FCC Rules, specifically Part 15. The device must not cause harmful interference and should accept any received interference.

Modifications

Do not make any changes or modifications to the device that are not expressly approved by the responsible party. Unauthorized modifications could void the user's authority to operate the equipment.

RF Exposure

The device has been evaluated to meet general RF exposure requirements. It can be used in portable exposure conditions without any restrictions.

Frequently Asked Questions


Q: Can I modify the device?

A: No, any changes or modifications not expressly approved can void your authority to operate the equipment.

Q: Is the device safe for portable use?

A: Yes, the device can be used in portable exposure conditions without restrictions as it meets general RF exposure requirements.

Instructions

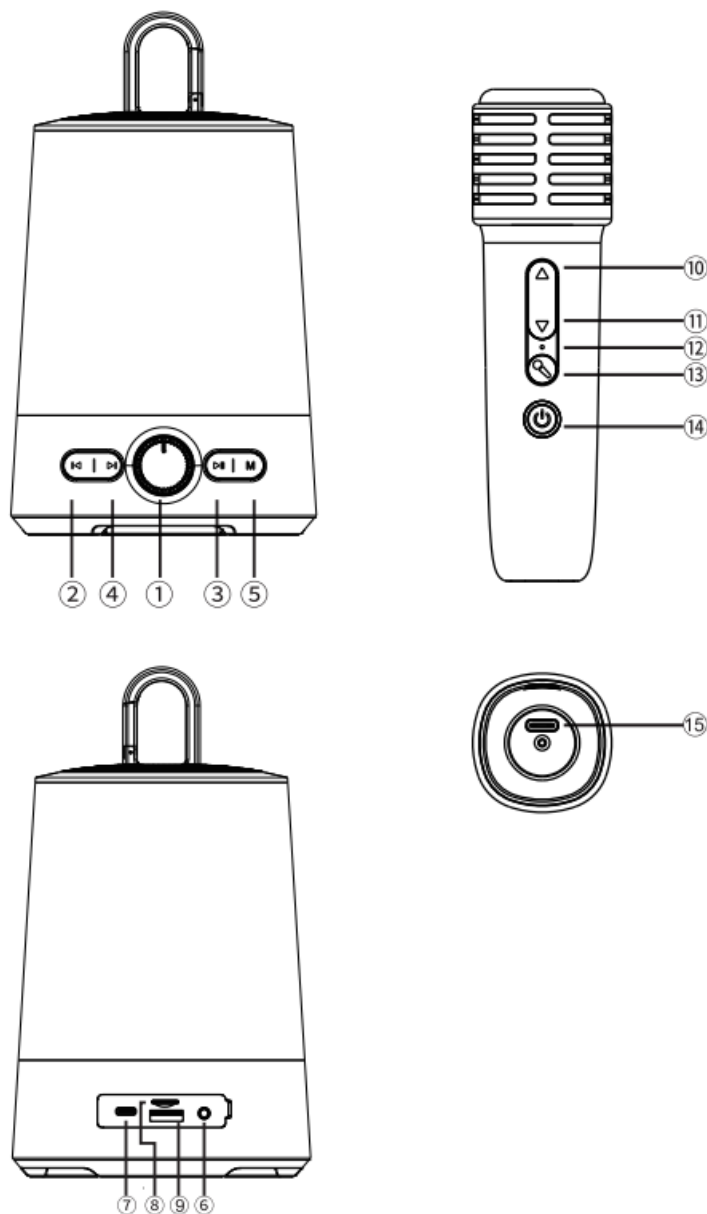

Key operation

1. Switch on and off key: a long press 2-3 seconds switch on and off the machine, rotate the tuning volume left and right
b Short press to switch the full-color breathing light, gradual slow flashing breathing light, monochrome three kinds of light mode
c Long press the 5 M key to switch from color light mode to warm light mode or white light light mode, you can short press the 1 switch button to adjust the brightness of three kinds of light
2. 4 Up and down key: Press the 2 and 4 keys to perform the up and down operation

3. Play key: Press to play or pause
4. M mode key: Press and hold to turn off the color light, switch the warm light or white light mode in turn, then adjust the lighting sequence of the three kinds of small, medium and large lights by short pressing the power button 1, and press and hold to switch the modes of blue tooth, TF card, ACX and U disk (Note: TF card, U disk, AUE mode can be switched only when the corresponding device access.
5. AUE interface
6. TYPE-C charging interface
7. TF card interface
8. USB flash drive interface

Microphone button operation

9. Key “4”: Short press to adjust the microphone volume, accompaniment volume, and reverberation factor; Press the control button on the control box Qu;
10. Key “A”: Short press to adjust the volume of the speech, accompaniment, and reverberation; Press the control button to lower the box Qu;
11. The blue light flashes quickly when the power is turned on, and the blue light remains on when the wired microphone is successfully connected. The red light remains on when the wired microphone is charged The red light turns off when fully charged, and flashes twice every 5 seconds when the battery is low;
12. Microphone key: short press the microphone key to switch KTV mode, professional mode, male to female, female to male, girl sound mode, Warcraft sound mode, double click the microphone key to open/close the original sound; Long press the microphone button to close/open;
13. Power on button: Press to turn on or off; Short press to switch: microphone adjustment, reverb adjustment, accompaniment adjustment; Double click control button Pause box playback;
14. TPE-C charging connection

Note: When the microphone is turned on, it defaults to being connected back to the previous device. If the previous device is not found within 10 seconds, it will Enter a new pairing connection.

Explanation Blue mode

1. Blue connection: The default setting for startup is blue. Enter blue mode or press the ‘MODE’ button to switch to blue mode Mode, turn on the blue screen scan of the phone, search for “T8” and click on pairing. Once the connection is successful, there will be a prompt. blue After successful pairing, the power on indicator light will light up.
2. Play music: Open your laptop or other device to play your favorite song and download it Release.
3. After connecting the machine to the computer twice, the blue screen device to disconnect or double-click the power button to forcibly disconnect the blue device

TF card mode

When inserting a TF card, the machine will automatically insert it for priority playback, and there will be a prompt. When all TF cards are inserted You can switch by briefly pressing the “MODE” button.

AUX (External Frequency Transmission) mode

1. Plug in the AUX external frequency cable, and the sound will be activated. After the broadcast, priority will be given to playback, and there will be a prompt.
2. When both AUX and TF cards are inserted simultaneously, you can switch by briefly pressing the "MODE" button.

Wireless microphone use

The speaker and microphone are turned on simultaneously, and the 2.4G power line signal is paired. At this point, the speaker can start shouting. Users can adjust the buttons according to their preferences to their preferred space. Attention: Accompaniment music only. It is possible to adjust the amount of accompaniment music when the microphone is switched to accompaniment mode, while the reverb mode can only be adjusted when the microphone is switched. Adjust the reverberation factor in reverberation mode.

Basic product parameters

- **Product Name:** T 8
- **Box material:** ABS material+stainless steel + Silica gel
- **Blue version:** Blue 5.3
- **TF card:** up to 32GB
- **Blue receiving distance:** ≥ 10 meters
- **Speaker impedance:** 4 ohms
- **Speaker power:** 10 W
- **Signal to noise ratio:** ≥ 90 dB
- **Distortion:** $\leq 1\%$
- **Frequency response range:** 120HZ-20KHZ
- **External connection:** TYPE-C charging connection, AUX connection, TF card connection
- **Power supply:** DC 5V/1A
- **Control mode:** key adjustment
- **Box size:** The bottom diameter is about 126.8mm, the top cover diameter is 116mm and the height is 198mm (excluding lifting rod)
- **Microphone size:** 39 x 39 x 139 mm
- **Operating temperature:** 0°C – 45°C

Executive standard: GB/T13837-2012; GB17625.1-2012; GB8898-2011

*According to the company's business development, the functional parameters and graphic content of the product may be adjusted at any time, and cannot be guaranteed. Timely updates of relevant packaging and instructions shall be based on the actual functionality and content used by customers.

Documents / Resources

	<p>Xiaomi Multi function Camping Lantern with Speaker [pdf] Instructions</p> <p>T8, 2BGWY-T8, 2BGWYT8, T8 Bluetooth Karaoke Speaker, T8 Bluetooth Speaker, Karaoke Speaker, Speaker, Multi function Camping Lantern, Multi function Lantern, Camping Lantern, Lantern, Multi function Camping Lantern with Speaker, Camping Lantern with Speaker, Lantern with Speaker, Speaker</p>
---	---

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.