



Home » Xiaomi » Xiaomi R4CM Mi WiFi Router 4C User Manual 🏗

Contents [hide]

- 1 Xiaomi R4CM Mi WiFi Router 4C
- 2 Product Usage Instructions
- 3 Connect the cables
- 4 Manage Mi WiFi
- 5 Specifications
- 6 Certifications
- 7 FAQs
- 8 Documents / Resources
 - 8.1 References



Xiaomi R4CM Mi WiFi Router 4C



Specifications

• Model: Mi Router 4C

Power: DSL/Cable/Satellite modem

Network: LAN/WAN

• Wi-Fi: WLAN Xiaomi XXXX

Product Usage Instructions

Step 1: Connect the Cables

- 1. Connect the power cable to the router.
- 2. Connect the Internet (WAN) port of the router to the DSL/Cable/Satellite modem.
- 3. If your Internet network is connected via a network cable, connect it directly to the router's WAN port.

Step 2: Set Up the Network Connection

- 1. Turn on WLAN Xiaomi_XXXX and connect to the Wi-Fi using a phone or computer (no password needed).
- 2. Wait for the system indicator light to turn blue, then search for the Wi-Fi network and connect.
- 3. Open a browser and go to <u>router.miwifi.com</u> or <u>192.168.31.1</u> for configuration.
- 4. Enter the broadband account name and password provided by your ISP, then click Next.
- 5. Set a new Wi-Fi and administrator password, wait for the indicator light to turn blue, and reconnect to the Wi-Fi.

Manage Mi WiFi


You can manage your router settings via <u>router.miwifi.com</u> or download the Mi WiFi app for remote management.

User Manual of Mi Router 4C.

All images are for illustration purposes only and may differ from the actual product by model and region.

Step 1:

Connect the cables

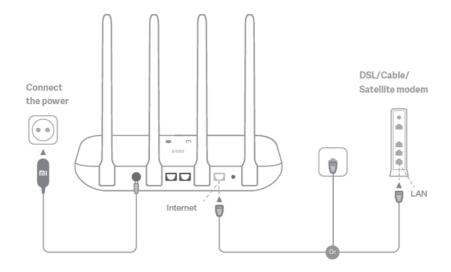


Power on the router, then connect the Internet (WAN) port to the DSL/Cable/satellite modem

- Connect to the Wi-Fi using a phone or computer(no password). Refer to the information at the bottom of the router for the Wi-Fi name
 Wait until the system indicator light urns blue. Search for the Wi-Fi network and connect
- Once the Wi-Fi is connected, you will be directed to the configuration page. If the configuration page is not present, open the browser and go to "router.miwifi.com" or "192.168.31.1" to complete the configuration Mi Router EULA is available at http://www1.miwifi.com/router/eula/20191230.html
- 3. Enter the account name and password provided by your broadband provider, then click/tap Next (It depends on the Internet Service Provider you selected, whether your account name and password are required or not)
 If you have forgotten your broadband account name or password, please contact your broadband provider




4. Set a new Wi-Fi and administrator password. You can choose to use your Wi-Fi password as your administrator password as well Please wait until the indicator light turns blue and stops flashing, then reconnect to the Wi-Fi

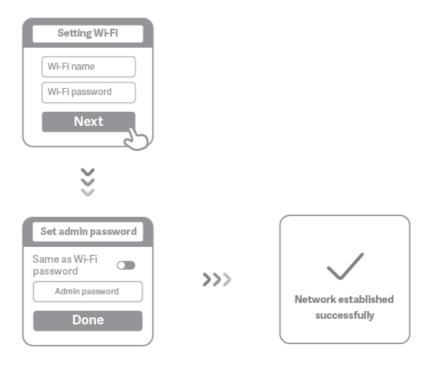

Manage Mi WiFi

The web management website is <u>router.miwifi.com</u> and supports basic Internet

functions. Scan the QR code, download the Mi WiFi app, and manage your router anytime, anywhere.e

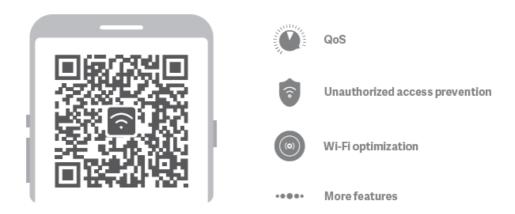

Specifications

• Name: Mi Router 4C

Model: R4CM

Operating Temperature: 0~40°C

• Input: 5V,1A

• Operating Frequency: 2400MHz~2483.5MHz (≤20dBm)

Power Consumption: Networked standby mode: ≤ 1.6W

Time to Enter the Condition: Networked standby mode: ≤1 min

Note:

The network standby power consumption is 1.6 W, if all wired network ports are connected and all wireless network ports are activated.

Certifications

Hereby, Xiaomi Communications Co., Ltd declares that the radio equipment type R4CM complies with Directive 2014/53/EU, Directive 2011/65/EU, and Directive 2009/125/EC. The full text of the EU declaration of conformity is available at the following internet address:

http://www.mi.com/global/service/support/declaration.html

For the detailed e-manual, please go to https://www.mi.com/global/support/user-guide.

All products bearing this symbol are waste electrical and electronic equipment (WEEE as in directive 2012/19/E₁), which should not be mixed with unsorted household waste.

Instead, you should protect human health and the environment by handing over your waste equipment to a designated collection point for the recycling of waste electrical and electronic equipment, appointed by the government or local authorities. Correct disposal and recycling will help prevent potential negative consequences to the environment and human health. Please contact the installer or local authorities for more information about the location, as well as the terms and conditions of such collection points.

Caution:

- The product can be used within all European Union countries (BE/FR/DE/IT/LU/NL/DK/
- IE/GB/GR/PT/ES/AT/FI/SE/CY/CZ/EE/HU/LV/LT/MT/PL/SK/SI/BG/RO/HR).
- To comply with CE RF exposure requirements, the device must be installed and operated 20cm (8 inches) or more between the product and all persons' bodies.
- The adapter shall be installed near the equipment and shall be easily accessible.
- You can activate or deactivate the Wi-Fi network in the "Settings" of the management page (<u>router.miwifi.com</u>).

Manufactured by: Xiaomi Communications Co., Ltd

#019, 9th Floor, Building 6, 33 Xi'erqi Middle Road, Haidian District, Beijing, China, 100085

FAQs

What do the different indicator lights mean on the router?



There should be two indicator lights on the front panel, which are the network status light (blue light) and the system status light (three colors: blue, orange, and purple)

Documents / Resources



Xiaomi R4CM Mi WiFi Router 4C [pdf] User Manual

25091-Mi-Router-4C, M47 R4CM, R4CM Mi WiFi Router 4C, R4CM, Mi W iFi Router 4C, WiFi Router 4C, Router 4C

References

- User Manual
- Xiaomi
- ◆ 25091-Mi-Router-4C, M47 R4CM, Mi WiFi Router 4C, R4CM, R4CM Mi WiFi Router 4C, Router 4C, WiFi Router 4C, Xiaomi

Leave a comment

Your email address will not be published. Required fields are marked*

Comment *

Name

Email

Website

Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

Manuals+ | Upload | Deep Search | Privacy Policy | @manuals.plus | YouTube

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.