



<u></u>

XIFIXIT Universal System Selector Button Replacement User Guide

Home » XIFIXIT » XIFIXIT Universal System Selector Button Replacement User Guide 🖺



Contents

- 1 XIFIXIT Universal System Selector Button Replacement
- **2 Product Information**
- 3 Specifications
- **4 Product Usage Instructions**
- 5 FAQ
- 6 Documents / Resources
 - **6.1 References**



XIFIXIT Universal System Selector Button Replacement



Product Information

GameStop Universal System Selector Button

This product is a replacement button designed for the GameStop Universal System Selector. It allows users to easily replace a malfunctioning or damaged system selector button without the need for professional help.

Specifications

• Compatibility: GameStop Universal System Selector


• Power Requirement: DC 6V

• Tools Required: Phillips #00 Screwdriver (1)

Product Usage Instructions

1. Step 1 – Disconnect Power

Disconnect the DC 6V IN power cable from the device.

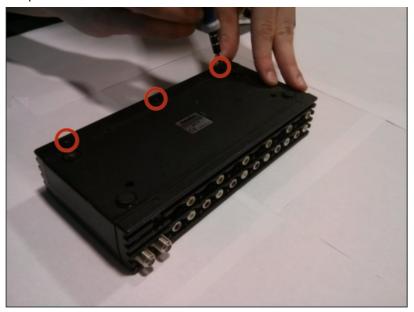

2. Step 2 - Access Button

Remove the three front panel screws located on the bottom of the device.



3. Step 3 – Remove Button

Carefully pry off the front panel to access the button that needs replacement.



4. Step 4 - Replace Button

- 1. Pull firmly on the button that needs replacement to remove it from its housing.
- 2. Push the replacement button into the empty slot.



5. Step 5 - Complete Replacement

1. Snap the front panel back into place.

2. Re-insert the three front panel screws to secure the replacement.



Your system selector button should now be functioning properly.

TOOLS:

Phillips #00 Screwdriver (1)

FAQ

Q: Do I need any special skills to replace the button?

A: No, this replacement process can be done by following the provided instructions without any special skills.

Q: Can I use this replacement button with other devices?

A: This button is specifically designed for use with the GameStop Universal System Selector and may not be compatible with other devices.

Documents / Resources



XIFIXIT Universal System Selector Button Replacement [pdf] User Guide Universal System Selector Button Replacement, Universal System Selector Button Replacement, Button Replacement, Replacement

References

- Phillips #00 Screwdriver
- User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.