 




XIXITPY V63 Digital Voice Recorder User Manual

[Home](#) » [XIXITPY](#) » XIXITPY V63 Digital Voice Recorder User Manual 

XIXITPY V63 Digital Voice Recorder User Manual

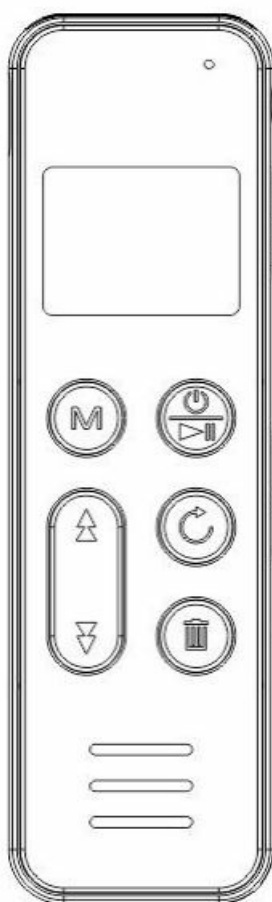

V63(EN)

User Manual

Please read carefully before using, most problems can be avoided!

Warm tips

1. After receiving the product, please set the time and language first (Default: English).
2. The factory default settings are the best settings after several tests by the factory technicians, if not necessary, it is recommended not to change.
3. Factory default: 2 minutes without any operation the machine will shut down automatically, of course you can reset the power-saving auto shutdown time.
4. When connecting to the computer, to prevent file loss or damage during transmission, please do not accidentally interrupt the connection.

5. Back up your data to the computer as often as possible. This will protect your files and save recording space.

Warranty

Hi friends, if you encounter any problems or questions in the process of using, please contact us on the shopping platform website, we will respond quickly within 24 hours.


Amazon: [Order History] – [Seller] – [Ask a Question] Or you can also contact us by email(yvonne_question@163.com). Thank you. Have a nice day

Contents

- 1 1. Product Information
 - 1.1 1.1 Product Appearance
 - 1.2 1.2 Indicator Light
- 2 2. Quick Help
 - 2.1 2.1 Power on/off
 - 2.2 2.2 Enter Menu
 - 2.3 2.3 Set Language
 - 2.4 2.4 Set Date & Time
 - 2.5 2.5 Record/Save
 - 2.6 2.6 Select recording/music file
 - 2.7 2.7 Play/Pause
 - 2.8 2.8 Fast forward/rewind
 - 2.9 2.9 Delete/Delete all
 - 2.10 2.10 Reset button
 - 2.11 2.11 Charge
 - 2.12 2.12 Connect PC to Playback
- 3 3. Menu
 - 3.1 3.1 Recording settings
 - 3.2 3.2 System settings
 - 3.3 3.3 File browsing
 - 3.4 3.4 Play mode
 - 3.5 3.5 Repeat settings
 - 3.6 3.6 Sound settings
 - 3.7 3.7 Delete
 - 3.8 3.8 Delete all
 - 3.9 3.9 Exit
- 4 4. Technical Specifications
- 5 5. QA (Must view!)
- 6 6. PDF User Manual
- 7 Documents / Resources
 - 7.1 References

1. Product Information

1.1 Product Appearance

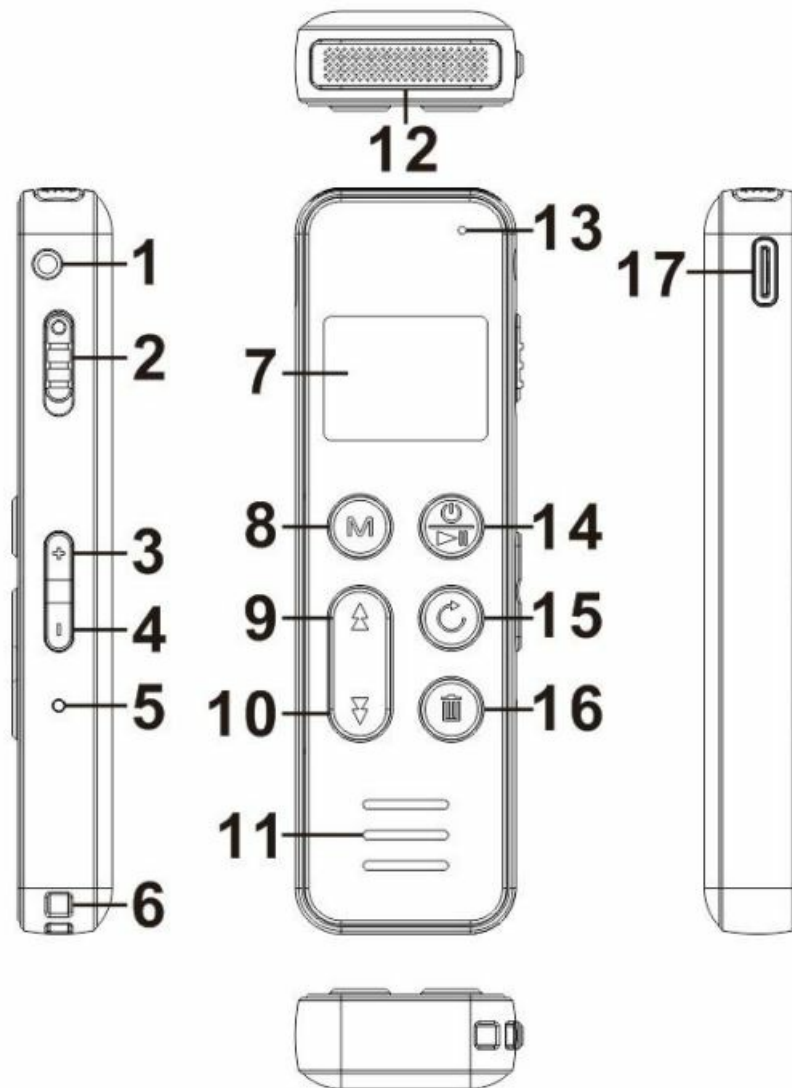

1. 3.5mm jack: Connect earphones/audio cable
2. Record button: Push up to record, Push down to save
3. Vol +
4. Vol –
5. Reset button: If the situation of dead, reset by the button(Restore factory settings, not formatting)
6. Lanyard hole
7. Display screen
8. Menu button:
Short press to switch music/recording file
Long press to enter main menu
9. Previous song:
Short press to switch the previous song
Long press to fast rewind(When playing)
10. Next song
Short press to switch to the next song
Long press to fast forward(When playing)
11. Speaker hole
12. Audio input hole


13. Indicator light
14. Play/Power button: Short press to play/pause/OK
Long press to power on/off
15. Return button:
Short press to return to the previous level menu
Short press to return to the initial point of audio and pause playback(When playing)
16. Delete button: Short press to bring up the delete file menu option
17. USB-C port: Charge or data transmission

1.2 Indicator Light

When recording	<p>Flashing red light. [default]</p> <p>-----</p> <p>Turn off method: Press "M" to enter the Main Menu - Recording settings - Recording lamp set -light (off)</p>
When charging	<p>The red indicator flashes, when full-charged, the blue light is always on.</p> <p>-----</p> <p>NOTE For the sake of battery health and faster charging, please connect the charger instead of computer charging</p>

2. Quick Help

 2.1 Power on/off

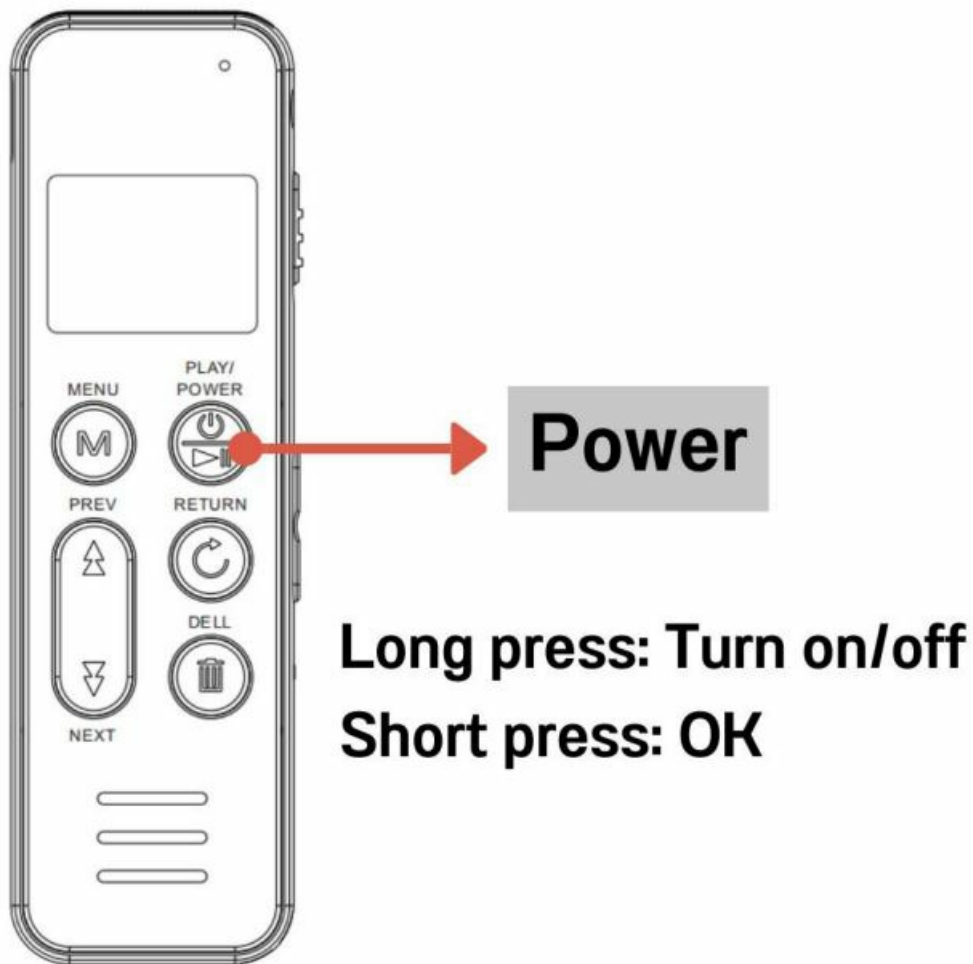

- Long press “Power” to turn on/off the machine.
- The machine will automatically shut down after 2 minutes without any operation after power on.

2.2 Enter Menu

**Long press M:
Enter to Menu**



- After power on, press and hold [M] to enter menu. Short press [PLAY/OK] to save changes, short press [RETURN] to exit.

2.3 Set Language

2/9

- Ⓐ Recording settings
- Ⓑ System settings
- Ⓒ Folder view
- Ⓓ Play mode

① Press and hold the "M" button to enter the main menu.

Select **System settings(2/9)**

6/11

- Ⓐ Date and time
- Ⓑ Language/Language
- Ⓒ Password setting

② Select **Language(6/11)**

1/7

- Ⓐ English
- Ⓑ 日本語
- Ⓒ Deutsch
- Ⓓ Français

③ 7 languages available:

1/7: English

3/7: Deutsch

4/7: Français

5/7: Italiano

6/7: Español

2/9

- ⊙ Recording settings
- ⊙ System settings
- ⊙ Folder view
- ⊙ Play mode

① Press and hold the "M" button to enter the main menu. Select **System settings(2/9)**

5/11

- ⊙ Brightness
- ⊙ Date and time
- ⊙ Language/Language

② Select **Date and time(5/11)**



22

09

26

 


YY

MM

DD

③ Press +/- to edit the year, month, day, hour and minute

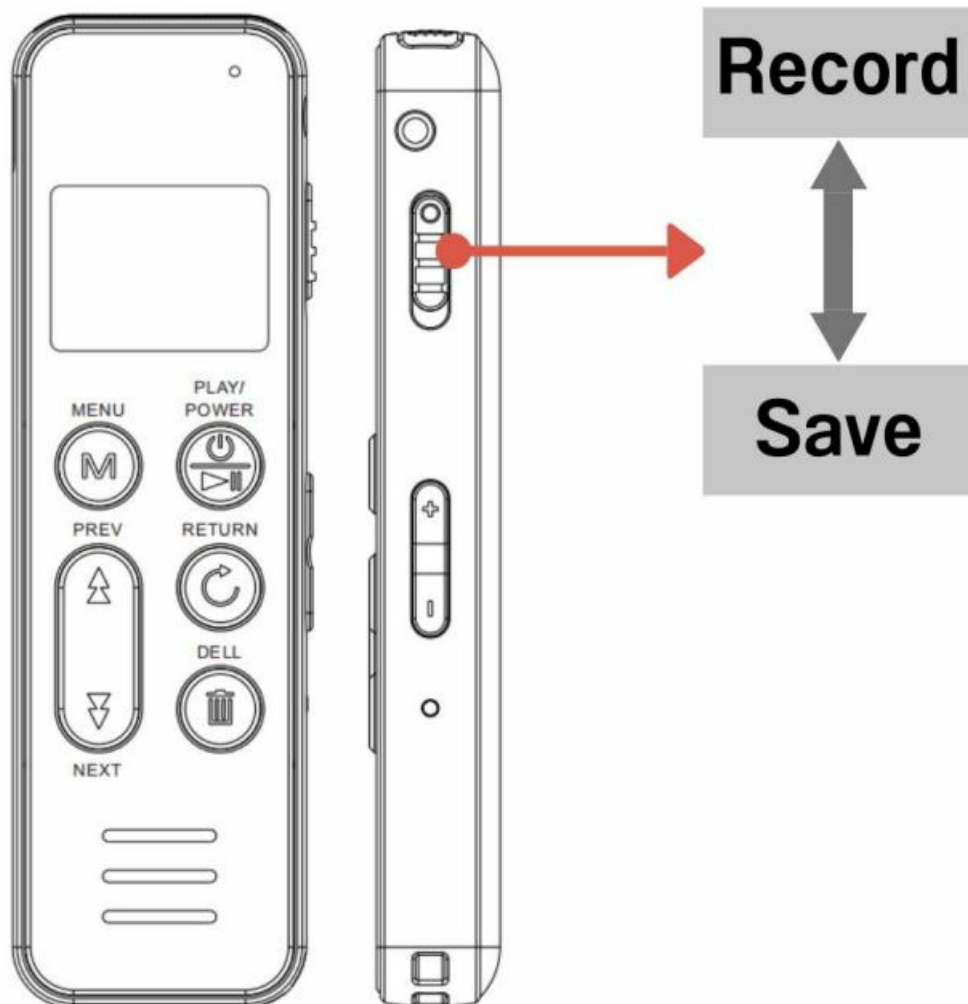

- In the power-on/off state, you can quickly record with one key. 8


2.6 Select recording/music file

Short press M:
Freely switch between
Recording files
Music library



- After power on, short press [M] to switch between recording/music files. This function is useful for you to distinguish between the recording files and music files. 9

2.7 Play/Pause

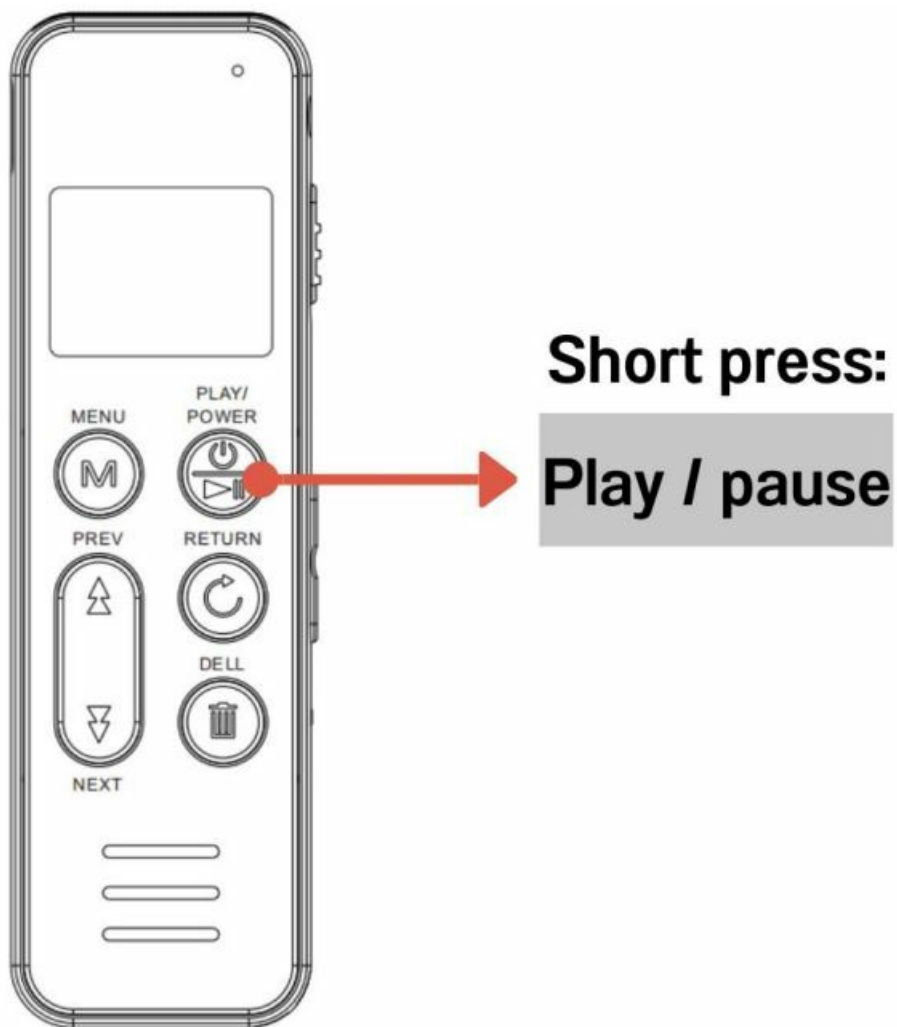

- Unable to playback?
Audio files are not supported, please select wav/mp3... format.

2.8 Fast forward/rewind

In playback mode:

Long press:

Fast rewind


Long press:

Fast forward




- Short press to switch the previous/next song.
- Long press to fast rewind/forward. Fast forward /rewind can only be done during playback, but not during pause.

2.9 Delete/Delete all

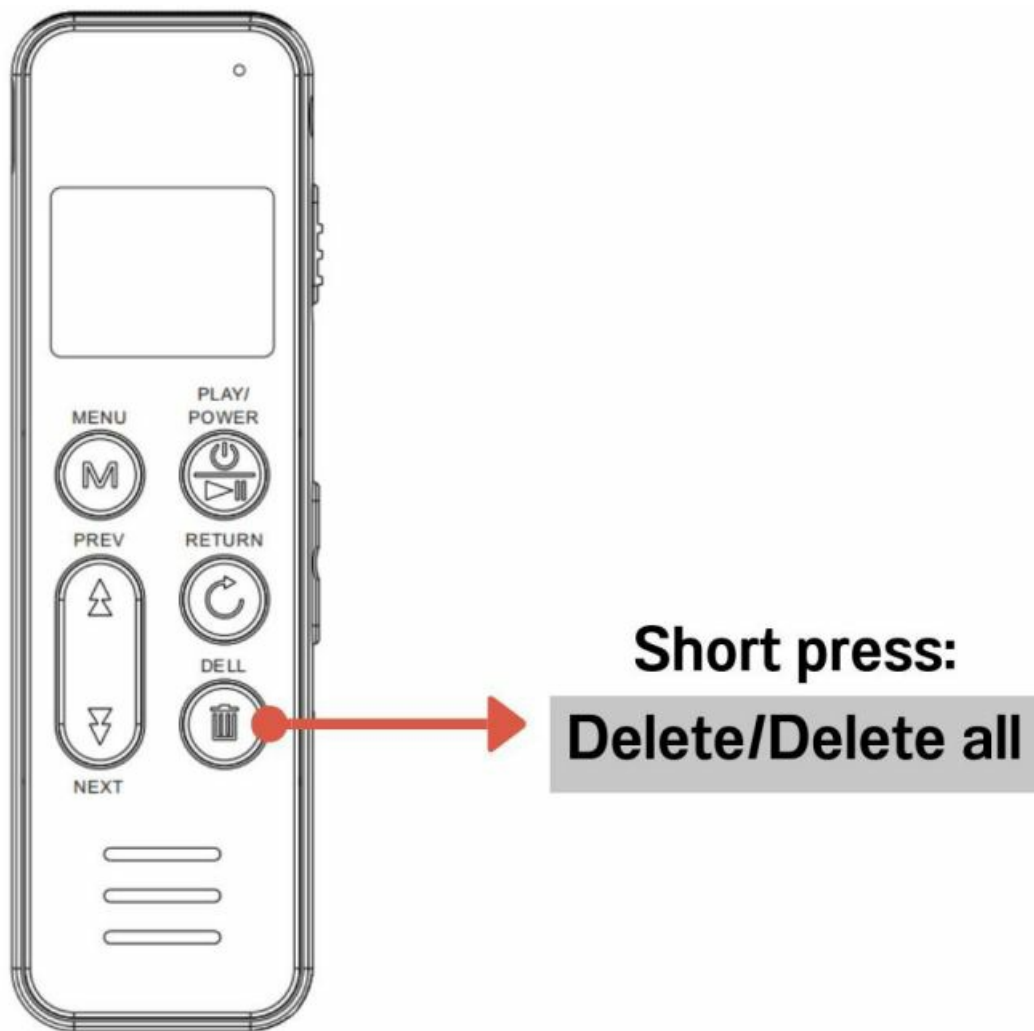

- When playing files, short press to bring up the delete file menu option.

2.10 Reset button

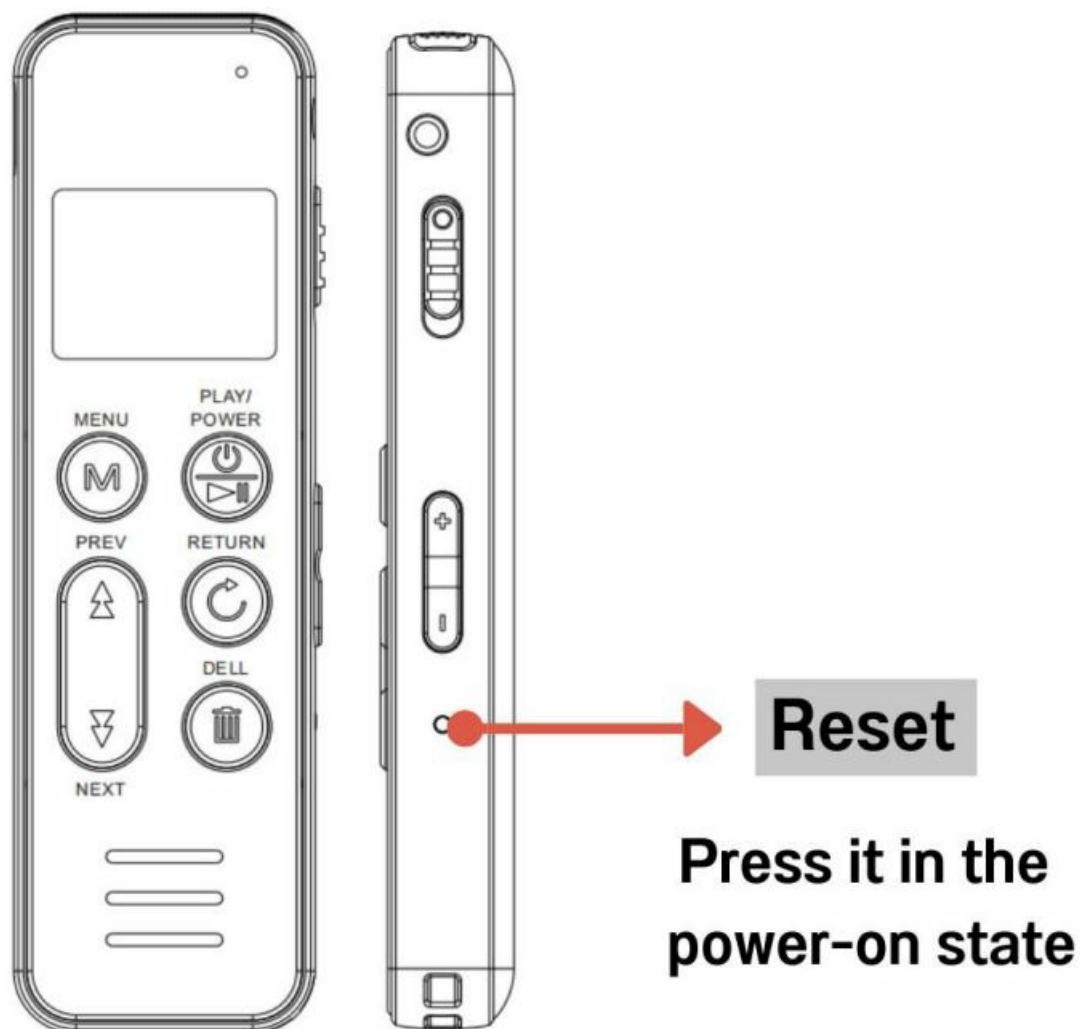


- If there is a dead/unable to connect to the computer or other situations, you can try the reset button, it will help you to achieve the factory settings with one click. Please rest assured: it will not delete any files

2.11 Charge

Charging interface	Type-C USB 2.0
Battery capacity	500 mAh
Charging time	4 Hours
<p>When charging: The battery symbol is scrolling,, indicating that it is charging.</p> <p>Fully charged: The battery symbol does not move when the battery is fully charged.</p>	

NOTE

1. When the battery indicator shows "  ", please use a professional usb wall charger to charge in time.


2. If you charge directly into the computer, the charging speed will be very slow, and the full charging time will be very long.
3. If not used for a long time, please charge and discharge the product once every 3 months.

2.12 Connect PC to Playback

[USB DISK]-[RECORD]-Click the recording to play directly.

NOTE

If the recording cannot be played on Win10 [Groove Music], please use [Windows Media Player]. Path: [USB DISK] – [RECORD] – [Open with][Windows Media Player /iTunes /Quick Time Player]

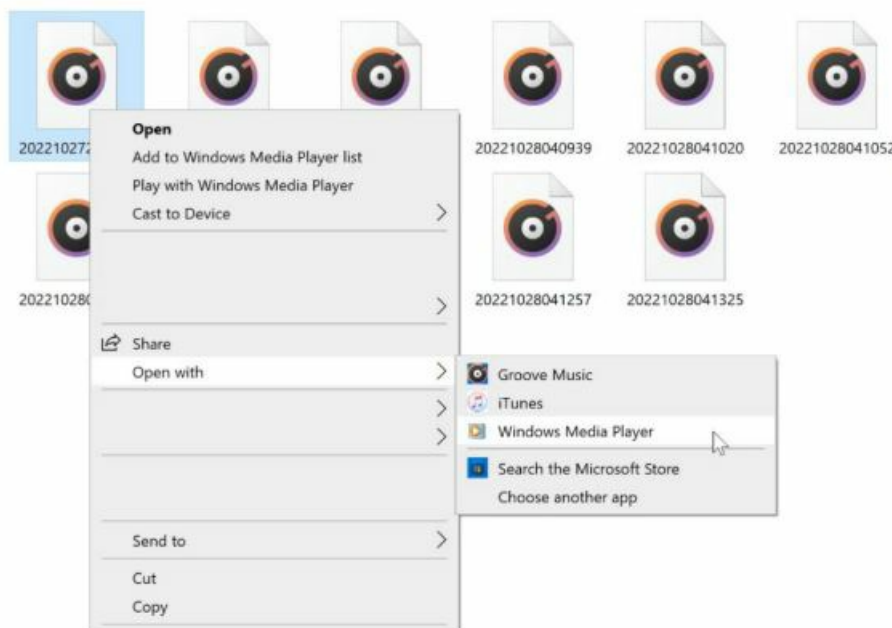

3. Menu

Press and hold M to enter menu settings.

3.1 Recording settings

1. Recording format: WAV/MP3
2. Set rec bitrate

Default: WAV-512kbps (No change recommended)	
WAV	256kbps~3072kbps
MP3	32kbps~192kbps

The higher the bit rate of the recording file, the more memory and the more power consumption.

3. Recording from Microphone/Line in

- Microphone [Default] • Line-in Recording: Direct audio to recording. Connect external devices via 3.5mm

audio cable, such as PC, mobile phones, MP3, etc.

4. Record sensitivity [Default: 3] (No change recommended)

The higher the number, the higher the recording sensitivity.

But the sensitivity is too high resulting in capturing very subtle sounds and thus creating noise. Too low will result in missing some recording

5. Segmented recording [Default: OFF] This feature allows you to split large files or files with long recording times, making them easier to manage. After turning on this function, you can set every 0/30/60 minutes... Split the recording once. After splitting, unnecessary files can be deleted to save memory. The default split length varies with the bit rate.

6. AVR mode (Voice activated) [Default: Normal] • Normal: Turn off voice activation

• AVR On: Turn on voice activation Voice activation function: When the Voice activation is turned on, it will automatically sense the surrounding sound, when the surrounding sound reaches a certain standard, it will automatically record, automatically suspend the recording when bellowing the standard.

NOTE After turning on voice activation, low decibel sounds may be missed, so please turn on this feature with caution. It is not recommended to use in important occasions.

• Set level of AVR [Default: 4] (No change recommended) The higher the Voice activation sensitivity level the higher the sensitivity (i.e. the recorder is able to record very small sounds), to avoid excessive noise it is recommended that the sensitivity be set at around 3.

7. Recording monitor [Default: OFF] After setting to on, plug in the headphones at this time you can listen to the content being recorded.

8. Timed recording [Default: OFF] Once: This time only

Daily: Every day

Work day: Monday to Friday

9. Recording indicator [Default: ON] When recording, with light/without light.

10. Noise reduction settings [Default: Level 3]

3.2 System settings


1. Sleep timer Power-saving shutdown [Default: 2 Mins] 2 minutes without any operation automatically shut down, power saving. Set sleep timer [Default: 0 Mins]

2. Backlight timer Automatic backlighting after 30 seconds without any operation by default.

3. Screensaver Option to turn off the screen/digital clock when backlighting.

4. Brightness

5. Date and time

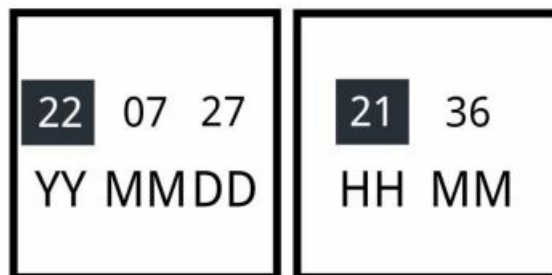

Year-Month-Day-Hour-Minute

6. Language/Language

7. Password setting

- Password switch [Default: OFF] • Password set: Original password: 00 00 00 If you forget your password, please enter (18 18 18) and press and hold the [Return] button for over 3 seconds to crack it.

NOTE Whenever you turn on this function or connect to your computer, you will need to enter your password before you can use the unit.

8. Information

Check Disk Space. Reasons for the difference between actual and displayed memory: Because of binary differences, plus the system software also takes up some of the storage space. Please Google for more.

9. Format device NOTE Please backup the data in the recorder in advance, all files in the recorder will be deleted after formatting.

*Can be connected to a PC for formatting (i.e. click "USB DISK" to format)

*Do not shut off the device during disk format, or disk error.

10. Reset Restore all default settings, but no files will be deleted.

11. Exit

3.3 File browsing

3.4 Play mode

You can select Repeat 1/Repeat all/Shuffle/Repeat off.

3.5 Repeat settings

Repeat mode that is A-B repeat function

1. When playing a file, enter the menu, select repeat mode, the page will automatically jump back to the playback page. When A flashing, press the [MENU] button once to select the start point (A), and press the [MENU] button again to select the end point (B). At this time, the recording will be repeated between A-B. Then, press the [MENU] button can exit the A-B repeat mode.
2. Repeat times [Default: 05]
3. Repeat interval [Default: 01]

3.6 Sound settings

1. Equalizer
2. Variable speed playback: You can listen to recorded files faster/slower, which is good for language learning.

3.7 Delete

3.8 Delete all

3.9 Exit

4. Technical Specifications

Model	V63
Material	High quality zinc alloy
Power Supply Method	Built-in lithium polymer battery
Dimension	98mm×29mm×12 mm 3.8×1.1×0.5 in (Exactly as per actual)
Display Screen	1.0 in
Display Resolution	128*96
Weight	74g / 2.61oz
Memory	8GB - 64GB
Recording Format	WAV /MP3
Music Format	MP3/WMA/WAV/FLAC/APE/OGG
Interface Type	Type-C 2.0
Support System	Windows/Mac

Operating Temperature	20 to 110°F
Battery	500 mAh
Battery Specifications	3.8V/422283
Charging Time	4 Hours
Earphone Jack	3.5mm
Packing List	<ul style="list-style-type: none"> • Digital Voice Recorder x 1 • Data Cable x 1 • User Manual x 1

***The higher the bitrate(kbps) of the recording, the larger its file memory. (h-Hour, d-Day)**

WAV-Bitrate	Storage Length (16GB)	Storage Length (32GB)	Storage Length (64GB)
1536kbps	24h	48h	96h
1024kbps	36h	72h	144h
768kbps	48h	96h	192h
512kbps	72h	144h	288h
256kbps	142h	284h	568h

MP3-Bitrate	Storage Length (16GB)	Storage Length (32GB)	Storage Length (64GB)
192kbps	188h	376h	31d
128kbps	282h	564h	47d
64kbps	560h	1120h	93d
32kbps	1112h	2224h	185d

5. QA (Must view!)

Q1: Can't find recording in the recorder?

1. Long press menu button to switch music to wav folder.
2. It may be a disk error, please check the recording file on computer.

Q2: Can't record/work?

1. Check if the battery is exhausted and charge it in time.
2. Check if the storage space is full and delete some recordings after backup.
3. Recording is not possible when the recorder is connected to a computer, if you want to record, disconnect from the recorder and turn it on again.
4. The recorder automatically ignores low decibel sounds when voice activation is switched on.

5. If you still can't solve it, please contact us.

Q3: How to reduce noise?

1. Turn off voice activation when not needed.
2. Place the recorder smoothly to avoid friction with other objects, such as hands, clothing, etc.
3. When recording, try not to touch the recorder as well as the buttons.
4. Away from sources of noise (e.g. air conditioning, typing, or subtle noise that may be generated by running computers)
5. When recording voice, please let the voice speak at least 30cm away from the microphone of the recorder, otherwise it is easy to produce popping sound.
6. If the recording environment is very noisy, can not avoid the noise, please understand.

Q4: Error When Connecting to PC?

1. Please make sure the recorder is turned off. When connecting, please place the recorder smoothly and do not press any buttons.
2. Switch on first, then press [Reset] button.
3. Restart the computer or recorder.
4. Please connect with different cable, interface to troubleshoot (Mac: replace USB-C Hub). If there is still no response, please contact us.
5. For Windows: check if the usb disk identification appears on my computer. Click "USB Disk Identifier" at the bottom right corner of the desktop – [Open Devices and Printers] – [Devices] – right click [HS USB FlashDisk] – [Remove Device], and then reconnect to your computer.

Q5: Why is the actual storage space of this recorder not up to the advertised storage space?

All memory manufacturers produce memory according to 1000MB=1GB, while computers identify devices according to 1024MB=1GB.

Q6: Disk Error?

Cut off its power when format device didn't completed, so it lost system firmware. Please connect computer to format. Or switch on first, then press [Reset] button.

Q7: Can't shut down?

1. When the recorder is charging, or connected to computer, it will not accept any instructions.(It's normal)
2. In other cases, switch on first, then press [Reset] button.

Q8: Format Error?

The recordings time length is less than 5 seconds, like 0 second recordings file. Audio files format are not supported.

Q9: I found recordings when using the recorder for the first time? Sorry. It is possible that the recording button was accidentally touched during the packaging or shipping of the product to make these recordings (time not calibrated). Please be assured that we only sell brand new products. This is the business principle we have always insisted on. But we also fully understand the buyer's feelings, ? you can contact us and we will help you.

6. PDF User Manual

If scanning the QR code fails, please contact us to get it.

English



Cautions

- 1. Children are forbidden to play the recorder alone, and do not fall and collide with hard objects, otherwise it may cause data loss or other hardware damage of the recorder.
- 2. Do not clean the recorder with chemical reagents or cleaning reagents, which will damage the shell of the recorder and corrode it.
- 3. It is recommended not to use this recorder when driving a motor vehicle or riding a bicycle. Please ensure driving safety.
- 4. Please back up the important files in the recorder in time. No one can guarantee the absolute security of the data. If data loss occurs, the files will be difficult to recover.
- 5. It is forbidden to use overload charger or the charging cable is squeezed by heavy objects for a long time, keep away from combustibles when charging, in order to avoid fire.
- 6. It is forbidden to pull out the charger with wet hands to prevent electric shock.


Statement

We are not responsible for any loss or damage to personal data caused by software, hardware malfunction, product maintenance, battery replacement or other accidents, nor are we responsible for other indirect losses caused by them.

At the same time, we have no control over possible misunderstandings caused by users of this manual, therefore, the company will not be responsible for any accidental damage that may occur during the use of this manual, and will not be responsible for third-party claims arising from the use of it.

It is only for learning training, please strictly comply with the relevant national laws, please do not do any illegal Behavior, the company does not make any commitment and responsibility for the consequences of illegal Behavior, the final interpretation of the factory.

Documents / Resources

<div><p>Digital Voice Recorder</p><p>V63(DS) User Manual</p><p><small>Please read carefully before using, most problems can be avoided!</small></p></div>	<div><p>XIXITPY V63 Digital Voice Recorder [pdf] User Manual</p><p>V63 Digital Voice Recorder, V63, Digital Voice Recorder, Voice Recorder, Recorder</p></div>
--	--

References

- [User Manual](#)

Manuals+.