 




## Xpelair XPP Tower Fan with Remote Control Instruction Manual

[Home](#) » [Xpelair](#) » Xpelair XPP Tower Fan with Remote Control Instruction Manual 

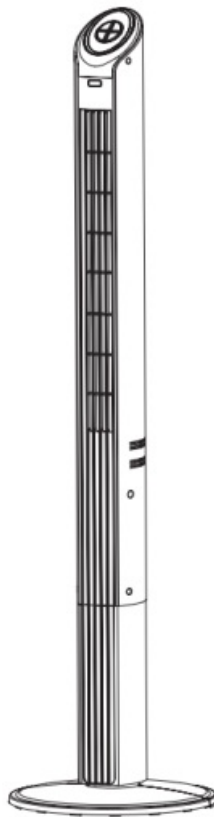

XPP

## Contents

- 1 Important Safety Advice
- 2 How to assemble the base
- 3 Operating Instructions
- 4 Remote Control
- 5 Technical Specification
- 6 Cleaning
- 7 Recycling
- 8 Guarantee
- 9 Documents / Resources
  - 9.1 References
- 10 Related Posts

## Important Safety Advice

**IMPORTANT:** THESE INSTRUCTIONS SHOULD BE READ CAREFULLY AND RETAINED FOR FUTURE REFERENCE

**WARNING:** To avoid the danger of suffocation please remove all packaging materials, particularly plastic and EPS and keep these away from vulnerable people, children, and babies.

**DO NOT** use this appliance in the immediate surroundings of a bath, a shower, or a swimming pool.

**DO NOT** use this appliance if it has been dropped.

**DO NOT** use if there are visible signs of damage to the appliance. Use this appliance on a horizontal and stable surface with the base securely fitted.

**DO NOT** use this appliance until the base is properly assembled and it is standing upright supported on and by its base only. Do not use lying down or lying at an angle against anything. Only use the appliance on a stable and level surface.

**IMPORTANT:** Electric appliances may only be repaired by qualified personnel, improper work can be a source of considerable danger for the users. If the mains lead of this appliance is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard. This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience or knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

**WARNING:** To avoid the risk of accidental strangulation from the supply cord all children and vulnerable people must be supervised when in the vicinity of the product whether it is working or not. The socket-outlet must be accessible at all times to enable the mains plug to be disconnected as quickly as possible.

**CHOKING HAZARD:** The remote control for this unit contains a small battery. To avoid the risk of choking, keep the remote away from children and do not swallow the battery. If the battery is swallowed seek medical advice at once.

**WARNING:** Keep batteries out of reach of children, and dispose of used button batteries immediately and safely.

**DO NOT** pull, carry or move the appliance using the power cable.

**IMPORTANT:** Disconnect the appliance from mains power whenever it is not in use and before moving or relocating it.

**IMPORTANT:** To unplug the appliance do not pull on the mains cable, grip the plug at the wall and pull carefully.

**NEVER** immerse the appliance in water or other liquids; never spray liquids on the appliance.

**NEVER** operate the appliance if a cable or connector has been damaged, after the appliance has malfunctioned or if the appliance was dropped or otherwise damaged in any way.

**DO NOT** operate the appliance at any voltage other than that specified on the rating label.

**WARNING:** To avoid the risk of damage or a dangerous situation do not use this appliance or position any part of it near to heat, open flame, cooking appliances or any heating appliance.

**DO NOT** use the appliance in an area where there are likely to be flammable or explosive fumes or liquids.

**DO NOT** place any heavy objects on the appliance or any object against the product when operating.

**IMPORTANT:** Should the appliance fail to operate please check the fuse in the plug is intact and confirm that the circuit breaker/fuse at your distribution board is operating before contracting the manufacturer or service agent.

**IMPORTANT:** Only use the appliance inside (indoors) and only for the purpose it was designed.

**IMPORTANT:** Unplug the appliance before cleaning. This instruction leaflet belongs to the appliance and must be

kept in a safe place. If changing owners, the leaflet must be surrendered to the new owner.

## How to assemble the base

Carefully remove the split base and the tower fan from its packaging.

Pass the power cord between the center of the two halves split the base and fit the two halves together by lining the overlap bosses on the bottom (with cable exit) with their pockets on the other half dropping into place and pressing together.

Bring the assembled base up to the bottom of the tower and line up the small pillar on the top of the raised center of the base with the matching hole in the base socket location of the tower fan, pull the cable through fully so it doesn't interfere with the fitting together.

Take the 4 large screws provided and pass them through the holes in the circular bosses (located around the central hub on the underside of the base) into the bottom of the tower, screw fix them firmly in place.

Carefully fit the cable through the slot to the backside of the hub and then through the guide location channel at the outside of the circular base to exit level with the base through the channel at the back. The XPP Cooling fan is now ready to stand and operate.

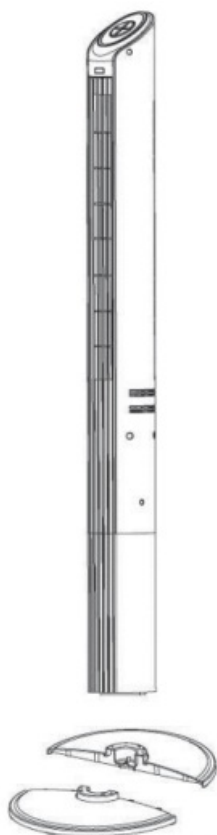 


Fig. 1

### THIS IS NOT A FAULT

 
If the fan speed varies randomly including stopping and starting automatically you have selected either NATURAL



or NIGHTTIME





Variable Blower Mode which simulates different breezy conditions. To de-select this


mode you must press the  button to change back to constant blowing mode, please refer to section 'd' following on how to change modes. To run in constant speed mode only use the button to select the speed you require, please refer to section 'b' following.


## Operating Instructions



The LED display screen on the control panel of the product illuminates to display the function you have selected when the fan is operating.


**a. Turning on/off the fan:** Gently press the "Standby" button  on the soft-touch button control panel or the wireless remote control.




**b. Adjusting and Selecting Speed:** 3 content speeds can be selected by pressing the button  either on the control panel or on the remote. Each time you press this button the speed will cycle from I to II to III and back to 'I' again. Where "I" = Low Speed, "II" = Medium Speed, and "III" = High Speed.


**c. Oscillating function:** The product oscillates in an arc from left to right and back again continuously thus circulating the airflow over a wider area. To start the tower fan oscillating simply press the oscillating button 

on the control panel for less than 2 seconds or the button on the remote and the  symbol will light up on the control panel. Press this button a second time to stop the oscillating.


**d. Variable Blower Function Selection:** The product can be set to automatically vary the speed output to simulate different breezy conditions. It will normally run in constant blowing mode at whichever speed you selected (see "b." above). To select a variable blower speed function you can simply press the  button on the remote or press and hold the dual control button  on the control panel for at least 2 seconds. There are two selections available:

1. The first mode activated will be the 'natural breeze' selection and the  symbol will light up on the control panel. In this mode, the fan speed will continuously and randomly vary between speed levels (including off) to simulate variable wind conditions.

2. Pressing the  on the remote a second time or pressing and holding the dual control button  on the control panel again for at least 2 seconds activates 'night time' selection and the  symbol will light up on the control panel. In this mode, the fan speed varies automatically between speed levels (including off) at a less noticeable rate than the 'natural breeze' selection.

– Pressing the  button a third time for more than 2 seconds will change it back to constant normal blowing mode.

 
**e. Runback Timer function:** The product can be set to switch off automatically after running for one of the four user-selectable runback periods i.e. 1 hr, 2 hr, 4 hr, or 8 hr.

To activate the runback function just simply press the timer  button

- Press once and the timer is set to 1 hr runback
- Press twice and the timer is set to 2hr runback
- Press 3 times and the timer is set to 4hrs runback
- Press 4 times and the timer is set to 8 hrs runback
- Press a 5th time and the timer function is switched off.

## Remote Control

The remote control comes complete with a CR2025 3V battery fitted. To replace the battery simply remove the securing screw, unclip and remove the battery cover on the back and replace the battery, then carefully refit the cover on the back and replace the battery, then carefully refit the cover, snap into place and refit the securing screw.

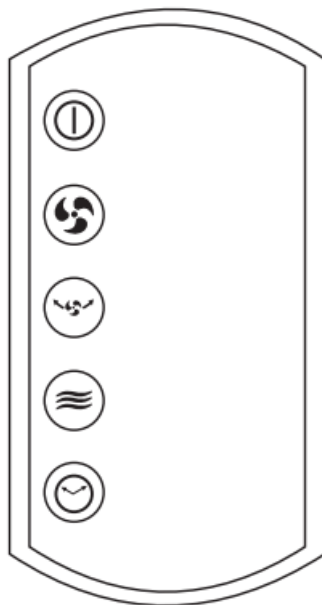

## Technical Specification

Specification Details – XPP	Symbol	Value	Unit
Maximum Fan Flow Rate	F	9.	m <sup>3</sup> /min
Fan Power Input	P	32.	W
Service Value	SV	0.3	(m <sup>3</sup> /min)/W
Standby Power Consumption	PSB	0.64	W
Fan Sound Power Level	LAW	64	dB(A)
Maximum Air Velocity	c	4.	meters/sec
Rated Voltage	V	220-240	V
Rated Frequency	Hz	50	Hz
Measurement Standard for Service Value	I EC 60879:1986		

## Cleaning

### **WARNING ALWAYS DISCONNECT FROM THE POWER SUPPLY BEFORE CLEANING THE APPLIANCE**

The fan should be cleaned at least once every two months as dust may accumulate on the grill cover which would affect performance. Do not use detergents, abrasive cleaning products or polish of any kind on the appliance. Wipe with a dry cloth to remove dust and a damp cloth (not wet) to clean off stains. Be careful not to allow moisture into the appliance. Use a vacuum cleaner to remove any fluff which does accumulate.

## Recycling



For electrical products sold within the European Community. At the end of the electrical product's useful life, it should not be disposed of within household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice in your country.

## Guarantee

### What does an Xpelair Guarantee cover?

Xpelair products deliver reliable service for normal, household use in domestic settings. All Xpelair products are individually tested before leaving the factory. If you are a consumer and you experience a problem with your Xpelair product, which is found to be defective due to faulty materials or workmanship within the guarantee period, this Xpelair guarantee will cover repair or – at the discretion of Xpelair – replacement with a functionally equivalent Xpelair product. Your product is under guarantee for 1 year from the date of purchase or the date of delivery of the product, if later. The Xpelair guarantee is conditional upon you providing the original purchase receipt as proof of purchase. Please, therefore, retain your receipt as proof of purchase. If you do experience a problem with your Xpelair product please call the Helpline on +44 [0]344 879 3588 or visit <https://www.xpelair.co.uk/support>. For ROI please email [serviceireland@glendimplex.com](mailto:serviceireland@glendimplex.com) or call +353(0)1 842 4833. We will need details of your Xpelair product and a description of the fault which has occurred. Once we receive your information and proof of purchase we will contact you to make the necessary arrangements. If your Xpelair product is not covered by this Xpelair guarantee there may be a charge to repair your product. However, we will contact you for agreement to any charges before any chargeable service is carried out.

### What is not covered by an Xpelair Guarantee?

The Xpelair guarantee does not cover any of the following: Any fault or damage to your Xpelair product due to faulty materials or workmanship occurring outside the guarantee period. Normal wear and tear including parts that might wear out over time or consumables, such as filters. Any fault or damage occurring to any pre-owned Xpelair product or to any other equipment or property. Accidental damage to your Xpelair product or damage to your Xpelair product from external sources (for example, transit, weather, electrical outages or power surges). Fault or damage to your Xpelair product is: Not due to faulty materials or workmanship or which is due to circumstances outside Xpelair's control. Caused by the use of your Xpelair product for anything other than normal domestic household purposes in the country where it was purchased. Caused by any misuse, abuse or negligent use of the Xpelair product, including but not limited to any failure to use it in accordance with the Operating Instructions supplied with the product. Caused by any failure to assemble, install clean, and maintain your Xpelair product in accordance with the Operating Instructions supplied with the product unless this was carried out by Xpelair or its authorized dealers. Caused by repairs or alterations to your Xpelair product not carried out by Xpelair service personnel or its authorized dealer(s). Caused by use of any consumables or spare parts for your Xpelair product that is not Xpelair specified.

### Terms and Conditions


The Xpelair guarantee is valid for 1 calendar year, from the date of purchase of your Xpelair product from a recognized retailer in the country of purchase and use, or the date of delivery of the product if later, always provided the original receipt has been retained and is produced as proof of purchase. You must provide to Xpelair or its authorized agents on request the original receipt as proof of purchase and – if required by Xpelair – proof of delivery. If you are unable to provide this documentation, you will be required to pay for any repair work required. Any repair work under the Xpelair guarantee will be carried out by Xpelair or its authorized dealer(s) and any parts that are replaced will become the property of Xpelair. Any repairs performed under the Xpelair guarantee will not extend the guarantee period. Any replacement of your Xpelair product by Xpelair during the guarantee period will start the 1 year guarantee period afresh from the date of delivery of the replacement Xpelair product to you. (\*Please keep your original sales receipt as proof of purchase). The Xpelair guarantee does not entitle you to the recovery of any indirect or consequential loss or damage including but not limited to loss or damage to any other property. The Xpelair guarantee is in addition to your statutory rights as a consumer and your statutory rights are not affected by this Xpelair guarantee.

**Contact Xpelair** A brand of Glen Dimplex UK Limited, trading as Dimplex Heating & Ventilation. If you have any questions about what the Xpelair Guarantee covers and does not cover or how to claim under the Xpelair Guarantee, please contact us: Glen Dimplex Heating & Ventilation, Grange Drive, Hedge End, Southampton SO30 2DF Telephone: 0344 879 3588 Visit: [www.xpelair.co.uk](http://www.xpelair.co.uk)



This product complies with all the required European and UK Product Safety, Electromagnetic Compatibility and Environmental Standards. They are fully compliant with the LVD, EMC, RoHS and Eco Design Directives and Regulations.

Documents / Resources

	<p><a href="#">Xpelair XPP Tower Fan with Remote Control</a> [pdf] Instruction Manual XPP Tower Fan with Remote Control, XPP, Tower Fan with Remote Control</p>
---	---

References

- [Home | Xpelair](#)