



## XPOtool 30190 Loading Ramp User Manual

[Home](#) » [XPOtool](#) » XPOtool 30190 Loading Ramp User Manual 

### Contents

- [1 XPOtool 30190 Loading Ramp](#)
- [2 Introduction](#)
- [3 Safety instructions](#)
- [4 Use](#)
- [5 Cleaning and maintenance](#)
- [6 Technical specifications](#)
- [7 Documents / Resources](#)
  - [7.1 References](#)
- [8 Related Posts](#)

## XPOtool 30190 Loading Ramp



Please read and follow the operating instructions and safety information prior to initial operation.  
Technical changes reserved!  
Illustrations, functional steps, and technical data may deviate insignificantly due to continuous further developments.

The information contained in this document may alter at any time without prior notice. No part of this document may be copied or otherwise duplicated without prior written consent. All rights reserved. WilTec Wildanger Technik GmbH cannot be held liable for any possible mistakes in this operating manual, nor in the diagrams and illustrations shown.

Although WilTec Wildanger Technik GmbH has made every possible effort to ensure that this operating manual is complete, accurate, and up-to-date, errors cannot be ruled out entirely.

If you have found an error or wish to suggest an improvement, we look forward to hearing from you. Send us an e-mail to:

[service@wiltec.info](mailto:service@wiltec.info)

or use our contact form:

<https://www.wiltec.de/contacts/>

The most recent version of this manual in several languages can be found in our online shop:

<https://www.wiltec.de/docsearch>

Our postal address is:

WilTec Wildanger Technik GmbH

Königsbenden 12

52249 Eschweiler Germany

To return your goods for exchange, repair, or other purposes, please use the following address. Attention! To allow for a trouble-free complaint or return, it is important to contact our customer service team before returning your goods.

Retourenabteilung

WilTec Wildanger Technik GmbH

Königsbenden 28

52249 Eschweiler Germany

E-mail: [service@wiltec.info](mailto:service@wiltec.info)

## Introduction

Thank you for choosing to purchase this quality product. To minimise the risk of injury, we ask you to always take some basic safety precautions when using this product. Please read this operating manual carefully and make sure that you understand it.

Keep these operation instructions in a safe place.

## Safety instructions

Always wear protective gloves!

**Warning!** Danger of injuries and damages if used improperly!

- Always respect and abide the safety instructions.
- Keep persons not involved in loading well away from the loading ramp.
- Avoid working alone. When working in pairs or with more persons, you will be able to assist one another if anything unforeseen happens.
- Always make sure that the working zone is sufficiently lit.
- Wear suitable clothing. Do not wear loose clothing or jewellery. They could get caught by moving parts. Wear non-conductive clothes, solid non-skid shoes, and work gloves.
- Protect long hair under a hairnet or tie it safely together.
- Wear protective goggles and hearing protection.
- Make for a secure footing to be able to keep your balance.
- Only use the device as described in the manual; otherwise, damages might occur and warranty might expire. Never exceed the max. admissible capacity.
- Always be careful. Do not use the device when being tired or under the influence of alcohol, drugs, or medicine.
- Before operating the device, check it for damages. Have all damaged components replaced by an expert.
- Only use original spare parts. When using non-original spare parts, warranty will expire. Only use spare parts suitable for the device.
- All maintenance work must be done by an expert.
- Only use the device on a flat, level, and solid surface. Make sure that the end with the hooks/latch(es) rests completely on the rear flap or loading space of the vehicle.
- Make sure that the ramp is free of dirt, grease, and oil. Slip danger!
- After unpacking, check for completeness of components.

## Use

- Keep animals and people away from the ramp and loading space.
- Never load a vehicle with the engine running. To be absolutely sure, wait for the engine to cool down before loading.
- Never exceed the max. admissible weight rated. Load slowly. Do not drop anything onto the ramp. Dropping a load onto the ramp might reduce the capacity and lead to damages and/or injuries. Only use the device on a hard, level, solid surface.

## Loading a motorcycle

- This work should be done by 3 individuals.
- Make sure that the ramp is free of dirt, grease, and oil. Slip danger!
- Make sure that the end with the hooks/latch(es) rests completely on the rear flap or loading space of the vehicle.
- Make sure that there is one person at either side of the motorcycle. Each person must hold the handlebar or front-wheel fork to guide the motorcycle.
- With the other hand, they must hold the rear side of the seat or the rear-wheel fork. The third person must stand behind the motorcycle to push it. After that, the person must stand on the loading space to guide the motorcycle.
- Set the motorcycle to idle cycle.
- During loading, make sure that the ramp cannot move and the hooks/latch(es) still rest completely on the rear flap. If they do not, roll the motorcycle back with care and repeat.

## Cleaning and maintenance

- Remove all greasy substances from the ramp, e.g., dirt, fat, oil, to avoid any slip danger.
- Regularly check the device for damages.
- Tighten all screws and nuts before each use.

## Technical specifications

Item number		30181	30182	30183	30184	30185	30186
Size ( )	opened	1820×305	2260×295	2260×305	2230×290	2260×305	2260×305
	closed	910×305	1160×295	1160×305	1170×290	1160×305	1160×305
Max. capacity ( )		200	340	340	340	340	680
Weight ( )		7.3	8.5	8	8.4	8	9


Item number		30187	30189	30190	30192	30193	30194
Size ( )	opened	1830×380	3100×305	1600×177	2280×280	2150×280	2260×295
	closed	920×380	1650×305	(1)	1156×280	1100×280	1160×295
Max. capacity ( )		110	540	270	680	340	410
Weight ( )		7.55	18.3	4.3	13	8.7	10.9

Item number		30195	30196	30199	30200	30201	
Size ( )	opened	2260×305	2740×450	1920×163	1610×305	1630×163	
	closed	1160×305	1410×450	(1)	(1)	(1)	
Max. capacity ( )		340	400	182	2025	182	
Weight ( )		7.7	21.6	4.4	14.8	3.6	

### Important Note:

Reproduction and any commercial use (of parts) of this operating manual, requires a written permission of WilTec Wildanger Technik GmbH.

## Documents / Resources

	<p><a href="#">XPOtool 30190 Loading Ramp</a> [pdf] User Manual  30181 30187, 30189, 30192 30196, 30199 30201, 30190, Loading Ramp, 30190 Loading Ramp, Ramp</p>
---	--

## References

- [WilTec - Ihr Online Händler für Haus, Garten, Werkstatt & Freizeit](#)