



xpr MTPX-OSDP-EH CSN Reader with OSDP Interface Instruction Manual

[Home](#) » [xpr](#) » xpr MTPX-OSDP-EH CSN Reader with OSDP Interface Instruction Manual 

xpr MTPX-OSDP-EH CSN Reader with OSDP Interface Instruction Manual



Contents

1 SPECIFICATIONS

2 MOUNTING

3 WIRING

4 Ferrite Core Wrap the wires around the ferrite core (1 turn). The ferrite core is provided with the kit and it is used to reduce the EMI Connection reader to OSDP controller Recommended cabling: Multiconductor cable 2 twisted pair with shielding .Max length: up to 1200m.The cable shielding will be connected to the fixing clamp of the access unit.

5 VISUAL AND AUDIO SIGNALIZATION

6 SOFTWARE SETTINGS

7 CONNECTION TO PC

8 Documents / Resources

8.1 References

9 Related Posts

SPECIFICATIONS

Technology: Proximity (125 KHz)

Interface: RS-485, OSDP compatible

Supported credentials: EM4100, HID Compatible

Read range: Up to 6 cm

Power supply: 9 – 14 VDC, 110mA

Sound Indicator: Internal buzzer

LED Indicators: Red, Green and Orange (Red + Green)

Environmental rating: Outdoor, IP65

Operating humidity: 5% – 95% relative humidity, non-condensing

 
Operating temperature: -20°C to 50°C

Mounting: Surface mount


Panel connection: Cable 0.5 m

Dimensions (mm): 92 x 51 x 27



MOUNTING

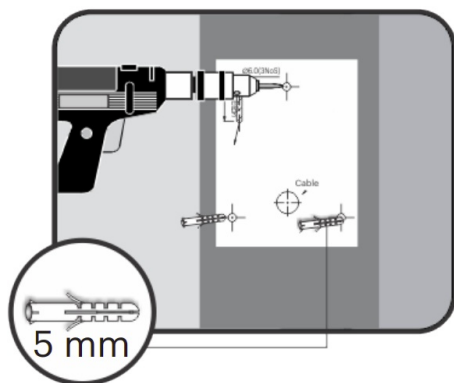

 - 1.
2. 3 (3 x 30mm)

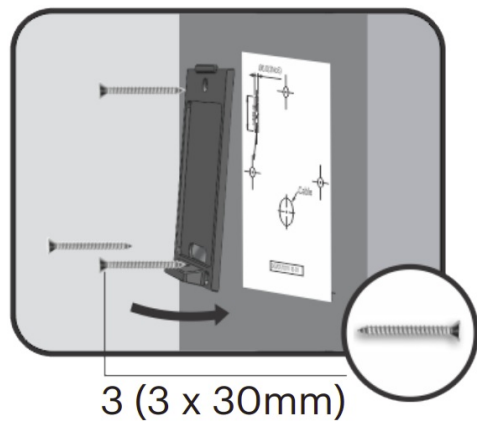

  3. 1 (M3 x 6mm)

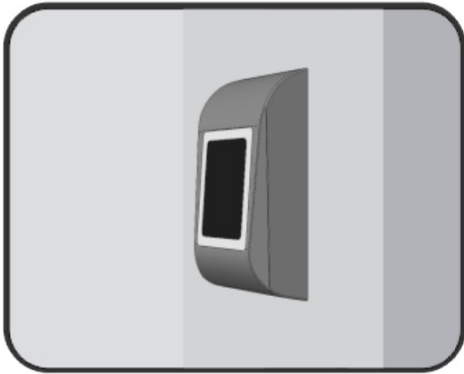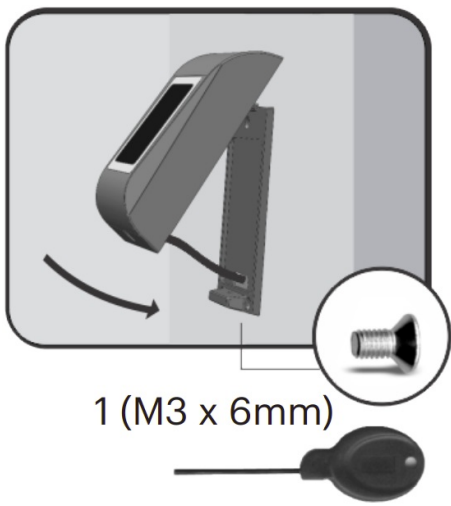


4.

Rubber gasket

Front



 Back

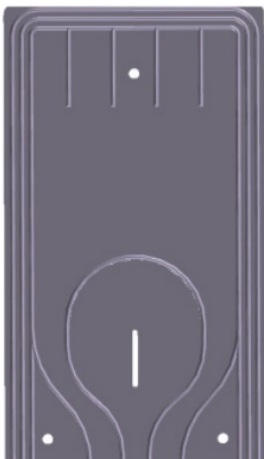


Mounting base (optional)



WIRING

RS-485 bus termination

 
120 ohm OFF
2-OFF

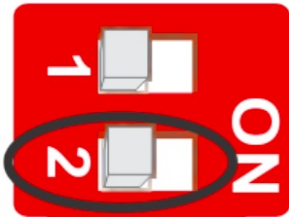

120 ohm ON
2-ON




 Ferrite Core

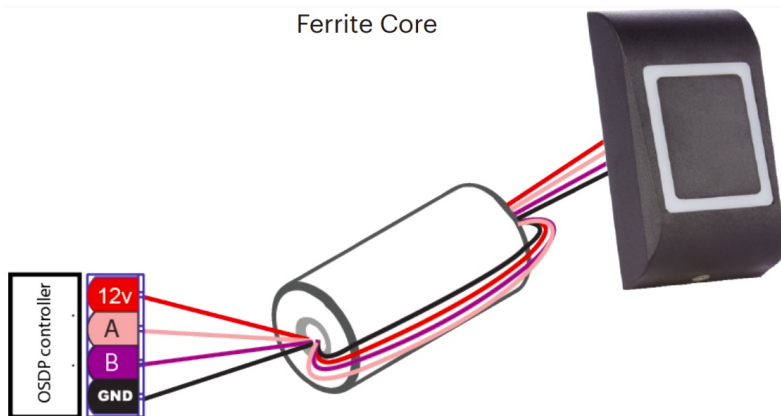

Wrap the wires around the ferrite core (1 turn). The ferrite core is provided with the kit and it is used to reduce the EMI

 Connection reader to OSDP controller

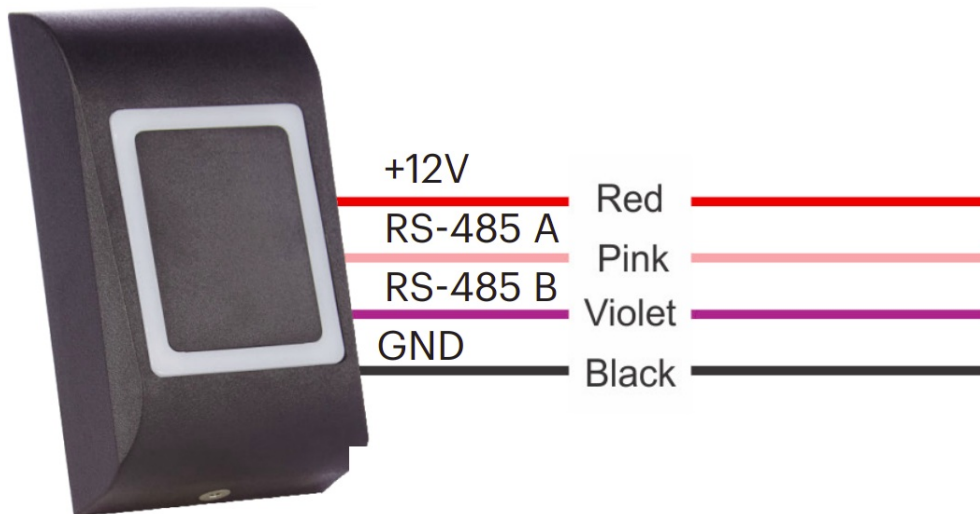

Recommended cabling:

Multiconductor cable 2 twisted pair with shielding .Max length: up to 1200m.The cable shielding will be connected to the fixing clamp of the access unit.

PROGRAMING AND SETTINGS

Procedure for SCBK (Secure key for OSDP communication) Reset: Power the reader. Set DIP Switch 1 to ON and in the less than 5 sec set it back to OFF position.



 
VISUAL AND AUDIO SIGNALIZATION

All signalization is managed by the OSDP controller except: Reader OFF Line: Red blinking LED.

SOFTWARE SETTINGS

XPR Toolbox is software for settings and firmware update of the reader. Reader is ready to be used “out of the box”, so is not required to be configured by the software. XPR Toolbox can be downloaded from <https://software.xprgroup.com/>

CONNECTION TO PC

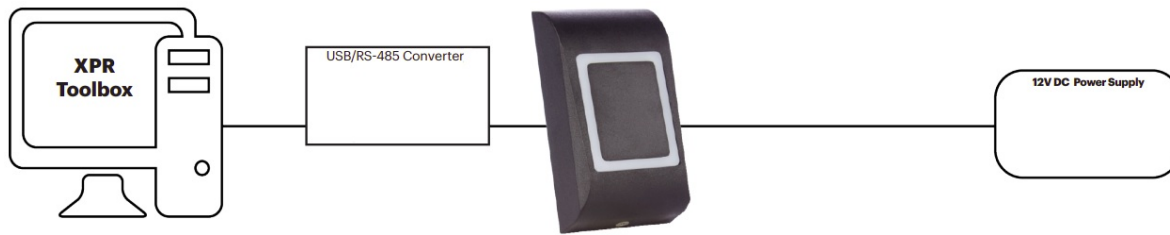


To setup the reader or update the firmware, run the XPR Toolbox and select "OSDP Standard readers" and "MTPX-OSDP-EH" and click on "Open" tab. Follow the instruction in the software to set up or update firmware.

CE This product herewith complies with requirements of EMC directive 2014/30/EU, Radio Equipment Directive 2014/53/EU. In addition it complies with RoHS2 directive EN50581:2012 and RoHS3 Directive 2015/863/EU



Documents / Resources

	<p>xpr MTPX-OSDP-EH CSN Reader with OSDP Interface [pdf] Instruction Manual MTPXS-OSDP-EH, MTPXBK-OSDP-EH, MTPX-OSDP-EH CSN Reader with OSDP Interface, CSN Reader with OSDP Interface, Reader with OSDP Interface, OSDP Interface, Interface</p>
---	---

References

- [XPR Group - Safe access systems provider](#)
- [XPR Group. Downloads](#)