

XTECH XTS-702 FIERCE Party Loudspeaker System User Manual

[Home](#) » [XTECH](#) » XTECH XTS-702 FIERCE Party Loudspeaker System User Manual 



FIERCE
Party loudspeaker system Bluetooth ® compatible

Contents

- [1 Introduction](#)
- [2 Package content](#)
- [3 Product overview](#)
- [4 Initial setup](#)
- [5 Operating modes](#)
- [6 Advanced operation](#)
- [7 Technical specifications](#)
- [8 Precautions](#)
- [9 FCC statement](#)
- [10 Documents / Resources](#)
- [11 Related Posts](#)

Introduction

Congratulations on the purchase of your new Xtech portable party speaker with wireless technology. We invite you to visit us at www.xtechamericas.com for support and to find out more about this audio system and other new and exciting products.

Main features

- 6.5in party loudspeaker system with Bluetooth® wireless technology
- Features integrated LED lights for a dynamic and an exciting music experience
- Lightweight and portable thanks to its convenient heavy-duty handles
- USB, MicroSD™, and 3.5mm auxiliary ports seamlessly integrate multiple audio sources
- A rechargeable built-in battery provides many hours of continuous playtime
- High-quality wired microphone for karaoke entertainment Image

Package content

To get the most of your speaker system, please take a few minutes to read the following instructions and familiarize yourself with the operation of the unit. Before setting up the device, make sure that the following items are included in the box:

- Party loudspeaker system (1)
- Micro USB cable(1)
- Auxiliary 3.5mm to 3.5mm cable(1)
- Wired microphone(1)
- Quick installation guide(1)

Unpack your unit carefully. We recommend that you save the box and all original packing materials, in case you wish to store the unit, or if you ever need to return it for service.


Product overview

Front view







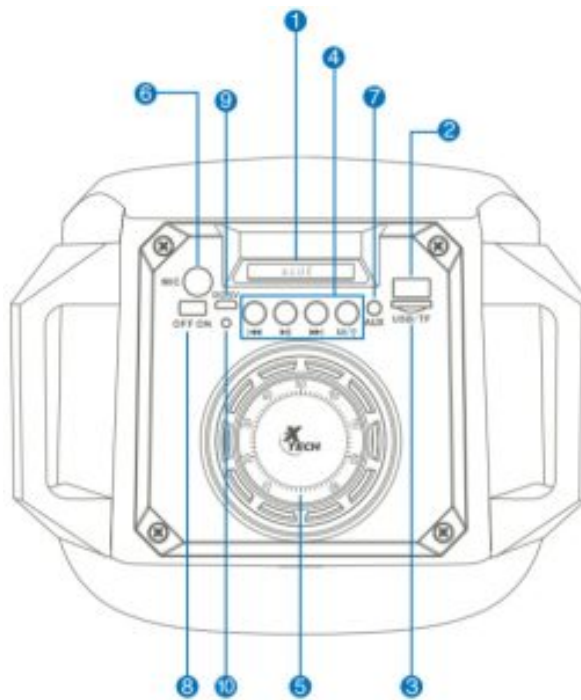


1. Metallic grid
2. Impact-resistant molded enclosure
3. 6.5in driver
4. Heavy-duty handle

Media panel controls



1. LED display
2. USB port
3. MicroSD™ (TF) card slot
4. Media panel

- a. Mode selector button M/ 
- b. Play/Pause button 
- c. Previous track button 
- d. Next track button 
- 5. Volume knob
- 6. 1/4in Mic input jack
- 7. Aux input
- 8. Power On/Off switch
- 9. DC 5V Micro USB port for power input
- 10. Battery status LED indicator

Control	Description
1. LED display	This screen displays the selected input mode: Bluetooth [®] , USB, Aux, MicroSD [™] and FM, the volume level, the track being played, and the selected channel. Note: Remove the plastic film protector from the LED display before using the loudspeaker.
2. USB port	Enables audio playback from MP3 and WMA music files stored in a USB flash drive.
3. MicroSD [™] (TF) card slot	Enables audio playback from MP3 and WMA music files stored in a MicroSD [™] card (maximum 32GB).
4. Media panel	Allows the selection and control of the available audio sources. Line-In, Bluetooth [®] , MicroSD [™] , USB, and FM tuner. The mode symbol lights up when the selected source is being played (USB, BLUE, SD, LINE).
4a. Mode/LED button M/ 	Press this button to cycle through the different audio modes: Line-In, Bluetooth [®] , FM, USB, and SD [™] . Note: the USB and SD [™] sources need to be connected to be recognized by the unit to follow this sequence. If these sources are not connected, they will not be recognized as an input source on the display. Press and hold this button to turn ON/OFF the LED lights.
4b. Button 	In USB, MicroSD [™] , or Bluetooth [®] mode, press this button to start and pause media. In FM mode, press and hold to initiate the scanning of channels from the lowest up to the highest frequency, and store them automatically as presets in the memory. This button doesn't work in the auxiliary mode.
4c. Previous track button 	Press this button to select the previous track on your playlist. Available in Bluetooth [®] , MicroSD [™] , USB, and FM tuner modes. In the FM tuner mode, press this button briefly to tune to the previous station. Press and hold this button to decrease the volume. This button doesn't work in the auxiliary mode.

Control	Description
4d. Next track button ►►	Press this button to select the next track on your playlist. Available in Bluetooth [®] , MicroSD [™] , USB, and FM tuner modes. In the FM tuner mode, press this button briefly to tune to the next station. Press and hold this button to increase the volume. This button doesn't work in the auxiliary mode.
5. Volume knob	Use this knob to control the master volume level of the speaker. Turn it clockwise to increase the volume or counterclockwise to lower the volume level of the speaker.
6. 1/4in Mic input jack	This 1/4in microphone input will be used to connect a wired microphone.
7. Aux input	Connect a CD player, digital media player, a mobile phone, or another audio source to this 3.5mm stereo line-in connector.
8. Power On/Off switch	Use this switch to turn the speaker on or off.
9. DC 5V/1A micro USB port	Use this port to power the unit and/or to charge the battery of the loudspeaker.
10. Battery status LED indicator	The LED light will turn red to indicate that the battery is being charged. It will turn green when the battery is fully charged.

Initial setup

Note: For your safety, read this manual and follow all safety instructions before using this product.

- Turn the volume control knob fully counterclockwise.
- First, connect all the audio input devices to the loudspeaker. Make sure all input sources (microphones, CD players, digital media players) are turned off and the volume settings are set to their lowest level.
- Connect the loudspeaker to a power source (if the speaker is not being used in battery mode).
- Turn the power switch to the ON position.
- Turn the volume (of the loudspeaker and all the audio sources) clockwise until the sound output is at the desired level.

Note: If there is no sound, check to make sure the source equipment is providing audio.

Charging the battery

- When the unit is not in use or switched off, it will automatically recharge the internal battery as long as it remains connected to the power source.
- While charging, the LED lights up in red. When the battery has reached full capacity, the light will turn green.
- Turn off the loudspeaker when not in use to conserve battery life.

Operating modes

Auxiliary mode operation

Recommendation: The supplied 3.5mm to 3.5mm auxiliary cable has to be used to enable audio playback from devices fitted with an auxiliary 3.5mm jack.

- a. Set the loudspeaker to the LINE IN mode by pressing the MODE button on the control panel. (A voice prompt will indicate Line-in mode).
- b. Connect one side of the 3.5mm auxiliary cable to the auxiliary port on the speaker and the other side of the cable to the audio source of choice.
- c. Start streaming audio files directly from the audio source of choice. Press the Play/Pause button, to play or pause the audio.

MicroSD™/USB mode operation

Recommendation: Use a USB flash drive or micro-SD TM card to enable audio playback from compatible files stored in this type of device.

- a. First, connect a USB flash drive or MicroSD™ card to the port of the speaker.
- b. The loudspeaker will automatically change to the USB or MicroSD™ mode when the source device is connected. If this does not happen set the loudspeaker to the MicroSD™ or USB mode by pressing the MODE button on the control panel. (A voice prompt will indicate the mode corresponding to the audio source inserted: MicroSD™ or USB).
- c. Start streaming audio files directly from the source of choice. Press the Play/Pause button, to play or pause the audio.

FM tuner mode operation

- a. Press the Mode button to toggle through the different modes available until the FM tuner mode is prompted.
- b. Press and hold the **Play/Pause** button to initiate the scanning of channels from the lowest up to the highest frequency, and store them automatically as presets in the memory. The **FM** indication will be displayed during this process and the speaker will automatically save the searched station and store it in P01, P02, P03, etc. Press the **Play/Pause** button briefly again to stop the search at any time.
- c. Once the searching process has been completed, the unit will automatically select P01. Press the **Previous track** or **Next track** buttons to switch to a different radio station. Press the **Play/Pause** button briefly to mute the stations, the FM indication will be displayed.

Note: If during the FM mode operation a USB flash drive or MicroSD™ card is connected, the system will automatically switch to USB/MicroSD™ mode. Press the **Mode** button to go back to FM mode.

Advanced operation

Pairing the speaker with wireless devices

Note: Before installing this product, please make sure your device is compatible with Bluetooth®.

1. Turn the power switch on located on the Media panel of the unit. Hi, will appear on the screen.
2. Enable the Bluetooth® feature on your audio device and set it to discover the wireless speaker.
3. Remember to place your wireless device and the speaker not more than one meter away from each other.
4. Next, cycle to the Bluetooth® feature on the speaker by pressing the MODE button found on the media panel and selecting it as the input source. The unit will emit a short tone followed by a blinking "bLUE" word on the LED panel to indicate that the speaker has entered into the pairing mode.
5. Once the speaker appears listed under the newly found Bluetooth® devices (XTS-702) of your wireless device, it will ask if you want to pair with it.
6. Accept by pressing Yes or Ok. If you have a lower Bluetooth® version, you may be prompted to enter the passkey 0000 (4 zeros).

7. When pairing is successful, another tone will be heard through the speaker and the word “bLUE” will stop blinking (solid-state). If after 60 seconds the pairing process fails, please repeat steps 1 through 6 described above.
8. You can now start streaming audio through the speaker wirelessly from your favorite Bluetooth®- enabled devices.
9. The speaker will re-pair automatically with memorized devices after being turned off and on again.

Technical specifications

Device	
Type	6.5in party loudspeaker system Bluetooth ® compatible
Maximum power output (RMS)	50W
DC input	5V/1A
Speaker	
Driver unit	Satellite speakers: 2×6.5in
Frequency	20Hz-100Hz
Impedance	6.5in@3Ω
Sensitivity	83dB±3db
Signal to noise ratio	≥70dB
Microphone	
Directivity	Omnidirectional
Frequency	50HZ-13KHZ±3db
Impedance	600Ω
Sensitivity	12db(-95dbm)
Connectivity	
Connection type	USB, SD™ (TF), Bluetooth ® (wireless), Aux (wired) and one ¼in jack for microphone
Memory card slot	USB, MicroSD™ (TF card)
Wireless RF frequency	2.4GHz-2.480GHz
Wireless range	10m
Battery	
Type	3.7V 2000mAh, lithium-ion cell
Charging time	5 hours
Runtime	Up to 8 hours at 50% capacity*
Charging method	Micro USB 5V/1A

Additional information	
LED lighting effects	Yes
Dimensions (LxWxH)	9x8.2x20.4in
Weight	6lb
Color	Black
Cable length	4ft
Warranty	1 year

Precautions

- Do NOT use this unit for anything other than its intended use.
- Do NOT expose the speaker to excessive heat or to direct sunlight for long periods of time.
- Do NOT expose the speaker to rain or water, and avoid environments with high humidity or dust.
- Do NOT disassemble, repair, or modify the speaker yourself.
- Do NOT use cleaning products that contain benzene, solvents, or alcohol.
- Do NOT use near a microwave oven or wireless LAN products.
- Do NOT place containers with liquid on top or near the speaker.
- Do NOT place objects which are sources of heat on the speaker cabinet such as lighting equipment or smoke machines
- Do NOT stack the speaker cabinet in a manner that could cause injury should a cabinet become dislodged.

FCC statement



This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



Xtech ® is a registered trademark. All word mark is registered trademark right reserved. The Bluetooth ® owned by Bluetooth SIG, Inc. MICRO SD™ and SD™ are trademarks owned by SD-3C, LLC. Other trademarks and trade names are those of their respective owners. Any mention of such is only intended for identification purposes and is not to be construed as a claim to any rights pertaining to, sponsorship by, or affiliation with, those brands. Made in China.

Documents / Resources

  <small>FIERCE Party Loudspeaker System Bluetooth compatible XTS-702</small>	<p>XTECH XTS-702 FIERCE Party Loudspeaker System [pdf] User Manual</p> <p>XTS-702, FIERCE Party Loudspeaker System</p>
---	--

Manuals+