



XTOOL J2534 XVCI Max Programming Master of OEM Software Tool Device User Guide

[Home](#) » [XTOOL](#) » XTOOL J2534 XVCI Max Programming Master of OEM Software Tool Device User Guide 

XTOOL J2534 XVCI Max Programming Master of OEM Software Tool Device User Guide



Contents

- [1 Open the XVCI Max software](#)
- [2 Connect the XVCI Max device](#)
- [3 Install the OEM driver](#)
- [4 Start the OEM diagnostic software](#)
- [5 Documents / Resources](#)
- [6 Related Posts](#)

Open the XVCI Max software

XVCI Max management software has been installed in our company's products.



Connect the XVCI Max device

Before using the device, the hardware must be correctly connected. The vehicle end is connected to the vehicle through the OBD-II diagnostic cable, and the PC end is connected to the PC through the USB



XVCI Max device connection diagram



Install the OEM driver

Click the [Vehicle Diagnosis] tab of the XVCI Max software, and then click [My Application] on the left side of the page, where the authorizations that the customer has are displayed. Click "JLR SDD", the driver installation interface will pop up: click [Install]. If the JLR SDD driver has been installed in the JLR-SDD system, if there is a JLR SDD driver update, click [Update] here to update





JLR SDD driver installation is complete, click [close] to complete the installation



Start the OEM diagnostic software

Click the [Vehicle Diagnosis] tab of the XVCI Max software, then click [My Application] on the left side of the page, click [JLR SDD], in the pop-up dialog box, click [Operation] to start JLR SDD diagnosis program.

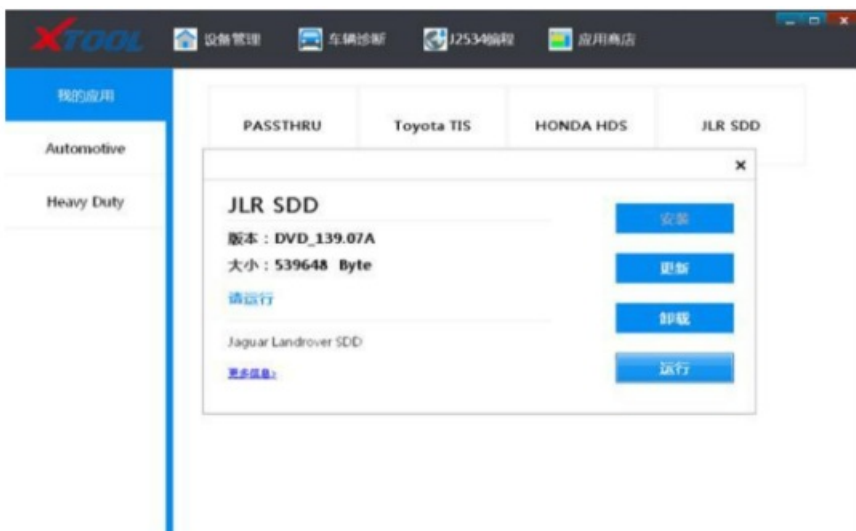

	<p>XTOOL J2534 XVCi Max Programming Master of OEM Software Tool Device [pdf] User Guide</p> <p>J2534, XVCi Max Programming Master of OEM Software Tool Device</p>
---	---