



## XTREME XLB7-1033-BLK Multicolor Light Bar with Multi-Position Base User Manual

[Home](#) » [Xtreme](#) » XTREME XLB7-1033-BLK Multicolor Light Bar with Multi-Position Base User Manual 



MULTICOLOR  
LIGHTBAR  
WITH MULTI-POSITION BASE



## Multicolor Light Bar

### Contents


- [1 FEATURES](#)
- [2 SETUP](#)
- [3 REMOTE CONTROL](#)
- [4 CHANGING REMOTE CONTROL BATTERY](#)
- [5 SPECIFICATIONS](#)
- [6 ONE YEAR WARRANTY](#)
- [7 IMPORTANT SAFETY INFORMATION](#)
- [8 Documents / Resources](#)
- [9 Related Posts](#)

## FEATURES

- 8 static and 4 dynamic color settings with 4 sound-reactive modes
- Sound reactive LED's flash to the beat of music
- Multi-color and dimmable LED lighting effects
- The multi-position base for horizontal and vertical mounting orientations
- Includes remote control with up to 15 ft range into any 5V USB power source (not included)
- Conveniently plugs into any 5V USB power source (not included)

## SETUP

1. Determine where and in what orientation you would like to use our Multicolor Light Bar

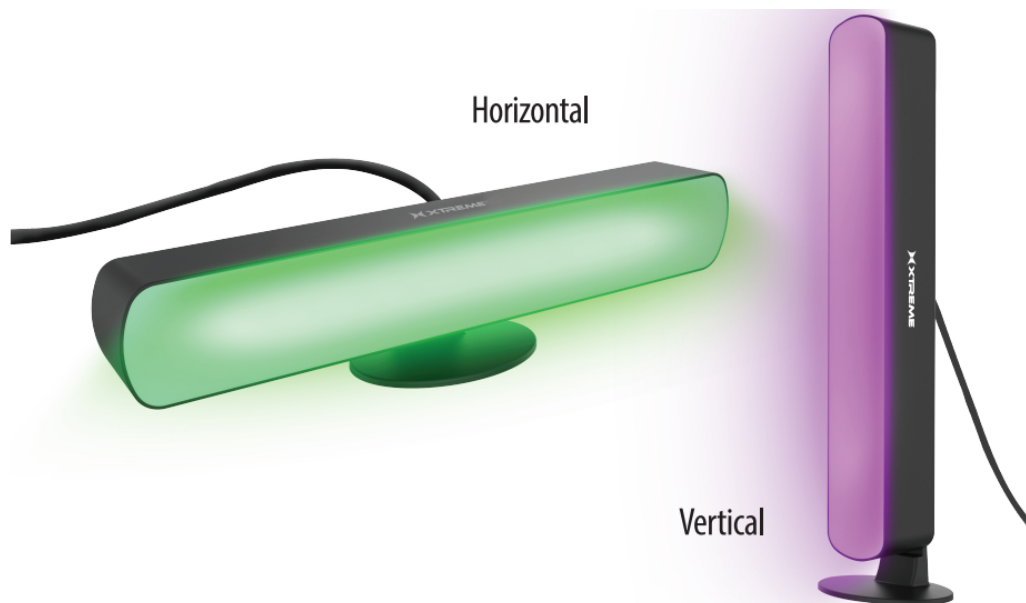

2. Slide base into either slot, one in the middle of the light bar for horizontal viewing. The other is at the end of the light bar for vertical viewing.
3. Plug USB end of cord into a 5V USB home charger (not included).
4. Use the included remote control to power on/off, change colors and set color modes .

## REMOTE CONTROL

### Operation:

1. Turn on the Light Bar by pushing the ON button on the remote control.
2. Select the desired color of the desired effect by pushing the corresponding button on the remote control.
3. Set the desired brightness using the buttons to increase/decrease the intensity of color.
4. Push the OFF button to turn off the Light Bar.



1	Dimmer Buttons	Adjust Brightness/Intensity
2	On Button	Turn product On
3	Off Button	Turn product Off
4	Multi-Color Selector	Change the color to match your mood
5	Music Reactive Mode	Changes color with the beat of music
6	Color Modes	Fading/Jumping between colors

## CHANGING REMOTE CONTROL BATTERY

The battery for the remote control has already been installed. Remove the battery pull tab to operate.

1. The battery compartment is located on the narrow side of the remote control.
2. Remove the empty battery and insert a 3V battery, type CR2025. The positive terminal must point upwards.
3. Place the battery compartment back in the remote control so it locks in place.

## SPECIFICATIONS

Light Bar (USB)	5V
Output	1.5W
Cable Length	3FT
Remote Control	3V (1x3V Battery, Type CR2025)

## ONE YEAR WARRANTY

Xtreme warrants its products for ONE YEAR against defects in manufacturing under regular consumer use with original receipt of retail purchase.

We believe in our products and want to provide you with a replacement if needed, but we have to know about the problem while the product is still under warranty. If you discover a defect covered by this warranty, please contact us about receiving a replacement. In order to use the products warranty, the customer must provide proof of the retailers receipt.

Any customers outside of the U.S. will be responsible for shipping and handling charges if a replacement is required that is not due to a manufacturing defect. If there is not a manufacturing defect, shipping and handling will be applied.

**Xtreme's warranty is limited to our products only. Our warranty does not cover the replacement or repair cost of any third-party accessory, electronic device, or personal property.**

For instructions about how to obtain warranty service for your product, please contact Customer Service at [customerservice@xtremecables.com](mailto:customerservice@xtremecables.com)

### Package Contents:

Multicolor Light  
Bar with 3ft USB Cord  
Remote Control  
Multi-Position Base  
User Manual

## IMPORTANT SAFETY INFORMATION

Please read and understand all instructions before using this product. If is caused damage by failure to follow the instructions, this warranty is null and void.

- Keep these instructions.
- Do not drop, puncture, or disassemble this product.
- Do not expose this product to or dripping splashing of drinks or liquids of any kind.
- Avoid long exposure to direct sunlight, which may cause damage.
- Do not expose this product to open flames.
- Do not use the product in a strong magnetic field.

- Use a clean, soft cloth to clean. Do not use corrosive cleaners/oils to clean. any
- Do not attempt to repair the device or open the unit as this will void the warranty.

## NOTICE

### FCC Statement:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### Warning:

or modifications not expressly approved by the party responsible Changes for compliance could void the user's or warranty authority to operate the equipment.

## Documents / Resources

 <p>XTREME MULTICOLOR LIGHT BAR ENGLISH © 2014 Xtreme Ltd. www.XtremeLtd.com</p>	<p><a href="#">XTREME XLB7-1033-BLK Multicolor Light Bar with Multi-Position Base</a> [pdf] User Manual XLB7-1033-BLK, Multicolor Light Bar with Multi-Position Base</p>
---	--