



XUNCHip XM91 Rail Type Analog Acquisition Module User Manual

[Home](#) » [XUNCHip](#) » XUNCHip XM91 Rail Type Analog Acquisition Module User Manual 

XUNCHip XM91 Rail-type analog acquisition module User Manual File Version: V23.12.26



Shanghai XUNCHIP Industrial Co., Ltd XUNCHIP Brand Division

XM91 using the standard RS485 bus MODBUS-RTU protocol, easy access to PLC DCS and other instruments or systems for monitoring DC10V voltage, DC10V voltage state quantities. The internal use of high-precision sensing core and related devices to ensure high reliability and excellent long-term stability, can be customized RS232, RS485, CAN, 4-20mA, DC0~5V/10V, ZIGBEE, Lora, WIFI, GPRS and other output methods.


Contents

- [1 Technical Parameters](#)
- [2 Product Size](#)
- [3 Communication protocols](#)
- [4 Wiring](#)
- [5 Application solution](#)
- [6 Communication Protocol](#)
- [7 Disclaimer](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)

Technical Parameters

Technical parameter	Parameter value
Brand	XUNCHIP
Input Signal	DC0~10V voltage
Input Signal	DC0~10V voltage
Communication Interface	RS485
Default baud rate	9600 8 n 1
Power	DC5~24V 1A
Running temperature	-30~85°C
Working humidity	5%RH~90%RH

Product Size

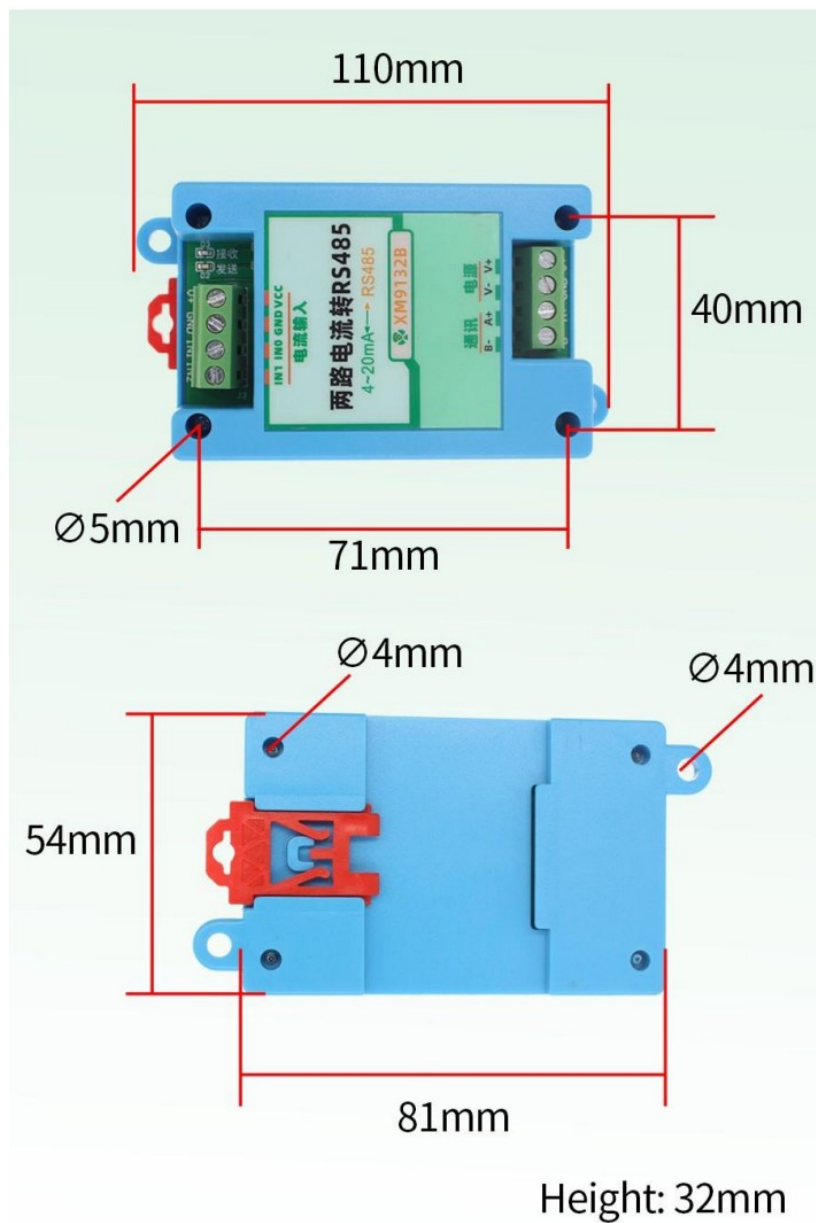

Communication protocols

All operation commands are hexadecimal data, and the default communication baud rate: 9600,8,N,1

Read the data function code 03

Query frame (hexadecimal), send example: query 1# device 1 data,

The host computer sends the command: 01 03 00 00 00 02 C4 00B.A

Command description	Device address	Feature codes	Start address	The length of the data
Device address	01	03	00 00	00 02

Response frame (hexadecimal): 01 03 02 02 18 B9 2E

Device address	Feature codes	length	Data 1	Data 2	Feature codes
1	3	4	79	00 7A	DB EA

Data description: The data in the command is hexadecimal, take data 1 as an example, 00 79 is converted to decimal value is 121, For voltage: If the data magnification is 1, the true value is $121/1=121$ in mV. For current: If the data magnification is 1, then the true value is $121/1=121$ in ma.

A table of commonly used data addresses

Configure the address	Register address	illustrate	Data type	Range of values
40001	00 00	1#Analog registers	Read only	0~65535
40002	00 01	2#Analog registers	Read only	0~65535
40101	00 64	Model number	Read only	0~65535
40102	00 65	The total number of measurement points	Read/Write	1~20
40103	00 66	Device address	Read/Write	1~249
40104	00 67	Polt rate	Read/Write	0~6
40105	00 68	Communication mode	Read/Write	1~4
40106	00 69	Protocol type	Read/Write	1~10

Wiring

	ogotype	illustrate	remark
Power input and communications	VCC	The power input is positive	DC5~24V
	GND.	The power input is negative	
	A+	485A+	correspondence
	B-	485B-	
Power output and signal output	VCC	The power output is positive	Power output module to the device
	GND	The power output is negative	
	IN0	Voltage 1 input	Maximum input voltage It must not exceed DC24V
	IN1	Voltage 2 input	

※ The conversion module only needs one end of the power supply to work, and the other end of the power supply is prepared for the power supply of the rear stage, if the power supply is not carried out for the rear stage, it can be used in the air.

Wiring instructions

In the case of broken wires, wire the wires as shown in the figure. If the product itself has no leads, the core color is for reference.


How to use?

The rail-type analog acquisition module can be used in various occasions that require converters such as intelligent industry, environmental monitoring, distribution box, agriculture, home, construction site, etc




Application solution

■ Stand-alone application scheme

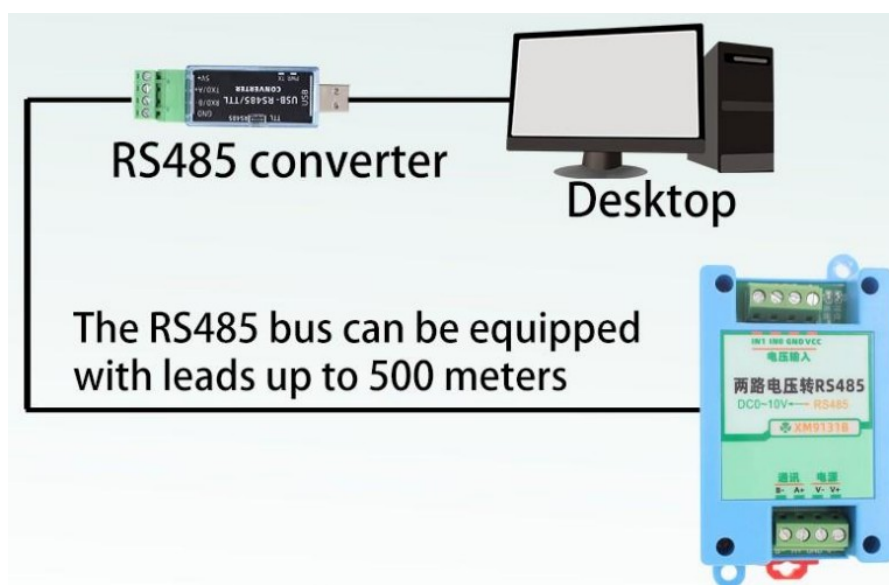

Two-wire current signal acquisition wiring

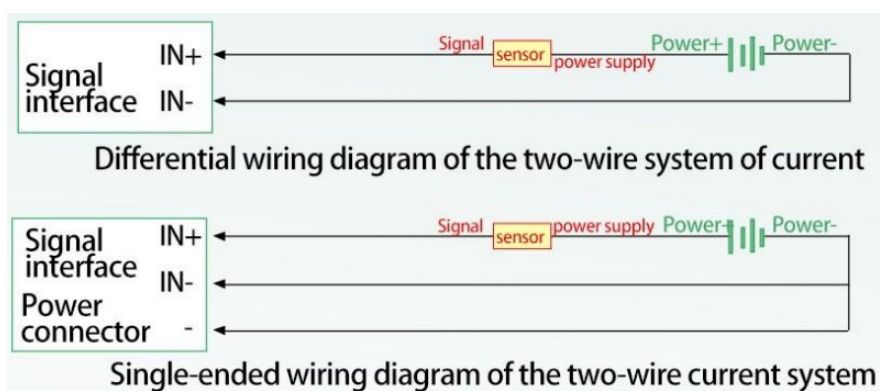


Three-wire current signal acquisition wiring

Differential wiring diagram of the current three-wire system



Note: The power supply of the sensor can be shared with the power supply of the module

Voltage signal acquisition wiring

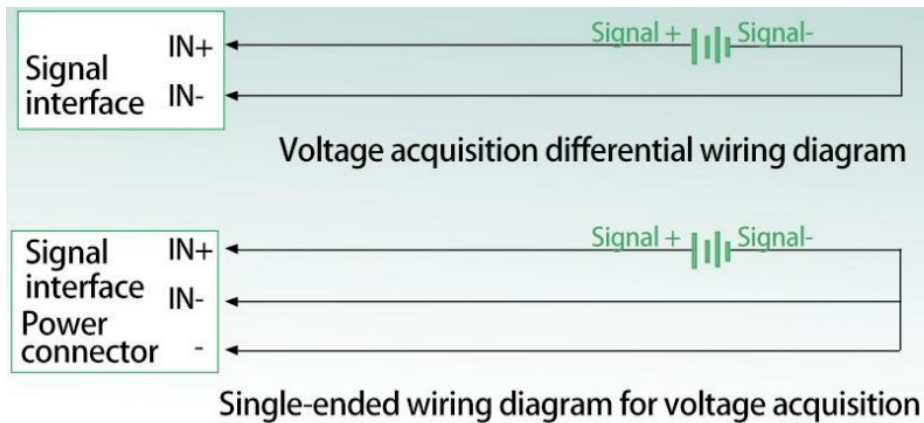

Note: If the sensor has no signal-, use the negative pole of the sensor power supply as a signal-
Product List



1 module is delivered according to the user's choice

Communication Protocol

The product uses RS485 MODBUS-RTU standard protocol format, all operation or reply commands are hexadecimal data. The default device address is 1 when the device leaves the factory, and the module or NON-Recorder default baud rate is 9600,8,n,1 ,out data recorder default baud rate is 115200.

1. Read data (function code 0x03)

Inquiry frame (hexadecimal), sending example: query 1 data of 1# device, the upper computer sends the command: 01 03 00 00 00 02 C4 0B.

Address	Function Code	Start Address	Data Length	Check Code
01	03	00 00	00 02	C4 0B

For the correct query frame, the device will respond with data: 01 03 04 00 7A 00 00 DB EA , response format:

Address	Function Code	Length	Data 1	Data 2	Check Code
01	03	04	00 79	00 7A	DB EA

Data description: The data in the command is hexadecimal, take data 1 as an example, 00 79 is converted to decimal value as 121, assuming the data magnification is 100, then the real value is 121/100=1.21, Others and so on.

2. Common data address table

Configuration Address	Register Address	Register Description	Data Type	Value Range
40001	00 00	DC10Vvoltage	Read Only	0~65535
40002	00 01	DC10Vvoltage	Read Only	0~65535
40101	00 64	Model Code	Read/Write	0~65535
40102	00 65	total number of measuring points	read/write	1~20
40103	00 66	device address	read/write	1~249
40104	00 67	baud rate	read/write	0~6
40105	00 68	communication mode	read/write	1~4
40106	00 69	protocol type	read/write	1~10

3 Read and modify device address

(1) Read or query device address

If you don't know the current device address and there is only one device on the bus, you can query the device address through the command FA 03 00 66 00 01 71 9E .

Device Address	Function Code	Start Address	Data Length	Check Code
FA	03	00 66	00 01	71 9E

FA means 250 is the general address, when you don't know the address, you can use 250 to get the real device address, 00 66 is the device address register.

For the correct query command, the device will respond, for example, the response data is: 01 03 02 00 01 79 84, and its format parsing is shown in the following table:

Device Address	Function Code	Start Address	Model Code	Check Code
01	03	02	00 01	79 84

In the response data, the first byte 01 represents the real address of the current device.

(2) Change device address

For example, if the current device address is 1 and we want to change it to 02, the command is: 01 06 00 66 00 02 E8 14 .

Device Address	Function Code	Register Address	Target Address	Check Code
01	06	00 66	00 02	E8 14

After the change is successful, the device will return the information: 02 06 00 66 00 02 E8 27 , and its format analysis is shown in the following table:

Device Address	Function Code	Register Address	Target Address	Check Code
02	06	00 66	00 02	E8 27

In the response data, after the modification is successful, the first byte is the new device address.

Generally, after the device address is changed, it will take effect immediately. At this time, the user needs to change the query command of his software accordingly. .

4 Read and modify baud rate

(1) Read baud rate

The default factory baud rate of the device is 9600. If you need to change it, you can change it according to the following table and the corresponding communication protocol. For example, to read the baud rate ID of the current device, the command is: 01 03 00 67 00 01 35 D5 , the format is parsed as follows.

Device Address	Function Code	Start Address	Data Length	Check Code
01	03	00 67	00 01	35 D5

Read the baud rate code of the current device. Baud rate code: 1 is 2400; 2 is 4800; 3 is 9600; 4 is 19200; 5 is 38400; 6 is 115200.

For the correct query command, the device will respond, for example, the response data is: 01 03 02 00 03 F8 45, and its format analysis is shown in the following table:

Device Address	Function Code	Data Length	Baud Rate Code	Check Code
01	03	02	00 03	F8 45

According to the baud rate code, 03 is 9600, that is, the baud rate of the current device is 9600.

(2) Change the baud rate

For example, change the baud rate from 9600 to 38400, that is, change the code from 3 to 5, the command is: 01 06 00 67 00 05 F8 16 .

Device Address	Function Code	Register Address	Target Baud Rate	Check Code
01	06	00 67	00 05	F8 16

Change the baud rate from 9600 to 38400, that is, change the code from 3 to 5. The new baud rate will take effect immediately, and the device will lose response at this time, and the baud rate of the device needs to be checked accordingly Modified.

5 Read and modify correction value

(1) Read correction value

When there is an error between the data and the reference standard, we can reduce the display error by adjusting the correction value. The correction difference can be modified in a range of plus or minus 1000, that is, the value range is 0-1000 or 64535 -65535. For example, when the displayed value is too small by 100, we can correct it by adding 100. The command is: 01 03 00 6B 00 01 F5 D6 . In the command, 100 is hexadecimal 0x64 ;If you need to reduce it, you can set a negative value, such as -100, the corresponding hexadecimal value is FF 9C, the calculation method is 100-65535=-65435, and then converted to hexadecimal, it is 0x FF 9C. Device The correction value starts from 00 6B. We take the first parameter as an example to illustrate. When there are multiple parameters, the correction value is read and modified in the same way.

Device Address	Function Code	Start Address	Data Length	Check Code
01	03	00 6B	00 01	F5 D6

For the correct query command, the device will respond, for example, the response data is: 01 03 02 00 64 B9 AF, and its format parsing is shown in the following table:

Device Address	Function Code	Data Length	Correction Value	Check Code
01	03	02	00 64	B9 AF

In the response data, the first byte 01 represents the real address of the current device, and 00 6B is the first state correction value register. If the device has multiple parameters, other parameters operate in the same way as this. The same, generally temperature and humidity have this parameter, and lighting generally does not have this parameter.

(2) Change the correction value

For example, if the current state is too small, we want to add 1 to its real value, and add 100 to the current value. The correction operation command is: 01 06 00 6B 00 64 F9 FD .

Device Address	Function Code	Register Address	Target Address	Check Code
01	06	00 6B	00 64	F9 FD

After the operation is successful, the device will return the information: 01 06 00 6B 00 64 F9 FD, after the successful change, the parameters will take effect immediately.

Disclaimer

This document provides all information about the product, does not grant any license to intellectual property, does not express or imply, and prohibits any other means of granting any intellectual property rights, such as the statement of sales terms and conditions of this product, other issues. No liability is assumed. Furthermore, our company makes no warranties, express or implied, regarding the sale and use of this product, including the suitability for the specific use of the product, the marketability or the infringement liability for any patent, copyright or other intellectual property rights, etc. Product specifications and product descriptions may be modified at any time without notice.


Contact Us

Brand: XUNCHIP

Address: Room 208, Building 8, No. 215, Nandong Road, Baoshan District, Shanghai, Xinxin Brand Business Department
Chinese site: <http://www.xunchip.com>
International site: <http://www.xunchip.com>
SKYPE: soobuu
E-mail: sale@sonbest.com
Tel: 86-021-51083595 / 66862055 / 66862075 / 66861077

<http://www.xunchip.com/>

Documents / Resources

	<p>XUNCHIP XM91 Rail Type Analog Acquisition Module [pdf] User Manual XM91 Rail Type Analog Acquisition Module, XM91, Rail Type Analog Acquisition Module, Analog Acquisition Module, Acquisition Module, Module</p>
---	--

References

- [Home-è®`èŠ`ç§`æŠ€](#)
- [Home-è®`èŠ`ç§`æŠ€](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.