



XVX M84 Wireless Mechanical Keyboard User Manual

[Home](#) » [xvx](#) » XVX M84 Wireless Mechanical Keyboard User Manual 



Theme Series M84
Wireless Mechanical Keyboard
User Manual

Contents

- [1 Introduction](#)
- [2 XVX Gaming Interaction mode](#)
- [3 Multimedia Funtion](#)
- [4 Multimedia Function](#)
- [5 Package Contents](#)
- [6 Features:](#)
- [7 Installation, Connection and Use](#)
- [8 Charge the keyboard](#)
- [9 Documents / Resources](#)
- [10 Related Posts](#)

Introduction

Thank you for choosing Mechanical Rechargeable Keyboard. For the best results, please read the user manual carefully before using this product.

RGB Backlit Modes

FN+PrtSc : Adjust 19 LED backlit modes

FN+Pause: Adjust lighting color, 9 levels

FN+ ↑ : Increase brightness

FN+ ↓ : Decrease brightness

FN+ → : Increase speed

FN+ ← : Decrease speed

XVX Gaming Interaction mode

FN+DEL	First mode: FPS — WASD R ←→↑↓ ESC up blocks light up
	Second mode: COD — QWERTASDFGCV 1-7 Ctrl Shift blocks light up
	Third mode: Car — WASDR Ctrl Shift Alt ←→↑↓ At 1 blocks light up
	Fourth mode: LOL — 1 QWER DGFBV Ctrl Alt Tab ~ 1-6 Esc blocks light up

Note: The lighting of the 4 preset game modes can be recorded.

* Recording steps:

Set the individual keys first, then adjust to the color (red, orange, yellow, green, blue, purple, white, pink).

After entering any game mode, press FN+HOME to start recording, the key has no output function at this time, the indicator light flashes, click the key to be recorded, adjust the light color. To finish recording, press FN+HOME to finish recording .

Multimedia Funtion

FN+F1: Home

FN+F2: My Computer

FN+F3: Mail

FN+F4: Music

FN+F5: Previous Playlist

FN+F6: Next Playlist

FN+F7: Play/Pause

FN+F8: Stop

FN+F9: Mute

FN+F10: Volume down

FN+F11: Volume up

FN+Fl 2: Lock/Unlock the keyboard

Multimedia Function

FN+ Esc : Hold for 3 seconds to restore factory settings

FN+WIN : WIN lock/unlock

FN+W: WSADis interchanged with ↑↓←→, click FN+W again to restore to normal

Package Contents

- 1x Mechanical Rechargeable Keyboard
- 1x USB Nano Receiver
- 1x Type-C Cable
- 1x User Manual
- 1x Keycap Puller
- 1x Switch Puller

Features:

1. Mechanical 84K keyboard

2. 2.4G Wireless + Wired dual modes
3. Rechargeable battery:1850mA
4. RGB backlit, 19 kinds of lighting modes
5. USB Full Speed 2.0 (12Mbps)
6. N-key rollover

Installation, Connection and Use

1. Wired mode

Toggle the switch to the right (the color card shows red) for wired mode Connect the USB charging cable to your computer.

2. 2.4G Wireless mode

Charge the battery. Toggle the switch to the left (the color card shows green) for wireless mode

Plug the USB nano receiver into the USB port of your computer.

Once the computer recognize the keyboard, you're ready to use.

In 2.4G Wireless mode, If not use for more than 60 seconds, the RGB backlit will turn off automatically and keyboard enter power-saving mode. It is better turn off the keyboard when not use for long time.

Build the connection between the USB receiver and keyboard

Toggle the power switch to the left (the color card shows green), preess FN+P for 5 seconds, now the key "P" is flashing. Plug the USB nano receiver into the USB port of your computer. Key "P" stop flashing after building connection successfully.

Charge the keyboard

The battery should be charged for at least 6-8 hours before being used for the first time.

When the battery is low, the FN key red light flashes. Connect the USB charging cable to your computer or adapter.

The charging indicator is located on the left side of the space bar, the charging status lights up, and it turns off when fully charged. (charging time: around 6-8 hours).

NOTE: If you want to use the keyboard when charging, you should choose wired mode, the power switch must be toggled to the right position.

Troubleshooting Tips

If you experience problems while using the keyboard, here are some helpful troubleshooting tips:

Check the power switch is on the left

Check the battery is charged

Check the receiver is properly connected to the USB port

Try reducing the distance between the keyboard and the computer

Remove any large metal objects located between the keyboard and the computer that could interrupt the signal

Product picture are for reference only.

Pro software download link

<https://www.xvxchannel.com>

- Please note the macro software is only available for Windows PC at this time.
- The software can only be used in wire mode adjust the power switch to the OFF position.

Standard layer



<https://www.xvxchannel.com>



[instagram.com/xvx_keyboard](https://www.instagram.com/xvx_keyboard)



[facebook.com/xvrkeyboard](https://www.facebook.com/xvrkeyboard)



<http://www.XVXCHANNEL.COM>

Documents / Resources



[XVX M84 Wireless Mechanical Keyboard](#) [pdf] User Manual

None explicitly mentioned in the given text., M84, M84 Wireless Mechanical Keyboard, Wireless Mechanical Keyboard, Mechanical Keyboard, Keyboard