



Home » xvx » XVX M87PRO2 Mechanical Wired Keyboard User Manual 📆



M87PR02

Mechanical Wired Keyboard USER MANUAL

Contents [hide]

- 1 Keyboard features
- 2 Knob function
- 3 Backlight brightness/speed control
- 4 Multimedia key for windows
- 5 Documents / Resources
 - 5.1 References

Keyboard features

Top View



Rear View



OLED display

Select the screen by turning the knob.

Boot screen

 


Support for custom startup screen.

Note: The programmer is only for Windows system currently.

Requirements: gif, under 255 Frame (240 x 135pixels recommended)

Home screen



A Win Mode

B Mac Mode

C Win Lock

D Caps Lock

 
The OLED display will show the current settings and items enabled/disabled.

Functions setting screen



Knob function

Adjust screen (Default)



Volume setting


Operation method:

1. Hold the FN+ knob, keyboard backlight flashes, to enter volume adjustment.



3. Press the FN+ knob again to back to the adjustment screen.


WIRED MODE

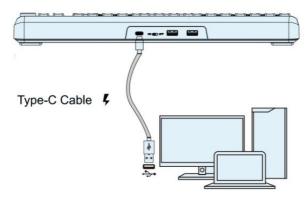

Backlight effect/color control

A Screen operation method

1. Turn the knob to select the effect/color and press to confirm it.

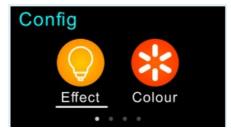

2. Turn the knob to select the desired effect/color and press to confirm it.



B Combination key operation method:

Switch Backlight Mode





Backlight brightness/speed control

- A) Screen operation method:
- 1. Turn the knob to select the light brightness/speed and press to confirm it.




Turn clockwise to ncrease brightness/speed
Rotate counterclockwise to decrease brightness/speed Press the knob to confirm it.



B) Combination key operation method:



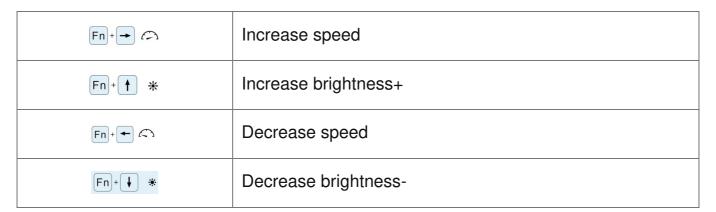


Volume/ language setting

1. Turn the knob to select the volume language and press to confirm it.



 2. Turn the knob to adjust volume/select language and press to confirm it.



System switching

A Sescreen operation method:

1. Turn the knob to select system and press to confirm it.



2. Turn the knob to select WIN/MAC and press to confirm it.



B Combination key operation method:

Multimedia key for windows

In Windows mode(FN+Z: switch to Windows system)

Fn + F1	Screen brightness –
Fn + F2	Screen brightness +
Fn + F3	Task switching(WIN+Tab)
Fn + F4	Fast access (WIN+E)

Fn + F11	Volume –
Fn + WIN	Unlock/lock WIN
Fn + Scr	Hold for 3 seconds to Close/open the keyboard screen
Fn + F7	Previous playlist
Fn + F8	Play/Pause
Fn + F9	Next playlist
Fn + F10	Mute
Fn + F12	Volume +
Fn + Esc	Hold for 3 seconds to restore factory settings

Multimedia key for Mac

F1	Screen brightness –
F3	Task switching
F7	Previous playlist
F9	Next playlist
F11	Volume –
Fn + ESC	Hold for 3 seconds to restore factory settings
Fn + Scr	Hold for 3 seconds to Close/open the keyboard screen
F2	Screen brightness +
F4	Fast access
F8	Play/Pause

F10	Mute
F12	Volume +

PRO SOFTWARE DOWNLOAD LINK https://www.xvxchannel.com

* Please note the macro softwares only available for Windows PC at this time.



Documents / Resources



XVX M87PRO2 Mechanical Wired Keyboard [pdf] User Manual M87PRO2, M87PRO2 Mechanical Wired Keyboard, M87PRO2, Mechanic al Wired Keyboard, Wired Keyboard, Keyboard

References

- User Manual
 - ▶ Keyboard, M87PRO2, M87PRO2 Mechanical Wired Keyboard, Mechanical Wired Keyboard, Wired Keyboard,

XVX XVX

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name		
Email		
<u> </u>		
Website		
☐ Save my name, email, and website in this browser for the next time I com	ment.	
Post Comment		
Search:		
e.g. whirlpool wrf535swhz	Search	

Manuals+ | Upload | Deep Search | Privacy Policy | @manuals.plus | YouTube

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.