

# Xwireless **C24** **Bluetooth** **Phone**



## Xwireless C24 Bluetooth Phone User Manual

[Home](#) » [Xwireless](#) » Xwireless C24 Bluetooth Phone User Manual 

### Contents

- 1 [Xwireless C24 Bluetooth Phone](#)
- 2 [INTRODUCTION](#)
- 3 [WELCOME](#)
- 4 [PHONE LAYOUT](#)
- 5 [GETTING STARTED](#)
- 6 [PLACING AND RECEIVING CALLS](#)
- 7 [THE HOME SCREEN](#)
- 8 [CONNECT TO THE INTERNET](#)
- 9 [MANAGING NOTIFICATIONS](#)
- 10 [MESSAGING](#)
- 11 [MULTIMEDIA](#)
- 12 [CONNECT TO NETWORKS AND DEVICES](#)
- 13 [DOWNLOAD APPLICATIONS](#)
- 14 [PHONE SETTINGS](#)
- 15 [HEALTH AND SAFETY INFORMATION](#)
- 16 [Documents / Resources](#)
  - 16.1 [References](#)

# Xwireless

**Xwireless C24 Bluetooth Phone**



## INTRODUCTION

- All rights are reserved. No part of this document may be reproduced without permission. While all efforts have been made to ensure the accuracy of all the contents in this manual, we assume no liability for errors omissions, or statements of any kind in this manual, whether such errors or omissions or statements resulting from negligence, accidents, or any other cause. The contents of this manual are subject to change without notice.
- Protect our environment! We strive to produce products in compliance with global environmental standards. Please consult your local authorities for proper disposal.
- **Note:** The user Manual is just to guide the user about the functionality of the phone. It is not a certificate of technology. Some functions may vary due to modifications and upgrades of software, or due to printing mistakes.
- It is advisable to charge the battery to 100% before start using the phone for better battery life

## WELCOME

Congratulations on your purchase of the BLUmobile phone. Your phone provides many functions that are practical for daily use, such as a hands-free loudspeaker, camera, MP3 player, internet, and much more.

You can read the manual to understand how to use the M7L Mobile phone and experience the well-established functions and simple operation methods. Please use the original accessory to achieve the best use of effects. Use of non-original components may lead to damage caused to the machinery, in which case BLU shall not be responsible. BLU Warranty Certificate is enclosed at the end.












## Exciting Features

- Android Q Go
- 6.52" HD+

- Cameras (8M+13M&2M)
- External Memory (Expandable upto32 GB)
- Dual SIM
- Multimedia player
- Gravity sensor
- Wi-Fi
- GPS
- Battery 4000mAh

## For your safety

- Read this simple guideline. Avoiding them may be dangerous or illegal. Read the complete user manual for further information.

	Do not switch your phone on when the use of wireless devices is prohibited or when the wireless device may cause interference or danger.
	Do not use your phone while driving.
	Follow relevant rules or regulations in hospitals and health care facilities. Switch your phone off near medical devices.
	Switch your phone off in an aircraft. The radio signal from it may cause interference in signals of the aircraft.
	Switch your phone off near high-precision electronic devices. It may affect the performance of these devices.
	Do not attempt to disassemble your phone or its accessories. Only qualified personnel may service or repair the phone.
	Do not place your phone and its accessories in containers with strong electromagnetic field.
	Do not place magnetic storage media near your phone. Radiation from the phone may erase the information stored on them.
	Do not put your phone in a high-temperature place or use it in a place with flammable gas such as a petrol pumps.
	Keep your phone and its accessories away from children. Do not allow children to use your phone without guidance.
	Respect other's privacy and legal rights when using your phone.










## PHONE LAYOUT

### Keys and Parts



1. USB Jack
2. Earphone Jack
3. Receiver
4. Front Camera
5. Front Flash
6. Screen
7. Menu Key
8. Home Key
9. Back Key
10. Volume Key
11. Power Key
12. Rear Flash
13. Rear Camera
14. Speaker

### Icons and Indicators

Icons	Indicators	Icons	Indicators
	Signal strength indicator		Alarm has been set
	New missed calls		Wi-Fi is activated
	Airplane mode is activated		Bluetooth is on
	The headphone is being used		Battery charging symbol
	New received message		

## GETTING STARTED

 
### Insert SIM card

- M7L is a Dual SIM mobile phone that allows you to use the facility of two networks. Both sims have micro slots.

#### **To insert SIM card(s):**

- Turn off the phone and use the ejector pin to remove the card slot.
- Insert the SIM card correctly in the card slot(s). (see below fig)


#### **Insert SIM card carefully!**

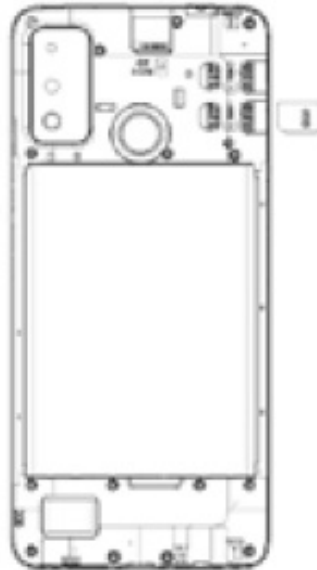

- Finally inserted into the card slot.

#### **Insert Memory card**

 - M7 Lallows you to expand external memory with a micro SD card, up to 128 GB.
- Turn off the phone and use the ejector pin to remove the card slot.
- Insert the memory card into the slot.

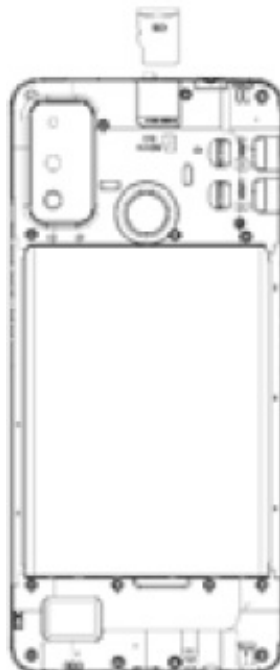

- Finally inserted into the card slot.

- Use only compatible memory cards. Incompatible memory cards may damage the card or the device will corrupt the data stored in the card.

## Unlock the Phone

- You may need to provide a PIN, Password, Fingerprint, Face authentication, or draw a Pattern to unlock your phone.

### To unlock the screen:

- Press the power key to wake up the phone.  
Hold and drag the unlock icon to the upside to unlock.



- You may be required to unlock your phone based on the unlock method in settings.

### To set the unlock method:

- On the main menu, touch Settings > Security.
- Touch set up screen lock.
- Choose the type of locking as desired. You can set your screen lock based on Pattern, PIN, Password, Fingerprint, Face authentication, or none.




## Using the Touch screen

- You can use the touch screen in the following ways.
- **Touch:** Acts on items on the screen, such as application and settings icons, to type letters and symbols using the onscreen keyboard, or to press onscreen buttons.
- **Touch and hold:** Touch and hold an item on the screen until an action occurs.
- **Drag:** Touch and hold an item and move your finger on the screen until you reach the target position.
- **Swipe or slide:** Quickly slide your finger across the surface of the screen, (without dragging an item). For example, slide the screen up or down to scroll a list,
- **Pinch:** In some applications (Such as Browser, and Gallery) you can zoom in and out by placing two fingers on the screen at once and pinching them together (to zoom out) or spreading them apart (to zoom in).

- **Rotate the screen:** On most screens, the orientation of the screen changes as you rotate it. You can turn this feature ON and OFF.



## Using the Phone's Buttons

- The phone's buttons offer a lot of functions and shortcuts.

Button	Press
	<u>Menu</u> : This is used for recent application
	<u>Home</u> : returns to Home screen.
	<u>Back</u> : Returns to the main screen.

- The phone provides you with Context menus and Options menus for accessing the features in an intuitive way.

## Context Menus

- You can open the context menu by touching  or  key.
- Not all screens have context menus. Examples of context menu from Contacts and call environment.



## Options menus

- When you touch and hold some items on a screen, an Options menu opens.

## Menu Icons


- You have the following menu icons to easily let you access its important features.



- Opens the dialer







- Opens messages

-  Opens the browser

## PLACING AND RECEIVING CALLS

You can dial a phone number or touch a number in your contacts. You can also place it from the call log or contacts.

### Make a Call

- Tap the  icon on the main menu or the home screen to dial the desired number.
- Touch the  icon on the main menu or the home screen to make a call from contacts, groups, or favorites.
- To dial an international number, touch and hold the 0 key to enter the Plus (+) symbol, and then enter the international country prefix, followed by the phone number
- Touch the  icon to call with SIM 1 or SIM 2.
- Press the Volume Up/ Down key to adjust the call volume.
- You can access Call Logs, and Contacts from the dialer screen.
- While during a call, touch the  icon to end a call.

### Disable Phone Calls (Airplane mode)

- Some locations like airplanes may require you to turn off your mobile, Wi-Fi, and Bluetooth wireless connections.
- Touch the drop-down from the top to open the status bar.
- Touch the Airplane mode.

 
### Disable SIM card

- If you want to close the SIM card, go to Settings -> More
- SIM cards.
- turn off SIM1/SIM2

## THE HOME SCREEN


- When you sign in, the home screen opens.
- The Home screen is your starting point to access all the features on your phone.



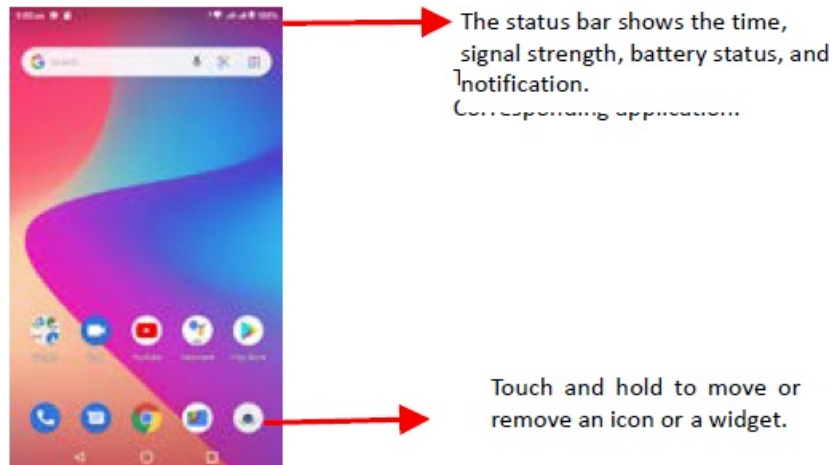



## Open and Close the Launcher

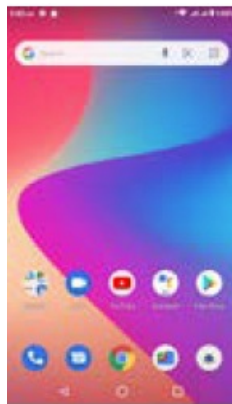 - The phone is directly on the main menu after booting.



- You have access to all applications installed on your device and their widgets when available.
- Touch an application to open and launch it.
- To add an application shortcut to another location, press and hold it until it enters the desired location. Place it and release your finger.
- Slide the Launcher left or right to bring more icons into view.
- As soon as you install a new application, it comes in this list.
- Widgets come when you long press on the home screen. You can touch WIDGETS directly.
- You cannot launch a widget like an application; you can only place it on the desktop screen.
- Press and hold it until it enters the Home screen. Place it and release your finger. A context menu opens to configure the widget or resize it, naturally, it depends on the widget.

## Switch to Recently Used Application

- Press the  icon to open a recently used application.
- Touch an icon to open its application. Or press  to return to the current application.

## Customize Home Screen

- You can add applications, shortcuts, widgets, and other items to any part of the Home screen or change the wallpaper.

## Widgets:

- Long press on the home screen for widgets.
- Drag a widget to a home screen: Touch and hold the widget's icon, slide your finger where you want to place it and lift your finger.
- You may be asked to make further choices before the widget activates. If there isn't a room where you dropped it, the widget won't get added to the Home Screen.
- **Wallpapers:** Wallpapers are images from the Gallery, still images included with the system. They take the place of the default background for your Home Screen.
- Touch and hold anywhere on a desktop Home screen that's not occupied. A list of options appears.

## Touch the following wallpaper source:

- **Device folders:** Choose from pictures that you've taken with a camera or downloaded to your device.
- To set wallpaper, touch the right option then select Set wallpaper.
- **Folders:** You can very easily regroup desktop icons in a folder on the screen to save space and access more applications.
- Touch and hold any icon on the desktop screen to move it.
- Go on another icon and release to create a folder containing both icons.
- Then add as many icons as the folder can hold, give it a name, and move it where you want.
- You have all the tools to customize your Phone.

## CONNECT TO THE INTERNET

### To configure your Internet:

- Go to Settings >More>SIM1 or SIM2>Turn on 'Mobile data' By default, your network provider sends the Access Point Name settings via SMS, or it comes automatically with your SIM card.
- You may need to install these settings. After this, you can choose from the listed access point names.
- If the access point names are not listed by default, please contact your network provider for the same.
- To add any operator Access point Name, go to Settings >More >SIM1 or SIM2> Access point Names>add.
- After you have selected or configured the access point name, go to Settings >More >SIM1 or SIM2> Data usage to enable Internet connection.

### Access the Internet via Wi-Fi

To browse the Internet via Wi-Fi:

- Go to Settings>WIFI.
- Next, select the Wi-Fi connection listed under Wi-Fi networks.

## MANAGING NOTIFICATIONS

Notification icons inform you of new messages and events. When you receive a notification, its icon appears in the status bar, along with a summary.

## Open the Notifications Panel

Drag the status bar down from the top of the screen as shown below.



- The Notifications panel displays your network provider name and a list of your current notifications.

## Respond to Notifications

- Open the notification panel and touch a notification to respond to it. What happens next depends on the notification.

## Close Notifications Panel

- Drag the tab at the bottom of the Notifications panel to the top of the screen. Or just press the back button. The panel also closes when you touch a notification to respond to it.

## MESSAGING

### Message environment & Settings

- You can use Messages to exchange text messages and multimedia messages with your friends.



Touch to compose a new text  
or multimedia message.

 
- The messages settings allow you to set SMS/MMS notifications, vibrate, message tones, delivery reports, and


many others.

- Take a tour and explore message settings, you'll find interesting things.

## Using the Onscreen Keyboard

- Some applications display the keyboard by default. In others, you touch a text field where you want to enter text, to open the keyboard.


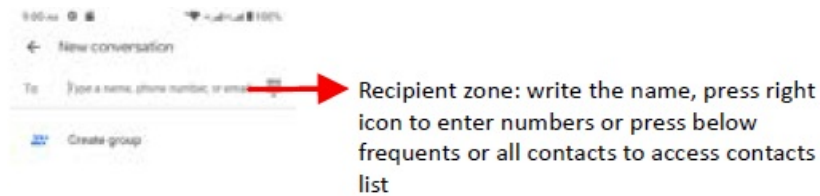


Write your message here. After typing, press  icon to close the keyboard. Touch and hold the text field to open a menu and to copy/cut texts.

Touch once to capitalize the next letter you type. Touch and hold or double tap for Caps Lock.

  Secondary characters panel (special, symbols, numbers)



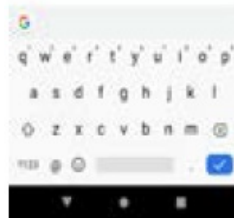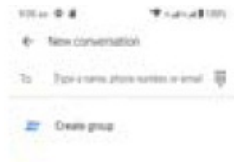

This is to erase characters

## Create and Send Multimedia Messages

- A Message becomes an MMS if you send it to an email address, or add multimedia file(s).
- Touch compose a new message.
- Enter or select a mobile phone number.
- Touch the composition text box and write your message.
- Touch Attach to attach various types of files.
- Send the MMS.

## Operation on a message:

- Open the message thread containing the message you want to operate.
- Touch and hold this message until the menu becomes above.

 
## Make your choice:

- To share the message.
- To forward a message.
- To copy the message.
- To view the message details.
- To delete the message.

## MULTIMEDIA

### Camera

Your camera's pictures and videos are stored in both the SD card and device. You can copy pictures and videos from both the SD card and device to a PC and vice versa.

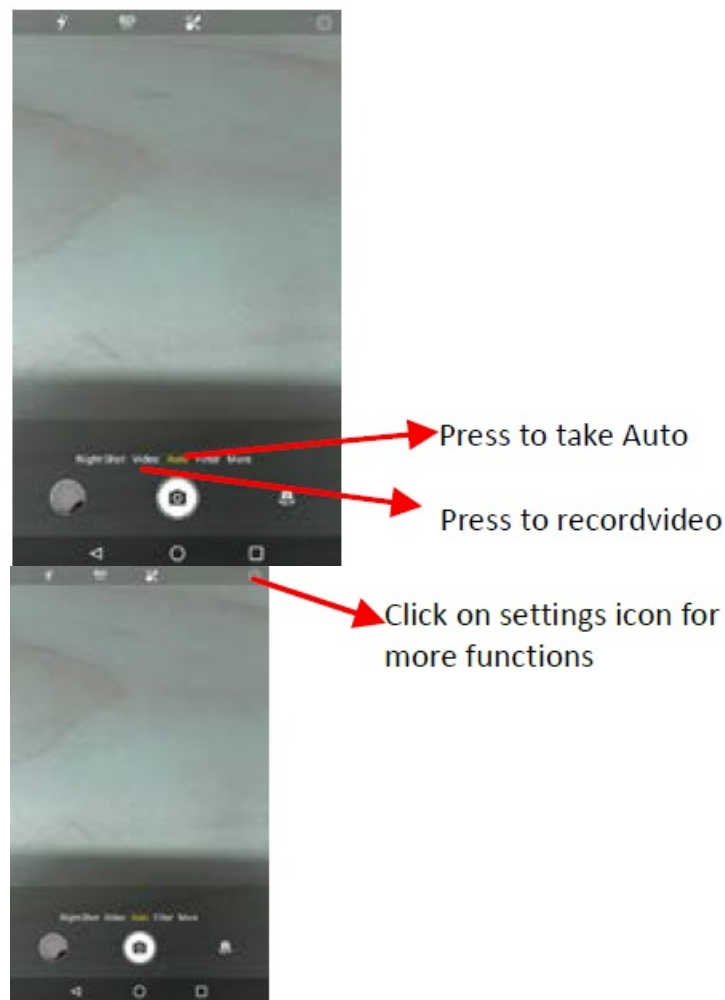


## Gallery

You can use the Gallery to view pictures, play videos, and share files.

- Touch the Gallery icon in the main menu.
- Touch an album to open and view its contents.
- Touch a picture or a video in an album to view it.

## Share an image

- Open the main Photos window.
- Check or uncheck the image you want to share.
- Touch the  icon at the bottom of the screen to share via Bluetooth, Email, etc.
- You can share via email, Bluetooth, and so on.



## YT Music

- You can easily transfer your favorite music from your PC to the SD card and experience a whole world of interesting and melodious music.
- Press the phone's volume up/down keys on the right side of the mobile phone to adjust the volume.

## FM Radio

 
- You can listen to your favorite FM channels using the built-in FM receiver of your phone and a corded earphone (the wire is used as an antenna).
- Record sound
- Search FM stations
- Enable speaker
- Press the phone's volume up/down keys on the right side of the mobile phone to adjust the volume.

### Record Sounds

- Touch the Sound Recorder in the main menu.
- Tap  to start recording a voice clip. "Recording" appears when it is recording a voice clip.
- Tap  to stop and save the recording.

### Make Screenshot

- Press and hold for 1 second both the Volume Down and Power buttons together. Also, you can long-press the Power Key to get the Screenshot function.

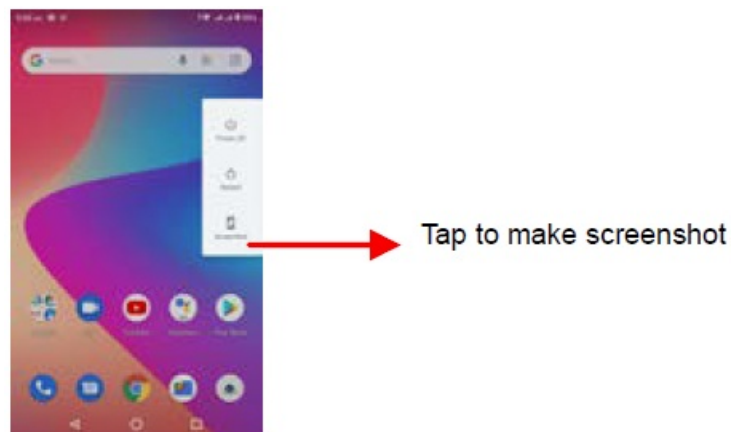

### New features of the volume control

Android Q uses the vertical volume interface, which users can pop up by short pressing the volume button. It is very convenient to switch the Audio Profiles and adjust the volume.



→ Tap to switch audio

→ Slide up or down

 
→ Tap to access settings

## CONNECT TO NETWORKS AND DEVICES

- Your phone can connect to a variety of networks and devices, including Wi-Fi, GPRS, Bluetooth, and devices, such as headsets. You can also transfer files to/from your PC through the data cable.

### Connect to PC

- **You can connect your phone to your PC via the following options:** Connect the phone to your PC with the help of a USB cable. “Charging this device via USB” notification will be shown. Touch the notification, to change and connect to other modes.

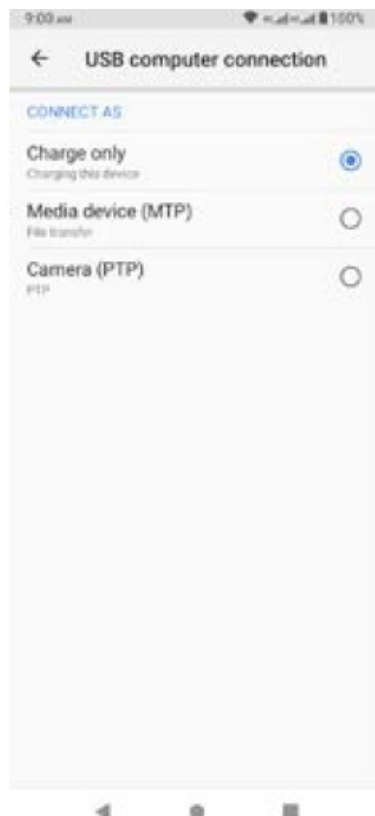

- **Charge only:** The phone will only charged when selecting charge only mode.
- **Media device(MTP):** This feature will let you manage files on your phone and computer at the same time.



- **Camera(PTP):** Allows you to transfer photos using camera software and manage pictures on computers.

## **Connect to the Internet**

- Refer to section 6 for details.

## **Connect to Wi-Fi Networks**

- Refer to Section 6 for details.

## **Pair with Bluetooth Devices**

- Go to Settings > Connected devices> Connection Preference>Bluetooth.
- If Bluetooth is off, check Bluetooth to turn it on. Your phone scans and displays the Bluetooth devices in range.
- If the device you want to pair with is not on the list, make it discoverable.
- Your phone will remain scanned until it is discoverable by other devices.
- Touch the ID of the other device in the list Settings to pair them. If you are prompted for a password, enter any password on one device and enter the same password you entered in the other device to be paired, If the pairing is successful, your phone gets connected to the device.

## **Connect to the Internet via your Phone**

- You can browse the Internet on your PC using your mobile phone. To do this:
- Connect your mobile phone to your PC via the USB cable.
- Go to Settings> Hotspot & tethering > USB Tethering.
- A prompt for installation will appear on your PC. Proceed as suggested.
- Maybe you need to manually install the drivers on a PC.

## **Install Secure Certificate from SD Card**

- If your VPN or Wi-Fi Network relies on secure certificates, you must obtain the certificates and store them in your phone's storage, before you can configure access to those VPN or Wi-Fi networks on your phone.
- You may need to download the certificates from a website.
- Copy the certificate from your computer to the root of the SD card.
- Touch Settings> Security>Encryption & credentials.
- Touch Install from the SD card under Credential Storage.
- Touch the file name of the certificate to install. Only the names of certificates that you have not already installed on your phone are displayed.
- If prompted, enter the certificate's password and click OK.
- Enter a name for the certificate and touch OK.

 
## **DOWNLOAD APPLICATIONS**

- The phone has a default configuration which includes some applications. Discover all other apps by using the

Play Store.

- You will be able to connect with mobile data or Wi-Fi for example, and by signing in to the application with just an email.

**This is what it looks like:**

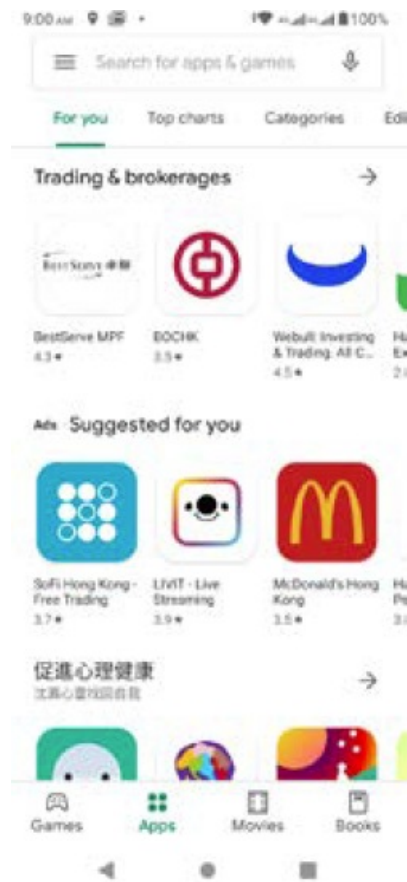

## PHONE SETTINGS

You can go to Settings to customize your phone's preferences and behavior in a variety of ways.

Network & internet	Let's you manage WIFI, mobile, data usage, hotspot, etc.
Connected devices	Let's you manage Bluetooth to communicate with other Bluetooth devices, or choose USB connection mode.
Apps & notifications	Lets you view all applications downloaded or on the SD card and manage all running applications in devices.
Battery	Let's you check the battery level, and status and manage battery usage.
Display	Let's configure brightness and other screen settings.
Scheduled power on/off	Let's set the automatic power on time or shutdown time.
Sound	Let's you configure how and at what volume the phone rings, vibrates, etc.
Storage	Let you see and manage available space on your phone and your SD card.
Privacy	Set password display and lock screen display, etc.
Security & Location	Let's you protect personal information, like adjusting your phone's lock, setting your S IM card lock, etc. And set the location-related settings.
Accounts	Let's add, remove, and manage your Google and other supported accounts.
Accessibility	Enable your installed accessibility applications and adjust related settings.
Google	Here list of Google services&preferences.
System	Set language, time, and date & restore factory settings, etc.
About device	View information about your phone, such as signal strength, status, and phone information.

## HEALTH AND SAFETY INFORMATION

### Certification Information (RoHS)

- We at BLU take our social responsibility seriously and are committed to the cause of saving our environment; it is in keeping with these commitments that we are proud to state that BLU phones are RoHS compliant.

### Certification Information (SAR)

- Your phone is designed not to exceed the limits of emission of radio waves recommended by international guidelines. These guidelines include safety margins designed to assure the protection of all persons, regardless of age and health.
- SAR (specific absorption rate) is the unit of body-absorbed RF quantity when the phone is in use. SAR value is ascertained according to the highest RF level generated during laboratory tests.
- The true SAR level during phone usage will be far lower than this level.
- The SAR value of the phone may change depending on factors such as how close you are to a network tower, the use of accessories, and other enhancements.
- The SAR value may differ depending on national reporting, testing requirements, and the network band.

### SAR Recommendations

- Use a wireless hands-free system (headphones, headset) with a low-power Bluetooth emitter.
- Please keep your calls short and use SMS whenever more convenient. This advice applies especially to children, adolescents, and pregnant women.
- Prefer to use your cell phone when the signal quality is good.
- People having active medical implants should preferably keep the cell phone at least 15 cm away from the implant.
- Maintain a preferable distance of 15 cm from the device.

### **Safe Driving**

- Do not use the phone while driving. When you have to use the phone, please use the personal hands-free kit.
- Please do not put the phone onto any passenger seat or any place from which it may fall down in case of vehicular collision or emergency braking.

### **During Flight**

- Flight is influenced by the interference caused by the phone. It is illegal to use a phone on an airplane. Please turn off your phone or switch to flight mode during a flight.

### **In Hospitals**

- Your Phone's radio waves may interfere with the functioning of medical devices. Consult a physician or the manufacturer of the medical device to determine whether they are adequately shielded from external Radio Frequency.
- Switch off your device when regulations instruct you to do so.
- Do not carry the wireless device in the upper pocket.
- Turn off the phone if there is any reason to suspect that interference is taking place.

### **Unsafe Areas**

- Please turn off your phone when you are close to a gas station or in the vicinity of any place where fuel and chemical preparations or any other dangerous goods are stored.

### **Taking Care of Your Device**

- Your device is a product of superior design and craftsmanship and should be handled with care: The following suggestions will help you protect your phone:
- Keep the device dry. If your device gets wet, remove the battery without turning on the device, wipe it with a dry cloth, and take it to the service center.
- Do not store the device in high or cold temperatures. High/cold temperatures can shorten the life of electronic devices and damage batteries.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not attempt to open the device other than as instructed in this guide. Repairing the phone by yourself other

than our authorized service agents/centers goes against the warranty rules.


- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Only use a soft, clean, dry cloth to clean the surface of the device.
- Do not store your device near magnetic fields or allow your device to come in contact with magnetic fields for an extended period.

### **Battery Recommendations**

- Please put the battery in a well-ventilated place out of direct sunlight. Charge the battery at room temperature range.
- If the time span of the battery after charging becomes much shorter than usual, the battery life is at an end. Replace the battery with a new battery of the same make and specification.
- Do not discard the battery with household trash. Please dispose of used batteries according to your local environmental laws and guidelines.
- Use manufacturer-approved batteries, chargers, accessories, and supplies. Will not be responsible for user's safety when using unapproved batteries or accessories.
- It is advisable to charge the battery to 100% before start using the phone for better battery life.

### **Recycle Your Phone**



-  The WEEE logo (shown at the left) appears on the product (battery, handset, and charger) to indicate that this product must not be disposed of or dumped with your other household wastes.
- You are liable to dispose of all your electronic or electrical waste equipment by relocating over to the specified collection point for recycling such hazardous waste.
- Collection and proper recovery of your electronic waste equipment at the time of disposal will allow us to help preserve the environment. Recycling electronic waste equipment will ensure the safety of human health and the environment.

### **Do's and Don'ts for disposal e-waste**

#### **Do's:**

- Ensure that an Authorized Person repairs your M7L products.
- Call Our Local Authorized Collection Centers for products.
- Always drop your used electronic products, batteries, or any accessories thereof after the end of their life at the nearest Authorized Collection Point or Collection Center.
- Separate the packaging material according to responsible waste disposal options and sorting for recycling.
- Always remove the battery from the product, when you do not intend to use the product anymore in the future.

#### **Don'ts:**

- Do not Dismantle your M7Lroduct on your own
- Do not give your e-waste to KabbadiWala / Scrap Dealer/ Rag Pickers.
- Do not dispose of the e-waste in landfills.
- Never dump E-waste in garbage bins.
- Do not dispose of your product in municipal waste bins or rooms.
- Do not throw used batteries into household waste.
- Consequences of improper handling and disposal of E-Waste
- Improper disposal of waste prevents natural resources from being reused.
- Some waste contains hazardous chemicals and if not disposed of properly may release toxins into the soil and water, and also release greenhouse gases into the environment
- If e-waste is not properly disposed of, it can threaten the health and well-being of humans and animals and it also has adverse effects on the environment.
- Placing of batteries or devices on or in heating devices, such as microwaves, ovens, stoves, or radiators and improper disposal of batteries may lead to explosion.
- If the battery terminals are in contact with metal objects, it may cause a fire.

## **Disclaimers**

- The colors and specifications shown/mentioned in the user manual may differ from the actual product. Images shown are for representation purposes only.
- Other product logos and company names mentioned herein may be trademarks or trade names of their respective owners.
- The content of this manual may vary from the actual content displayed on the mobile phone. In such a case, the latter shall govern.
- We keep the right to make modifications to any of the content in this user guide without public announcement or prior notification.
- For devices with external power supplies, the plug socket should be placed at a short distance and easily accessible.
- Using the wrong type of battery replacement there is a danger of explosion, be sure to follow the instructions for disposal of used batteries.

## **Copyrights**



- All rights reserved. Reproduction, transfer, distribution, or storage of part or all of the contents in this document in any form without the prior written permission of is strictly prohibited.
- To prevent possible hearing damage, do not listen at high volume levels for long periods.
- To use the device only with the earphones included, never change the earphones included for another one.

## **FCC Warning**

## **Labeling requirements**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference,
- 2. this device must accept any interference received, including interference that may cause undesired operation.

**Information to user**

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

**Information to the user**

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, according to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used under the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Absorption Rate (SAR) information:**

This device meets the government’s requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

**FCC RF Exposure Information and Statement**

The SAR limit of USA (FCC) is 1.6 W/kg averaging over one gram of tissue. This device was tested for typical body-worn operations with the back of the device kept 10mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain an appropriate separation distance between the user’s body and the back of the device. The use of belt clips, holsters, and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements and should be avoided. Use only the supplied or approved antenna.

**Documents / Resources**

<div>User Manual</div> <div>User Manual</div> <div></div>	<div><a href="#">Xwireless C24 Bluetooth Phone</a> [pdf] User Manual</div> <div>2ADLJ-C24, 2ADLJC24, C24 Bluetooth Phone, C24, Bluetooth Phone, Phone</div>
---	---

**References**

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.