

Yapalong

6000

**Bluetooth
PTT Button**



Yapalong-6000 Bluetooth PTT Button Instruction Manual

[Home](#) » [Yapalong](#) » Yapalong-6000 Bluetooth PTT Button Instruction Manual 

Contents

- [1 Yapalong-6000 Bluetooth PTT Button](#)
- [2 Product Information](#)
- [3 FAQ](#)
- [4 INSTALLATION](#)
- [5 Power On Button](#)
- [6 Pairing](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)

Yapalong

Yapalong-6000 Bluetooth PTT Button



Product Information

Specifications

- **Product Name:** Bluetooth PTT Button
- **Model:** Yapalong-6000
- **Battery:** CR2032
- **Compatibility:** Works only with Yapalong-6000 PTT Unit, Not Open-MIC Unit

Product Usage Instructions

1. Twist to open the battery compartment.
2. Insert the battery (CR2032) with correct polarity as shown in the figure.
3. Set the power switch lever to the ON position.
4. Press the push switch to illuminate the LED.

Pairing Instructions

1. Turn off all Bluetooth devices in the surroundings.
2. Power on both the Yapalong-6000 radio and the Bluetooth PTT Button.
3. If the Settings light is solid on the radio, it indicates successful pairing.
4. If the Settings light is flashing slowly, the radio has a paired PTT Button but cannot detect it.
5. To pair a new PTT Button, press both the Settings and Subgroup (or MIC) buttons until the Settings light flashes quickly.
6. Ensure the PTT Button to be paired is ON and not paired with another radio. Pairing will be indicated by a solid Settings light.

Note

The voice transmission begins 2 seconds after pressing the PTT button.

FAQ


Q: What should I do if the PTT button does not pair with the radio?

A: Make sure both devices are powered on and follow the pairing instructions carefully. Ensure the PTT Button is not paired with another radio.

Q: How long does the CR2032 battery last?

A: The battery life can vary based on usage but typically lasts for several months under normal conditions.

INSTALLATION

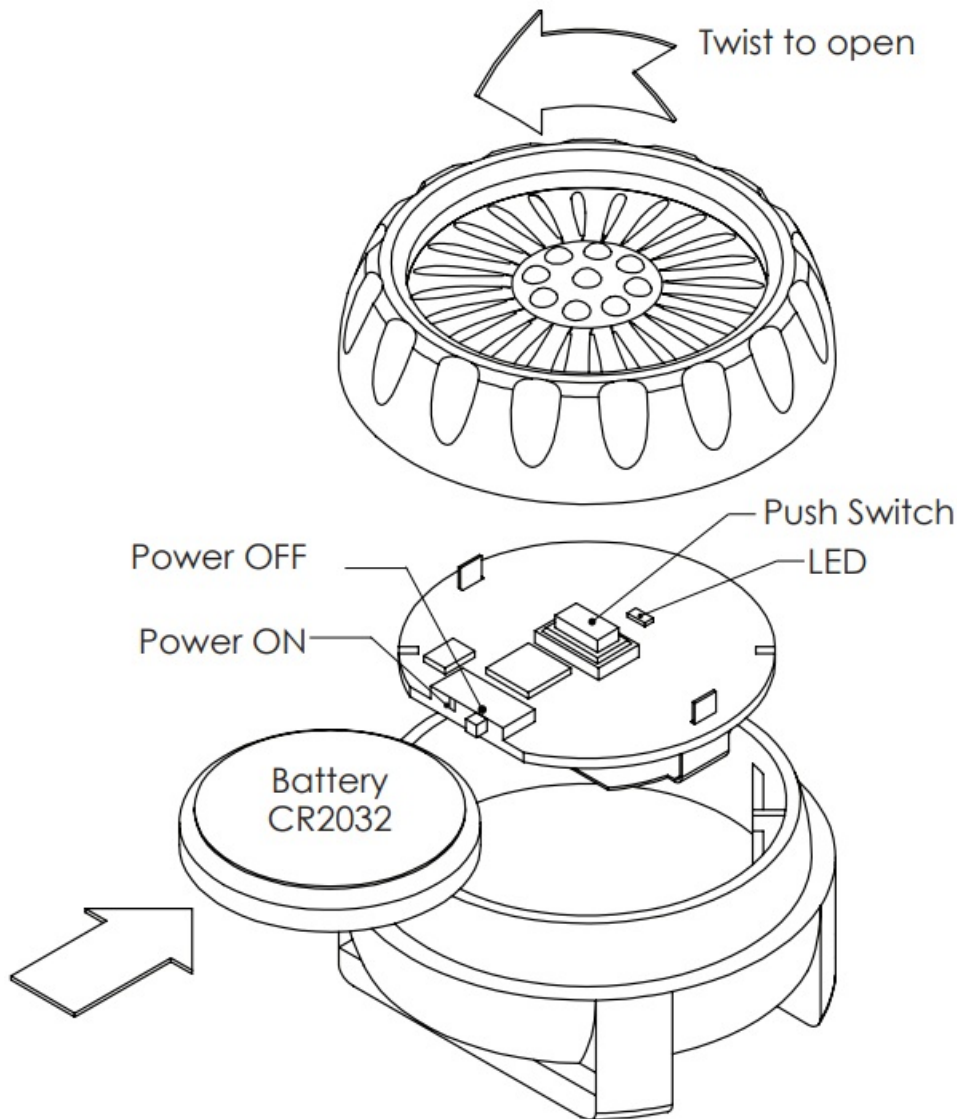

Bluetooth PTT Button ONLY Works with Yapalong-6000 PTT Unit, Not Open-MIC Unit

Power On Button

1. Twist the cap counterclockwise 3° (in the arrow direction of the figure) to open it.
2. Insert the battery into the battery compartment according to the polarity shown in the figure.
3. Set the power switch lever at the ON position.

The LED will illuminate when the push switch is pressed.

Pairing

Before starting, please turn off all the Bluetooth devices in the surroundings. Power on both the Yapalong-6000 radio and the Bluetooth PTT Button. On the RADIO you will see:



Settings Light is solid on

It indicates that the radio has detected its paired PTT



Button. Or:

Settings Light is flashing slowly

It indicates that the radio has a paired PTT Button but cannot detect it.

To pair a new PTT Button, press both the Settings and Subgroup



(or MIC



)buttons, then:



Settings Light is flashing quickly


It indicates that the radio is ready to pair a PTT Button.

Make sure the PTT Button to be paired is ON and not paired with another radio. In 5 seconds or more, the Settings light will turn solid, which indicates both are paired.

Note

The voice transmission begins in 2 seconds after the PTT button is pressed.

Documents / Resources

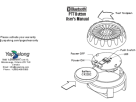	<p>Yapalong Yapalong-6000 Bluetooth PTT Button [pdf] Instruction Manual</p> <p>Yapalong-6000 Bluetooth PTT Button, Yapalong-6000, Bluetooth PTT Button, PTT Button, Button</p>
---	--

References

- [Warranty Activation – Yapalong](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.