



Contents [[hide](#)]

- [1 YASHICA Digimate 100 Digital Camera](#)
- [2 Getting Started](#)
- [3 Product Overview](#)
- [4 Operational Instructions](#)
- [5 Operational Instructions](#)
- [6 Display overview](#)
- [7 Menu Settings for Photo Mode](#)
- [8 Menu Settings for Video Mode](#)
- [9 Overall System Settings](#)
- [10 Cleaning and Maintenance](#)
- [11 Troubleshooting](#)
- [12 Specification](#)
- [13 Warranty Policy](#)
- [14 Documents / Resources](#)
 - [14.1 References](#)

YASHICA

YASHICA Digimate 100 Digital Camera



Getting Started


Please read the manual carefully before use to ensure appropriate use of product functions. Please keep this manual for future inquiries.

What is in YASHICA DigiMate?



1. YASHICA DigiMate Camera
2. Storage bag
3. User Manual
4. Type-C USB Charging Cable
5. Hand strap
6. Cleaning cloth
7. Key chain

Product Overview

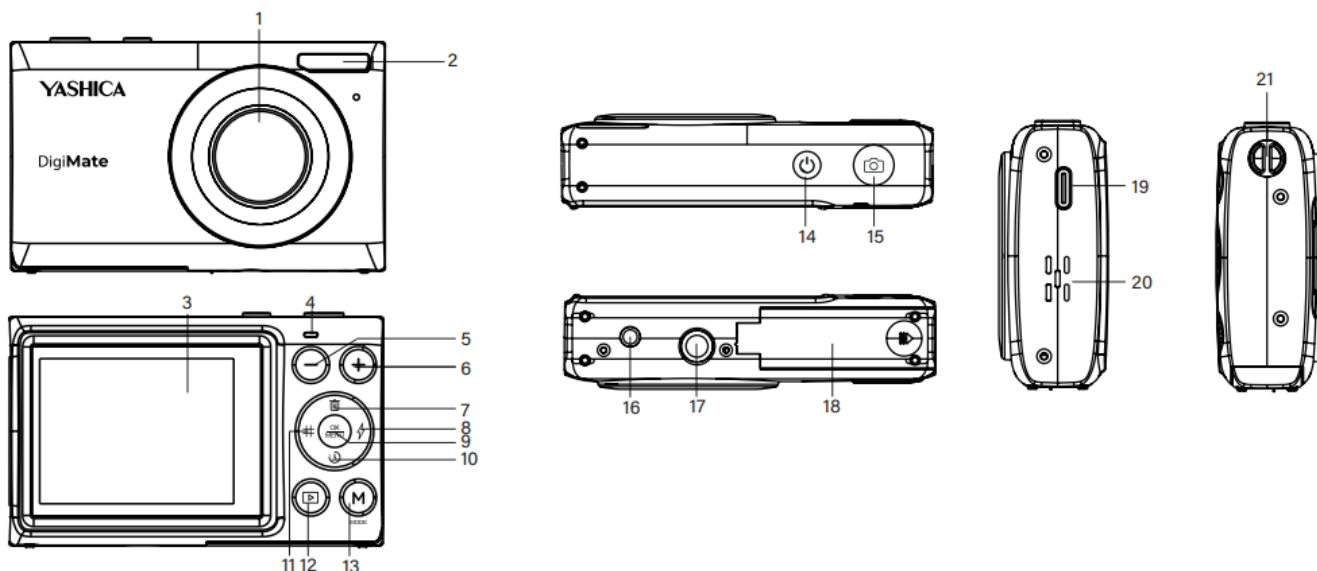

1. Lens
 2. Flashlight
 3. Display
 4. Charging Indicator
 5. Zoom out
 6. Zoom in
 7. Up/Deleting Files Button
 8. Right/Flash setting/Fast Forwarding Button
 9. OK Button/Menu Button
 10. Down/Timer Setting Button
 11. Left/Grid Setting/Rewinding Button
 12. Playback Function
 13. Mode Setting Button (Photo/Video/Time Lapse/Slow motion/Photo timer/Playback)
 14. Power Button
 15. Shutter Button
 16. 3.5mm Interface
 17. Tripod Mount
 18. Battery Cover (Battery slot /TF/Micro SD card slot inside)
- * No TF/Micro SD Card is included.*
19. Type-C USB Port
 20. Speaker
 21. Handstrap Hook

First time using YASHICA DigiMate

1. Inserting the TF/MicroSD Card

- Open the battery cover on the left bottom (camera lens facing the user) to insert the TF/MicroSD Card into the TF/MicroSD card Slot. When the card is locked, you will hear a “click” sound.
Close the cover.
- **Remarks:** Make sure the device is turned off.
- **Important:** Format the TF/MicroSD Card for first-time use.
- Use the TF/MicroSD card with C10 or higher speed.
- If the TF/Micro SD card is not formatted, a box will pop up to ask you to format the card. Please proceed to format the memory card.
- Format the TF/MicroSD Card in the camera. Press the Menu Button and go to the Format function, select OK to confirm.
- If there is any existing data in the TF/MicroSD card, please back up the data before formatting. The data cannot be recovered after confirming the option to format the TF/MicroSD card.

2. Charging YASHICA DigiMate

- Connect the Charging Cable to the USB Type-C Port.
- The charging indicator turns red while being charged. It will turn green and automatically turn off when the camera is fully charged. Make sure the battery is inserted in the camera, and charge with the provided Type C USB charging cable.
- It takes about 2 hours to charge the battery.

3. Attaching the hand strap

Attach the provided hand strap to the hook.

4. Attaching to tripod

Mount the camera to tripods with 1/4"-20 thread mount for capturing the moments in photos or video.

5. Attaching an adaptor or instrument for the 3.5mm interface Plug in professional microphones or instruments to improve the sound quality

Operational Instructions

1. Lens

Focus lens

2. **Flashlight**

Flashlight.

3. **Display**

Display screen.

4. **Charging Indicator**

Blue light: The camera is working with a battery.

Red light: The camera is charging; it will be off when the camera is fully charged.

Remarks: You can use the camera while charging it with a portable charger.

5. **Zoom out**

Zoom out while taking photos and videos.

Remarks: The button sound volume cannot be changed; it can only be turned off or on.

6. **Zoom in**

Zoom in while taking photos and videos.

Remarks: The button sound volume cannot be changed; it can only be turned off or on.

7. **Up/Deleting Files Button**

Up: Going up in the menu settings.

Go to Mode Setting Button to choose Playback and choose Delete current file/Delete all files/Cancel.

8. **Right/Flash setting/Fast Forwarding Button**

Up: Going right in the menu settings

Press once to turn on the flashlight.

Press two times to turn on auto the flashlight when there is not enough light in the detection.

Press three times to turn off the flashlight.

9. **OK Button/Menu**

OK: Select the parameter and confirm the setting.

10. **Enter Menu settings for Photo mode:**

- Photo Resolution
- Auto
- Continuous Shooting

Enter Menu settings for Video mode.

- Video Resolution

- Recording Sound
- Continuous Shooting

Settings:

- Language
- Date-Time
- Light Source Frequency
- Indicator Light

Press OK button to choose from the parameters available in each setting.

Press Mode button as the return to the Menu last page/ home page.

- Photo Quality
- Effect
- White Balance
- Video Quality
- Effect
- White Balance
- Button sound
- Power on/off sound
- Auto Screensaver
- Auto Shutdown
- ISO
- Exposure
- Metering Mode
- Flashlight
- ISO
- Contrast
- Exposure
- Metering Mode
- Flashlight
- Time Watermark
- Format
- Image Rotation
- Reset to Factory

Settings

- Firmware Version

11. **Down/Timer Setting Button**

Left: Going left in the menu settings

Timer:

1. Press once to set the 3-second timer.
2. Press 2 times to set the 10-second timer.
3. Press 3 times to set the 15-second timer.
4. Press 4 times to set the 20-second timer.
5. Press 5 times to set the 30-second timer.
6. Press 6 times to cancel the timer.

12. **Left/Grid Setting/Rewinding Button**

Left: Going left in the menu settings.

Press once to see the grid for photo taking.

Press 2 times to cancel the setting.

13. **Mode Setting Button (Photo/ Video/ Time Lapse/ Slow motion/ Photo timer/ Playback)**

Mode Setting

Press once to see the following options.

- Photo mode
- Video mode
- Time Lapse

Select the mode and press OK button.

Acting as the Back/Return option to the last page/homepage option.

14. **Power Button**

Turn the camera on and off.

15. **Shutter Button**

In Photo mode, press to take a photo.

Press shortly to focus.

16. **3.5mm Audio Interface**

Plug in professional microphones or instruments to improve the sound quality

Tripod Mount

17. **Battery Cover**

(Battery slot /TF/Micro SD card slot inside) *No TF/Micro SD Card is included.*

Install battery and Micro SD card

18. **Type-C USB Port**

USB Type-C charging and connect to the computer with the cable.

19. Speaker

20. Handstrap Hook

Attach a hand strap

Operational Instructions

Camera settings

The camera supports photos and videos in corresponding modes.

How to Take A Photo

1. The camera is in photo mode by default when you turn on the camera.
2. Press the Shutter Button to take a photo.

How to Record A Video

1. Press the Mode Setting Button to choose and enter Video Mode.
2. Press the Shutter Button to start/stop recording. When recording, there is a blue flashing sign as the Indicator Light and the recording will start from 00:00:01 onwards.
3. Press the Shutter Button to stop recording.

How to Take A Time Lapse Video

1. Press the Mode Setting button to choose and enter Time Lapse.
2. Press the Shutter Button to start a slow-motion video. When recording, there is a blue flashing sign as the Indicator Light and you can see the red dot near the date and time tag.
3. Press the Shutter Button to stop the time-lapse video.

How to Take A Slow-Motion Video

1. Press the Mode Setting button to choose and enter Slow Motion.
2. Press the Shutter Button to start a time-lapse video. When recording, there is a blue flashing sign as the Indicator Light and you can see the red dot near the date and time tag.

3. Press the Shutter Button to stop the slow-motion video.


How to Set the Timer

1. After entering this mode, the default timer is 3 seconds for taking a photo.
2. Press the Down Button once to change the setting to 5 seconds.
3. Press the Down Button two times to change the setting to 10 seconds.
4. Press the Down Button three times to change the setting to 20 seconds.

How to Playback and Delete Files (Photos and Videos)

1. Press the Mode Setting Button to choose the Playback.
2. Press Left or Right Button to select and go back and forth for photos and videos.
3. Press Up Button. Choose from the option “Delete current file/ Delete all files/Cancel”
4. Press OK and a box pops out. Choose Confirmation or Cancel, and Press OK button to confirm your option to delete the select image/video.
5. Alternatively, Choose Cancel and press OK to exit delete files.
6. Please press the “Mode” button to exit the Playback mode.

Display overview

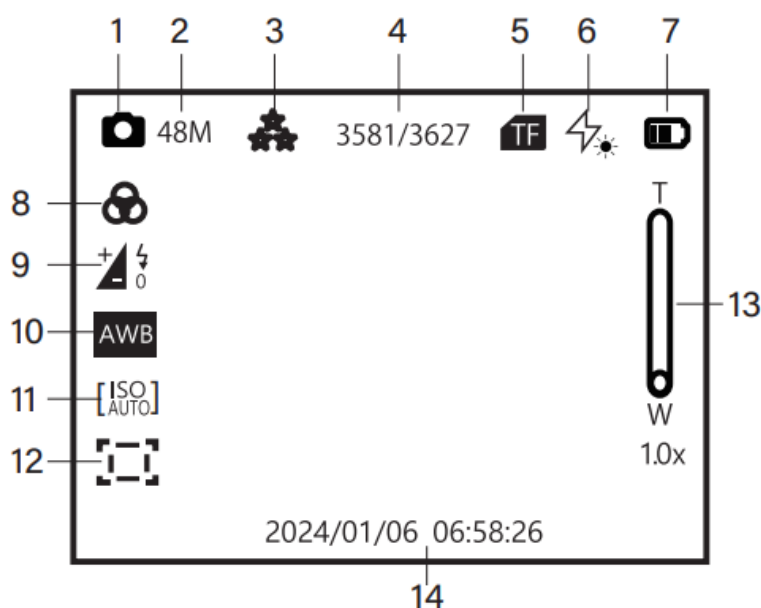

1. Photo/ Video Mode
2. Photo/Video Resolution
3. Photo Quality

4. Remaining photos/Remaining storage
5. TF/Micro SD Card Inserted
6. Flashlight
7. Battery Level
8. Effect
9. Exposure
10. AWB
11. ISO Setting
12. Grid Setting
13. Digital Zoom
14. Date and Time

Menu Settings for Photo Mode



Photo Resolution

You can choose to set the photos in the following resolutions:

48MP/44MP/30MP/24MP/20MP/12MP/8MP/5MP/3MP.

The default setting is 48MP.

Press Mode Button to return to the Menu Settings.



Timer

You can set the timer function from Off/ 3 seconds/ 10 seconds/ 15 seconds/ 20 seconds/ 30 seconds.

The default setting is off.

Press Mode Button to return to the Menu Settings.



Continuous Shooting

You can set the continuous shooting function to be 3 photos per shoot/ 5 photos per shoot of 10 photos per shoot. The default setting is off.

Press Mode Button to return to the Menu Settings.



Photo Quality

You can set the photo quality to be general, good or very good. The setting allows you

to pick the photo quality. The default setting is very good.

Press Mode Button to return to the Menu Settings.



Effect

You can choose the photo effects based on your preference.

The default setting is normal.

Press Mode Button to return to the Menu Settings.



White Balance

You can choose the white balance to be Auto, Sunny, Cloudy, Incandescent Light, Fluorescent Light.

The default setting is Auto.

You can choose the photo effects based on your preference.

Press Mode Button to return to the Menu Settings.



ISO

You can choose the ISO based on your preferences from Auto, 100, 200, 400, 800, 1600, 3200 and 6400.

The default setting is Auto.

Press Mode Button to return to the Menu Settings.



Exposure

You can set the exposure from +3 to -3.

The default setting is 0.

Press Mode Button to return to the Menu Settings.



Metering Mode

You can choose the following options: Average Metering, Center Metering, Spot Metering and Matrix Metering. The default setting is Average Metering.

Press Mode Button to return to the Menu Settings.



Flashlight

You can choose the flashlight settings here:

Off/On/Auto

Auto power off setting to be off, 1 minute, 2 minutes, 3 minutes, 4 minutes, 5 minutes or 10 minutes.

The default setting is off.

Menu Settings for Video Mode



Video Resolution

You can choose to set the video resolution in the following resolutions:

4K 30 FPS 720P 120FPS

2.7K 30FPS 720P 60FPS

1080P 60 FPS 720P 30FPS

1080P 30 FPS

The default setting is 4K 30FPS.

Press Mode Button to return to the Menu Settings.



Recording Sound

You can choose to record the sound/audio in the video.

The default setting is on.



Loop Recording

You can set the loop recording for the videos to be taken at a certain period of time and continue as a separate a video.

You can choose from off/ 2 minutes/ 3 minutes/5 minutes

It means that after the video is taken to 2 minutes, the video will be saved and the camera will start a new recording. The default setting is off.

Press Mode Button to return to the Menu Settings.



Video Quality

You can set the video quality to be general, good or very good. The setting allows you to pick the video quality. The default setting is very good.

Press Mode Button to return to the Menu Settings.



Effect

You can choose the photo effects based on your preference.

The default setting is normal.

Press Mode Button to return to the Menu Settings.



White Balance

You can choose the white balance to be Auto, Sunny, Cloudy, Incandescent Light, Fluorescent Light.

The default setting is Auto.

You can choose the photo effects based on your preference.

Press Mode Button to return to the Menu Settings.



ISO

You can choose the ISO based on your preferences from Auto, 100, 200, 400, 800, 1600, 3200 and 6400.

The default setting is Auto.

Press Mode Button to return to the Menu Settings.



Contrast

You can choose the contrast based on your preferences: 0/1/2/3/4/5.

The default setting is 0.

Press Mode Button to return to the Menu Settings.



Exposure

You can set the exposure from +3 to -3.

The default setting is 0.

Press Mode Button to return to the Menu Settings.



Metering Mode

You can choose the following options: Average Metering, Center Metering, Spot Metering and Matrix Metering. The default setting is Average Metering.

Press Mode Button to return to the Menu Settings.



Flashlight

You can choose the flashlight settings here:

Off/On/Auto

Auto power off setting to be off, 1 minute, 2 minutes, 3 minutes, 4 minutes, 5 minutes or 10 minutes.

The default setting is off.

Overall System Settings



Language

There are 11 languages to support, including

- Simplified Chinese
- Traditional Chinese
- English
- Japanese
- Korean
- German
- Italian
- Spanish
- Portugese
- Bahasa
- Thai
- French

The default language is in English.

Press Mode Button to return to the Menu Settings.



Date-Time

You can choose to turn on or off the Date-Time tag. You can choose to set date in the following format. YYYY/MM/DD hr:min:sec

The default setting is on.



Frequency

The frequency setting is 60Hz/50Hz.

The default setting is Auto.

Press Mode Button to return to the Menu Settings.



Indicator Light

You can set the indicator light to be off/on.

The default setting is on.



Button sound

You can choose to turn on or off the button sound.

The default setting is on.



Power on/off sound

You can choose to include the power on or off sound.

The default setting is on.



Auto Screensaver

You can choose to set the screensaver option to be off, 10 seconds, 20 seconds or 30 seconds. For setting 10/20/30 seconds, it means the camera is inactive after the set time and the screen turns black. Once you press any button, the camera will be turned on.

The default setting is off.

Press the Mode Button to return to the Menu Settings.



Auto Shutdown

You can choose the Auto Shutdown function to be off/ 1 minute/ 3 minutes / 5 minutes / 30 minutes / 60 minutes. The default setting is 3 minutes.

Press the Mode Button to return to the Menu Settings.



Time Watermark

You can choose to include the time and date as a watermark/tag on the photo/video. The default setting is on.



Format

This function allows you to format the TF/Micro SD Card.

If there is any pre-existing photos or videos, please back up before proceeding to format the TF/Micro SD card. Formatting sets the TF/Micro SD card to fit with the camera's file structure in storing the photos and videos.



Image Rotation

You can choose the photo to be rotated. The default setting is off.



Reset To Factory Settings

You can choose to reset the system to its original factory settings.



Firmware Version

You can see the firmware information.

Model: DigiMate

Version: V1.2.0

How to Download Photo/ Video Files to a Computer with USB Card Reader

1. Connect the TF/MicroSD card to a USB Card Reader.
2. You can see a folder with the files, and hence, you can download the photo and video files from the camera to your computer.
3. After downloading, please remove the USB Type-C cable and press "Eject".

How to Download Photo/ Video Files to a Computer

1. Turn on the camera and connect it the camera with the USB Type-C cable and the computer
2. You can see the screen pops out: Mass Storage Mode, PC Camera or Charging Mode.

3. Click Mass Storage Mode and the folder with the files will pop out. You can download the photo and videos files from the camera to your computer.
4. After downloading, please remove the USB Type-C cable and press "Eject".

Connecting the PC Camera mode:

This camera can be used as a webcam.

Remarks: No other functions can be used.

Charging Mode

You can still use the camera while it is being charged. Turning off the camera will speed up the charging process.

Remarks for battery:

If the battery is mishandled, the battery can possibly burst, leading to a fire or burn. Please be aware of the following cautions.

- Do not disassemble.
- Do not crush and do not expose the battery to any shock or excessive force, such as hammering, dropping or stepping on it.
- Do not allow metal objects to come into contact with the battery terminals.
- Do not expose the battery to temperatures above 60°C (140°F) in direct sunlight or in a car parked under the sun.
- Do not incinerate or dispose of in a fire.
- Do not handle the damaged or leaking lithium-ion battery.
- Make sure to charge the battery with a reliable charger.
- Keep the battery pack out of the reach of young children.
- Keep the battery pack dry.
- Replace only with the same battery as YASHICA.
- Dispose of used battery packs promptly as described in the instructions.

Cleaning and Maintenance

1. If the camera is not used for an extended period, remove the battery and store it in a dust-free, dry environment at a temperature not exceeding 30°C .

2. To prolong the battery life, it is recommended to fully discharge it before storage.
3. After the battery is fully charged, discharge it completely at least once every 3 months.
4. If there is dust or dirt on the lens or screen, gently wipe and clean the camera with the provided cleaning cloth.
5. Avoid dropping it or subjecting it to strong impacts or vibrations.

Troubleshooting

Problem	Solution
The camera cannot be turned on because of low/no battery.	The battery is not charged. Please charge the battery and you will see the charging indicator turns red.
	The battery could be inverted, please make sure that the battery is not inverted.
The camera crashes/the screen is frozen.	Do not press the buttons too quickly or the camera system may not be able to handle the command.
	Please check whether the TF/Micro SD card is in Class 10, the maximum storage is not more than 256G.
The camera crashes/the screen is frozen.	Do not press the buttons too quickly or the camera system may not be able to handle the command.
	Make sure the TF/Micro SD card is inserted properly. Please check whether the memory card is inserted backwards.

Back up the photos and videos from the TF/MicroSD Card to your computer

or other storage medium. Format the TF/MicroSD Card from the Format function or from your computer.

Specification

Product Name YASHICA DigiMate

Model Number YAS-DGM100

Sensor 8MP CMOS sensor

ISO Auto, 100, 200, 400, 800, 1600, 3200

Memory Micro SD/TF Card, Support up to 128GB (Not included in the camera)

Lens Fixed, F/3.2 f=7.36mm

Focus Auto focus 1meter

Photo File Format: JPEG

Video Resolution: 3MP, 5MP, 8MP, 12MP, 20MP, 24MP, 30MP, 44MP, 48MP, 64MP

File Format: MP4 Resolution: HD 1280X720@120FPS, FHD 1920X1080@60FPS, 2.7K 2688X1520@30FPS, 4K 3840X2160@30FPS

Zoom 18X Digital Zoom

Anti-shake DIS

Speaker Built in

Screen 2.7 inch TFT screen(4:3)

LED light <1.5M

Camera flash Auto, on, off

White balance Auto/Daylight/Cloudy/fluorescent/Incandescent

Light Exposure -3.0EV~+3.0EV

Camera timer OFF/3s/5s/10s/20s

Por USB2.0

Auto power-off OFF/1min/3min/5min

Battery Li-ion

Warranty Policy

If you are experiencing a problem with a YASHICA purchase, please kindly read the information below to understand and determine if the issue is covered under the YASHICA warranty.

1. YASHICA products are guaranteed against manufacturing defects one (1) year from the original date of purchase. YASHICA's sole obligation in the event of defects during the said period is to repair or replace the defective part or product with a comparable part at YASHICA's discretion. Please keep the receipt or invoice of your purchase.
2. The warranty card and original purchase receipt must be emailed to YASHICA at cs@yashica.com and/or presented to the YASHICA authorized service facility before any repairs can be made under warranty.
3. All costs, including but not limited to transportation, mail and incidental charges, in relation to repair work are at the user's expense.
4. Warranty does not apply to any of the following:
 1. Damages arising from normal wear and tear; cosmetic damages, including scratches or dents;
 2. Damages caused by misuse, abuse, mishandling, misplacement, or alteration of the product or any usages that contradict the instructions stated in the User Manual;
 3. Products that have been disassembled, repaired or modified by person(s) other than a YASHICA authorized service facility;
 4. Losses and damages arising from accidents or natural calamities;
 5. Damage caused as a result of improper transportation or packing/packaging when returning the product
5. If it is determined that the product is not covered under warranty, you will be required to confirm the quotation provided and pay for the repair. Once the payment is made, YASHICA will arrange for relevant repair/ replacement.
6. If it is determined that the warranty covers the product's fault, such as a manufacturing defect covered by the warranty, YASHICA will repair/replace your unit at no charge/free of charge. At YASHICA's discretion, YASHICA will cover shipping costs. Communication will be carried out via email at cs@yashica.com
7. We reserve the right to modify these terms without prior notice.

For any enquiries, please feel free to email to cs@yashica.com


Address: Room 403, Floor 4, Shiu Fat Industrial Building, 139-141 Wai Yip Street, Kwun Tong, Kowloon, Hong Kong

YASHICA products are guaranteed against manufacturing defects for one (1) year from the original date of purchase. YASHICA’s sole obligation in the event of defects during the said period is to repair or replace the defective part or product with a comparable part at YASHICA’s discretion. Damage resulting from use, accident, or normal wear and tear is not covered by this or any warranty. YASHICA assumes no liability for any accident, injury, death, loss, or other claim related to or resulting from using this product. In no event is YASHICA liable for incidental or consequential damages relating to or resulting from using YASHICA products or any of their parts. Returns or replacement of parts and products may be subject to shipping, handling, replacement and restocking fees.

If you have further questions or comments, please contact our customer support team – at cs@yashica.com.

YASHICA.com

Documents / Resources

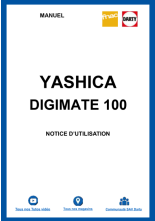	<p>YASHICA Digimate 100 Digital Camera [pdf] User Manual</p> <p>Digimate 100 Digital Camera, Digimate 100, Digital Camera, Camera</p>
---	---

References

- [User Manual](#)

📁 YASHICA 📎 camera, Digimate 100, Digimate 100 Digital Camera, Digital Camera, YASHICA

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.