

Yeastar DS7310 Room Display Installation Guide

Home » Yeastar » Yeastar DS7310 Room Display Installation Guide 🖫

Contents


- 1 Yeastar DS7310 Room Display
- 2 Package Contents
- 3 Features
- **4 Exterior Components**
- **5 Installation Instructions for Wall**

Mounting

- 6 FCC STATEMENT:
- 7 Documents / Resources
 - 7.1 References
- **8 Related Posts**



Yeastar DS7310 Room Display

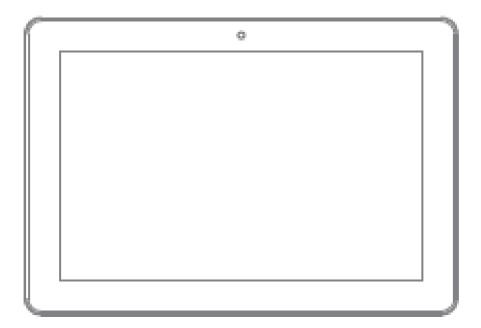

Package Contents

Please make sure all of the following are present when you unpack the product package.



Yeastar Room Display DS7310







Quick Installation Guide




VESA mount metal kit

Features

- RK3288, Quad-core Cortex A17
- Resolution: 1280*800, 10.1" LCD panel
- 5.0M/P, front camera
- RAM 2GB
- Internal memory 16GB


- Android 8.1
- Point capacitive touch
- Wi-Fi 802.11 b/g/n
- RJ45 Ethernet with PoE
- USB 2.0
- VESA: 75*75mm

Exterior Components

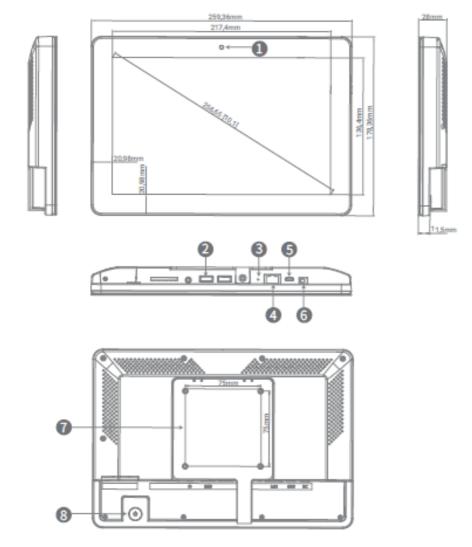


No.	Function	No.	Function
1	Camera	5	Micro USB OTG
2	USB 2.0	6	DC in power supply port
3	Recovery	7	VESA 75*75mm
4	LAN port: RJ45 with PoE	8	Power button


Installation Instructions for Wall Mounting

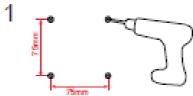


Position the mounting bracket at the desired height on the wall and mark the four hole locations. Use a 6mm diameter drill bit to drill four holes to a depth of 36mm on the marked position.

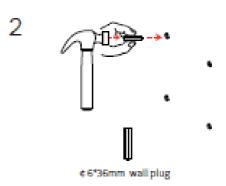


Hammer the wall plugs into the holes respectively.

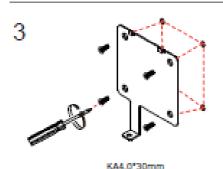


Press the mounting bracket on the wall and align its holes with the wall plugs, then fix the screws into the wall plugs.

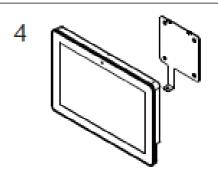

Attach the Room Display to the mounting bracket.

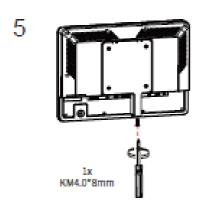

Fix the Room Display to the bracket with a fixing screw.

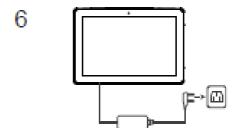

Use an Ethernet cable to connect the LAN port of Room Display and the Data+Power port of PoE injector. Then plug the power cable from PoE injector to a power outlet, the device will be powered on.

FCC STATEMENT:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- 2. This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential

installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body

Declaration of Conformity

Yeastar Room Display is in conformity with the essential requirements and other relevant provisions of the CE and FCC.

Technical Support

For assistance, please contact Yeastar Technical Support. support.yeastar.com

+86 (592) 550-3301

Documents / Resources



<u>Yeastar DS7310 Room Display</u> [pdf] Installation Guide DS7310, Z7C-DS7310, Z7CDS7310, DS7310 Room Display, Room Display

References

PBX System | Cloud PBX | VolP PBX | VolP Gateways | Yeastar

Manuals+,