

YeeSite F-8S-800W Stage Snow Machine for Party



YeeSite F-8S-800W Stage Snow Machine for Party User Manual

[Home](#) » [YeeSite](#) » YeeSite F-8S-800W Stage Snow Machine for Party User Manual 

Contents

- [1 YeeSite F-8S-800W Stage Snow Machine for Party](#)
- [2 INTRODUCTION](#)
- [3 SAFETY INSTRUCTIONS](#)
- [4 OPERATING DETERMINATIONS](#)
- [5 DESCRIPTION OF THE DEVICE](#)
- [6 Specification](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)

YeeSite

YeeSite F-8S-800W Stage Snow Machine for Party



For your own safety, please read this user manual carefully before you initially start up.

- Eve is qualified and involved with the installation, operation, and maintenance of this device and has to Consider ins manua of te pam of the total product
- keep this manual for the entire service life of the product, and pass this manual on to every further owner or user of the product

INTRODUCTION

Thank you for choosing YeeSite Snow Machine. Unpack your snow machine.

SAFETY INSTRUCTIONS

CAUTION

Be careful with your location, it a dangerous voltage you can suffer a dangerous This device has left our premises in absolutely perfect condition. In order to maintain this condition and to ensure a safe operation, it is absolutely necessary for the user to follow the safety instructions and warning notes written in this user manual. This device has left our premises in absolutely perfect condition. In order to maintain this condition and to ensure a safe operation, it is absolutely necessary for the user to follow the safety instructions and warning notes written in this user manual.

Important

Damages caused by the disregard of this user manual are not subject to warranty. The dealer will not accept liability for any resulting defects or problems. Before you initially start up, please make sure that there is no damage caused by transportation. Should there be any, consult your dealer, and do not use the device. If the device has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch it on immediately. The rising condensation water might damage your device. Leave the device switched off until it has reached room temperature. This device falls under protection class I. The power plug must only be plugged into a protection class I outlet. Always plug in the lower plug last.

Never let the power cord come into contact with other cables! Handle the power cord and all connections with the mains with particular caution!

- Make sure that the available voltage is not higher than stated on the rear panel.
- Make sure that the power cord is never crimped or damaged by sharp edges. Check the device and the power cord from time to time.
- Do not touch the output nozzle on this product.
- Do not add perfume, alcohol, gasoline, or any other flammables to the snow fluid.
- In certain environments, snow fluid-based machines may leave a slippery residue on floors and surfaces.
- Use only non-toxic water-based snow fluid.
- Drain the tank before transporting the product.
- Keep the device upright.
- For overhead use (mounting height > 3.3ft), always fix the fixture with an appropriate safety bond.
- Always disconnect from the mains, when the device is not in use or before cleaning it. Only handle the power cord by the plug. Never pull out the plug by tugging the power cord.
- Unused machines must be disconnected from the mains. If the power plug or the power switch is not accessible, the device must be disconnected via the mains.
- Keep away, children and amateurs!
- Never leave this device running unattended.

OPERATING DETERMINATIONS

This device is a special effect machine for creating snow effects. This product is only allowed to be operated with an alternating voltage of AC110V,50/60Hz, and was designed for indoor use only. Do not shake the device. Avoid brute force when installing or operating the device. When choosing the installation spot, please make sure that the device is not exposed to extreme heat, moisture, or dust. Please consider that liquid may be spilled during operation around the device. The resulting slippery surface can cause accidents. There should not be any cables lying around. You endanger your own and the safety of others! Before filling the device disconnect from mains. Never fill in any hot liquids. Operate the device only after having familiarized with its functions. Do not permit operation by persons not qualified for operating the device. Most damages are the result of unprofessional operation!

Store dry

Always drain the tank and please use the original packaging if the device is to be transported. Please consider that unauthorized modifications on the device are forbidden due to safety reasons! Never remove the serial barcode from the device as this would make the guarantee void. If this device is operated in any way different from the one described in this manual, the product may suffer damages and the guarantee becomes void. Furthermore, any other operation may lead to dangers like shortcircuits, burns, electric shock, etc.

WEEE Directive


When to be definitively put out of operation, take the unit(s) to a local recycling plant for disposal A which is not harmful to the environment. Do not dispose of it as municipal waste. Contact your retailer or local authorities for more information.

DESCRIPTION OF THE DEVICE

Features

Powerful mini snow machine

A lot of "snowflakes" are thrown into the room up to a distance of 6.6FT Constant snowing creates a foam/snow build-up, which dissolves gradually • The dissolution of the "blanket of snow" happens nearly

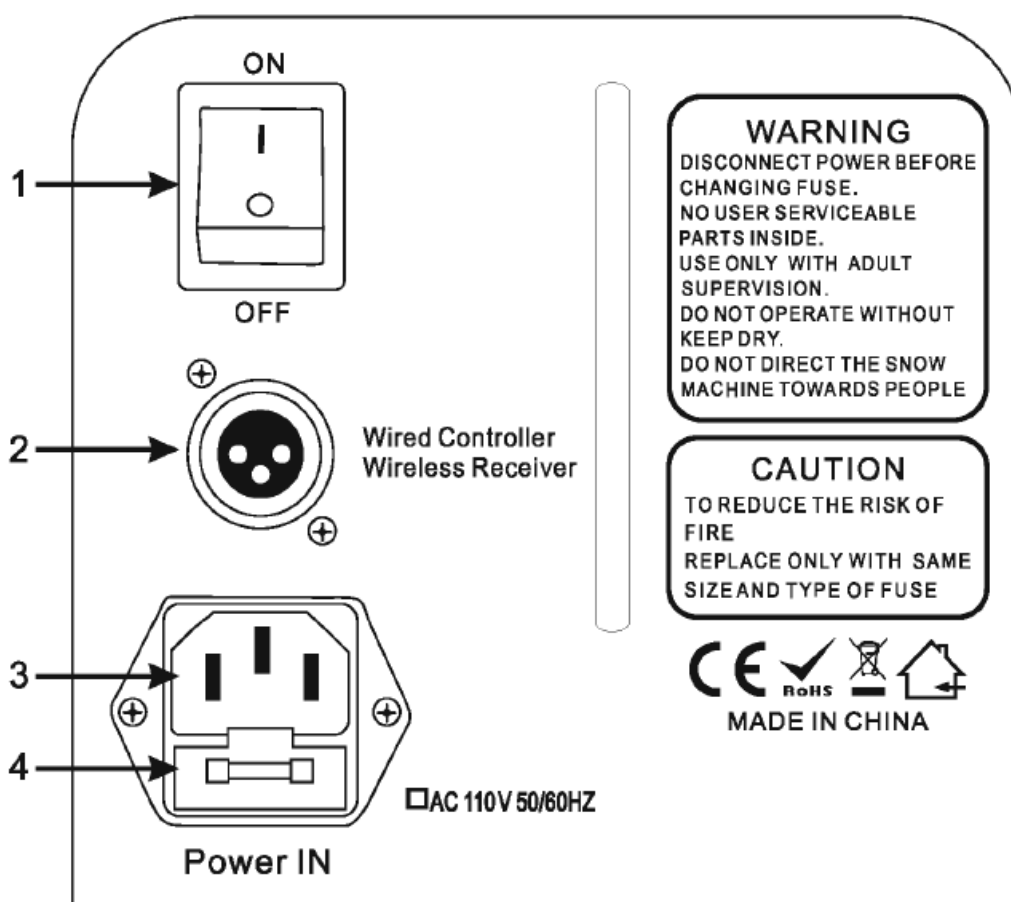


1. Power Switch
2. Wired Controller In/Wireless Receiver In
3. Power In
4. Fuse Holder

Specification

- **Voltage:** AC11 0V,50/60Hz
 - **Power:** 800W
 - **Output:** 60 cubic meters
 - **Control:** Remote
 - **Tank Capacity:** 500ML
 - **Size:** 40 x 30 x 21.5 cm
-

Documents / Resources

 <p>Snow Machine USER MANUAL</p>	<p>YeeSite F-8S-800W Stage Snow Machine for Party [pdf] User Manual F-8S-800W Stage Snow Machine for Party, F-8S-800W, Stage Snow Machine for Party, Snow Machine for Party, Machine for Party</p>
-------------------------------------------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.