YENKEE YCP 2012 Juicebox Controller





YENKEE YCP 2012 Juicebox Controller User Manual

Home » YENKEE » YENKEE YCP 2012 Juicebox Controller User Manual



Contents

- 1 YENKEE YCP 2012 Juicebox
- Controller
- 2 Introductions
- 3 Specification
- 4 System requirements
- **5 Using Instructions**
- **6 CONTACT**
- 7 Documents / Resources
 - 7.1 References



YENKEE YCP 2012 Juicebox Controller



Introductions

- 1. Remove the JUICEBOX additional battery from the packaging and connect it to the top USB-C port on the PS5 controller in such a way that the battery aligns with the top and back of the controller.
- 2. Unless the controller is fully charged, it will immediately start indicating charging through lights, and the Leb lights on the additional battery will illuminate, indicating the level of charge of the additional battery.

The additional JUICEBOX battery features a pass-through USB-C port, allowing the controller to be charged even when the additional battery is connected, and simultaneously charging the additional battery itself. However, during prolonged periods of non-use, we recommend disconnecting the additional battery to prevent discharge and degradation.

Specification

• Connectors: USB-C

Battery Capacity: 1800 mAh
Input: USB-C DC 5V/1A
Output: USB-C DC 5V/1A

System requirements

- PS5 DualSense Controller Clean with a cloth moistened with water.
- The manufacturer takes no responsibility for damages resulting from incorrect use of the product.

Using Instructions

• Instructions and information regarding the disposal of used packaging materials Dispose of packaging material at a public waste disposal site.

Disposal of used electrical and electronic appliances

The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the re-cycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states, you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help prevent the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.



For business entities in the European Union

If you wish to dispose of an electrical or electronic device, request the necessary in-formation from your seller or supplier.

Disposal in other countries outside the Eu-ropean Union

- If you wish to dispose of this product, request the necessary information about the correct disposal method from local government de- departments or from your seller.
- This appliance complies with EU rules and regulations regarding electromagnetic and electrical safety.



Changes to the text, design and technical specifications may occur without prior notice and we reserve the right to make these changes.

CONTACT

Manufacturer:

- FAST CR, a.s., U Sanitasu 1621,
- 251 01 Ricany, Czech Republic

Documents / Resources



References

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.