

YITAHOME FSBY-V2 Double 27 Quart Pull Out Trash Can with Soft Close Slides



YITAHOME FSBY-V2 Double 27 Quart Pull Out Trash Can with Soft Close Slides Instruction Manual

[Home](#) » [YITAHOME](#) » YITAHOME FSBY-V2 Double 27 Quart Pull Out Trash Can with Soft Close Slides Instruction Manual 

Contents

- [1 YITAHOME FSBY-V2 Double 27 Quart Pull Out Trash Can with Soft Close Slides](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 ASSEMBLY INSTRUCTIONS](#)
- [5 Installation](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)

YITAHOME

YITAHOME FSBY-V2 Double 27 Quart Pull Out Trash Can with Soft Close Slides



Product Information

- **Model:** FSBY-V2
- **Product Name:** Kitchen Rubbish Bin
- **Assembly Instructions:** FTKDRH-0011

Specifications

- **Material:** High-quality plastic
- **Color:** White
- **Dimensions:** 15" x 10" x 20"
- **Weight:** 5 lbs

Product Usage Instructions

Assembly Instructions

1. Gather and organize all required parts prior to assembly.
2. Assemble on a flat, clean, and soft surface.

Step-by-Step Assembly

1. Identify all parts using the reference images provided in the manual.
2. Follow the quantity and item number to ensure correct assembly.
3. Make sure to distinguish left and right rails for proper installation.
4. Attach the frame to the cabinet ensuring it is centered with a 5mm distance to the door.
5. Secure the frame with the provided screws.
6. Place the installation card on the door, mark screw holes, and attach the frame securely to the door.
7. Complete the installation by attaching any remaining components following the manual.

Frequently Asked Questions (FAQ)

- **Q: How do I clean the kitchen rubbish bin?**

A: To clean the bin, simply remove the inner container and wash it with mild soap and water. Wipe the outer surface with a damp cloth.

- **Q: Can I use regular trash bags with this bin?**

A: Yes, you can use standard trash bags that fit the dimensions of the bin for easy disposal.

 



 






FSBY-V2

FTKDRH-0011


KITCHEN RUBBISH BIN

ASSEMBLY INSTRUCTIONS

1. Gather and organize all required parts prior to assembly.
2. Assemble on a flat, clean and soft surface.



Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
A	 R L	X1	a	 M4*10mm	X6
B		X2	b	 M4	X4
C		X1	c	 M4*16mm	X16
D		X2	d		X1
E		X2	e		X1
F		X1			

Please distinguish the left and right rails

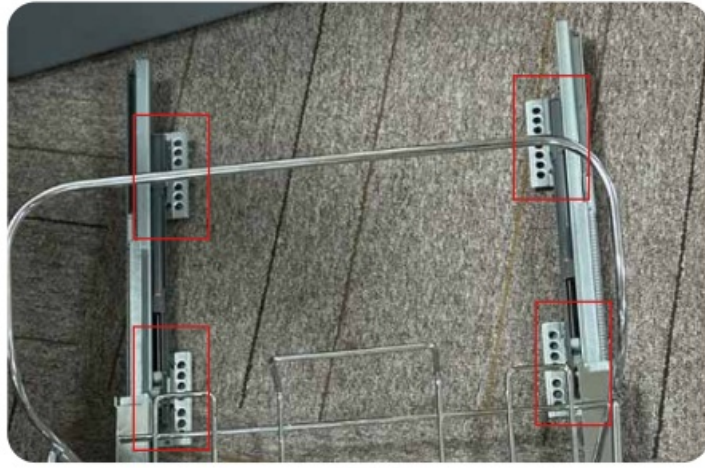

Installation

1

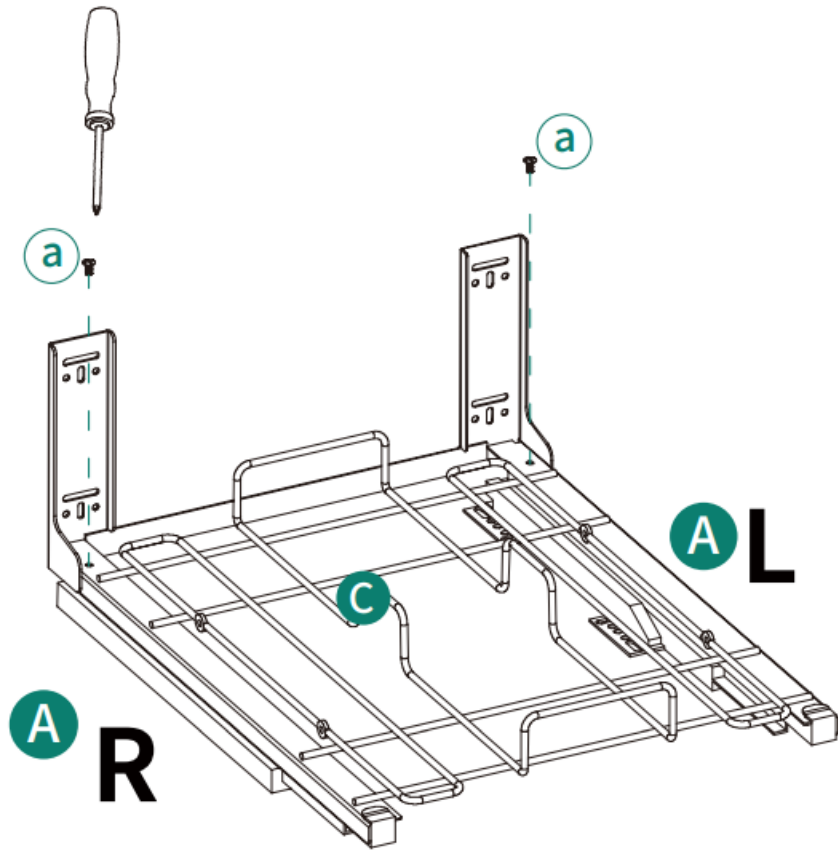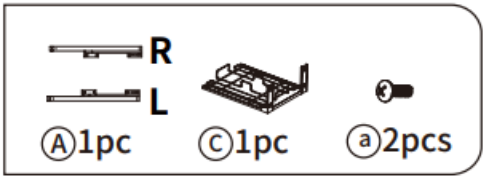

2




ⓓ2pcs





ⓐ4pcs



ⓑ4pcs

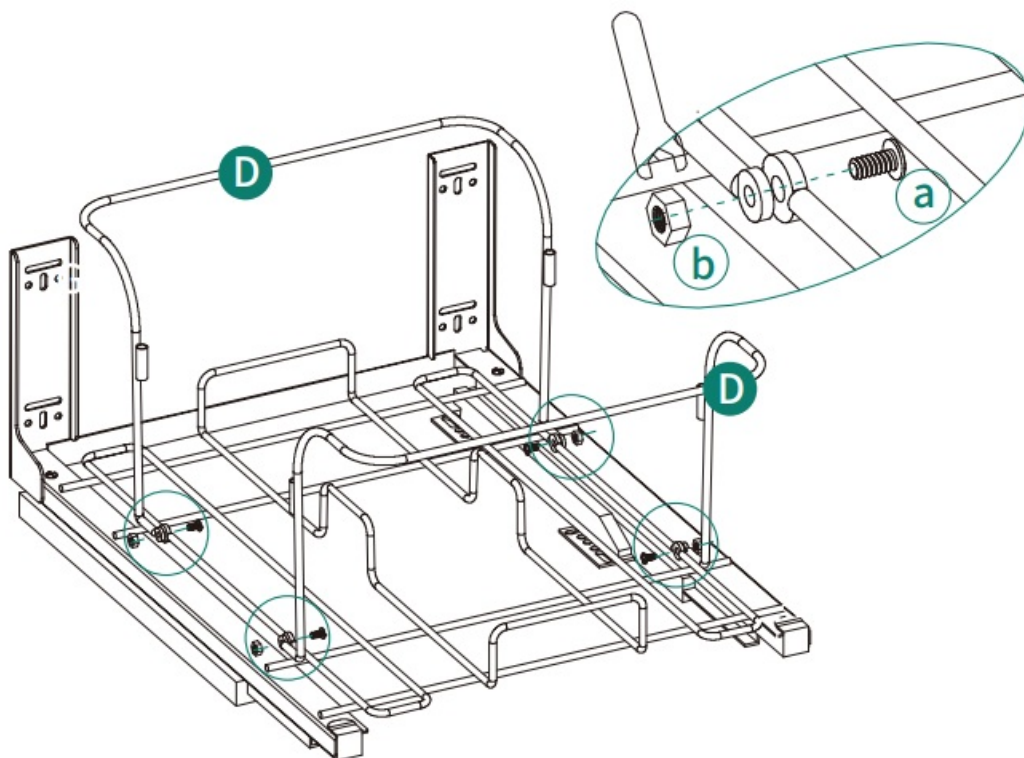

3

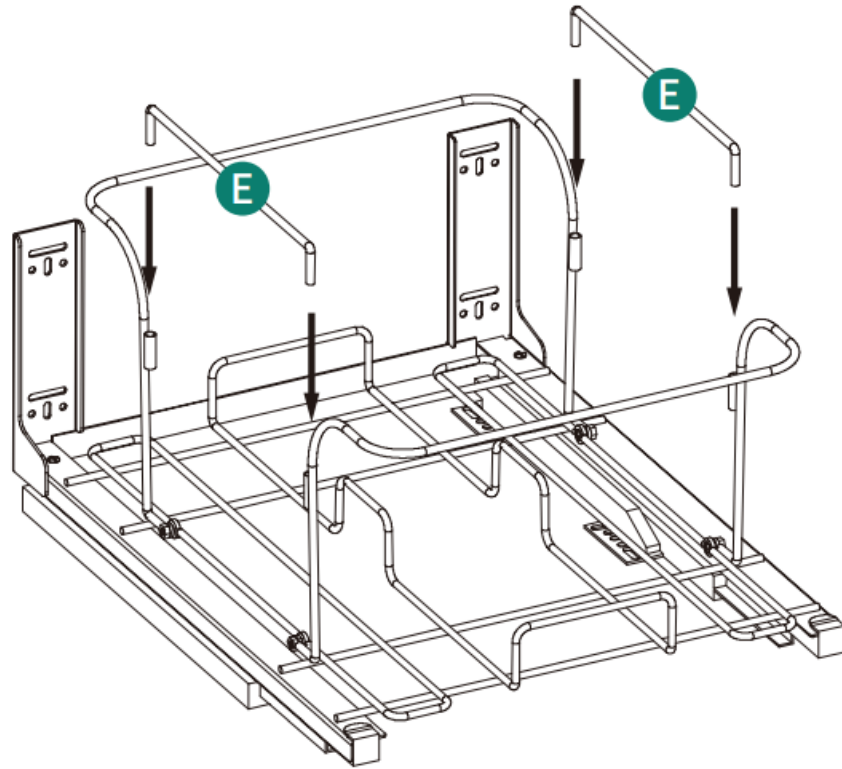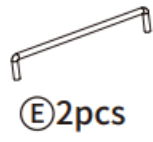


4




Ⓒ8pcs

Locate the frame in the middle of cabinet width, distance to the door is 5 mm, then lock it with screws.

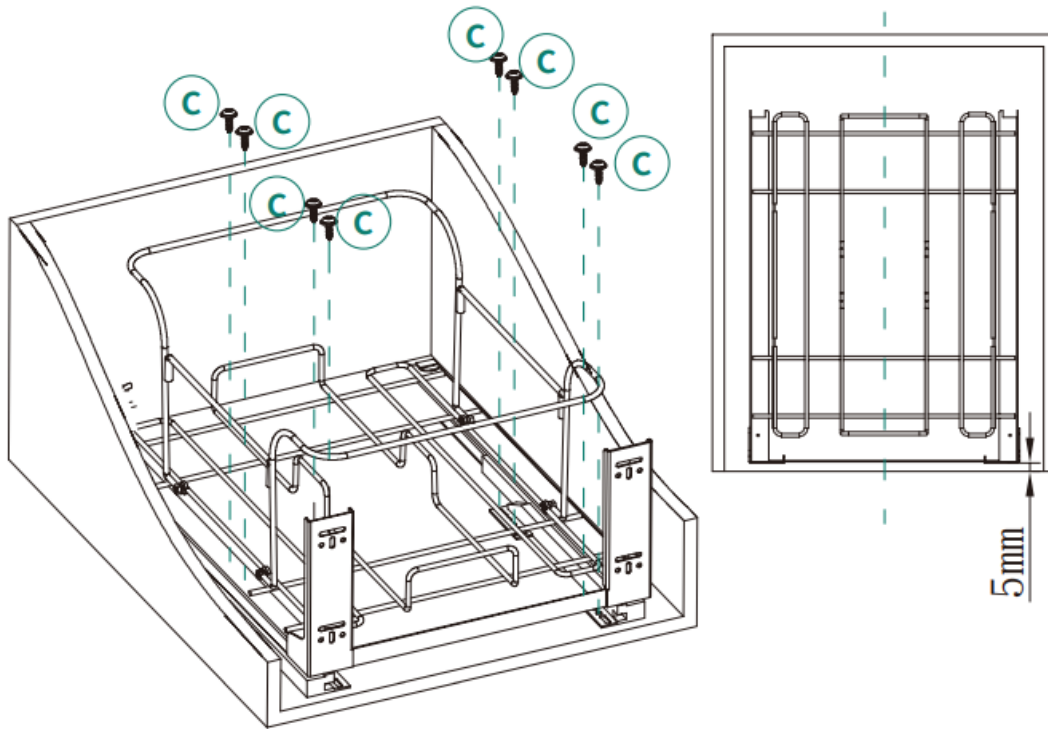

5

 


ⓕ1pc



Ⓒ8pcs


Put the installation card on the door as shown drawing and mark the screws hole, then lock the frame to the door with screws.

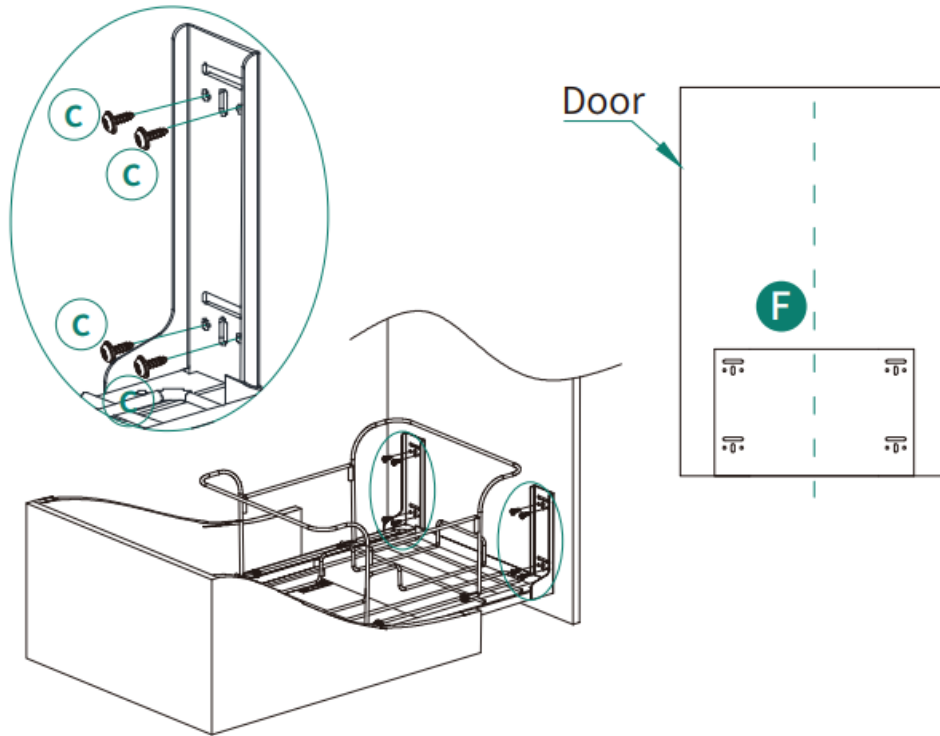


6




Ⓑ 2pcs

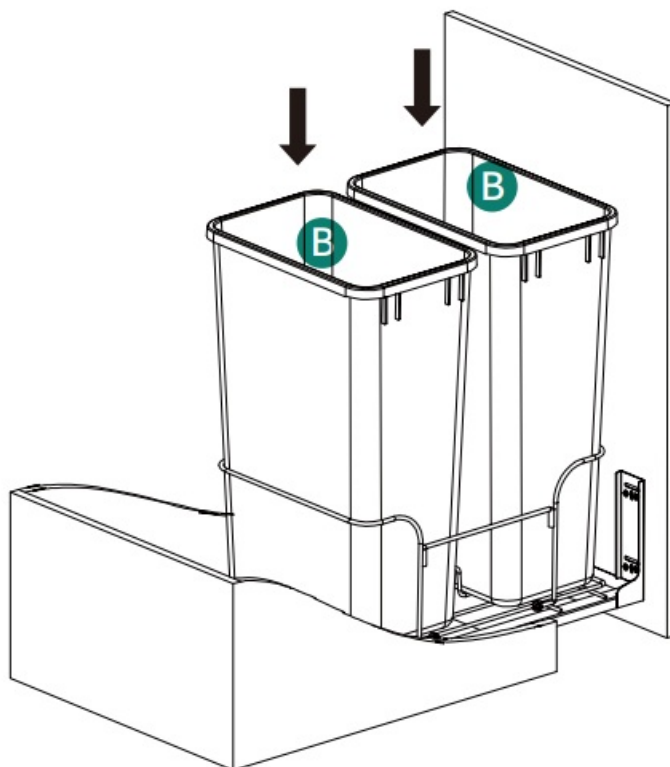

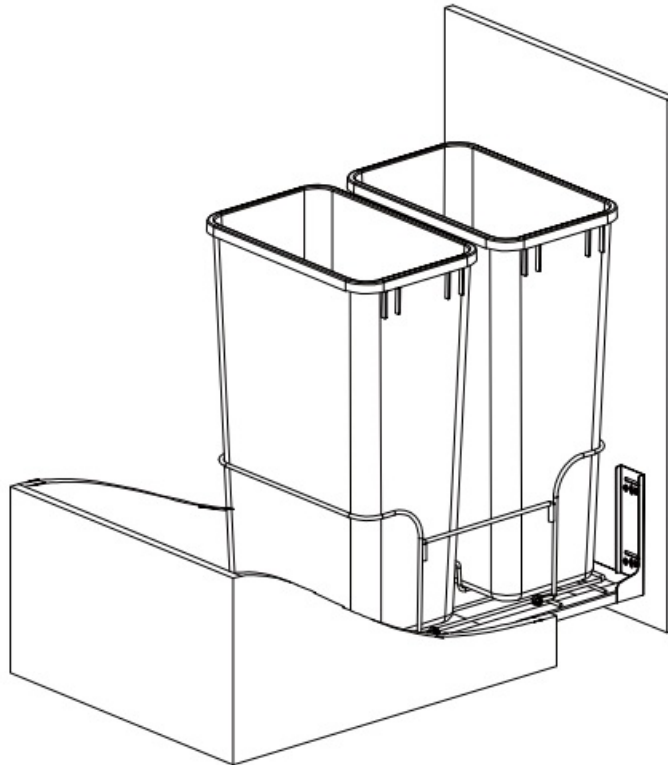

Installation Completed

Documents / Resources

 <p>YITAHOME FSBY-V2 ASSEMBLY INSTRUCTIONS KITCHEN RUBBISH BIN</p>	<p>YITAHOME FSBY-V2 Double 27 Quart Pull Out Trash Can with Soft Close Slides [pdf] Instruction Manual</p> <p>FTKDRH-0011-FSBY-V2, FSBY-V2, FSBY-V2 Double 27 Quart Pull Out Trash Can with Soft Close Slides, FSBY-V2, Double 27 Quart Pull Out Trash Can with Soft Close Slides, Quart Pull Out Trash Can with Soft Close Slides, Pull Out Trash Can with Soft Close Slides, Out Trash Can with Soft Close Slides, Trash Can with Soft Close Slides, Can with Soft Close Slides, with Soft Close Slides, Soft Close Slides, Close Slides, Slides</p>
---	--

References

- [User Manual](#)