



---

[Home](#) » [YLL](#) » **YLL K1-L Portable Wireless Microphone and Speaker User Manual** 

## Contents [ [hide](#) ]


- [1 YLL K1-L Portable Wireless Microphone and Speaker](#)
- [2 Product Diagram](#)
- [3 How to use the speaker](#)
- [4 How to Charge](#)
- [5 HOW TO USE THE MICROPHONE](#)
- [6 Service Description](#)
- [7 FCC Statement](#)
- [8 CONTACT](#)
- [9 FAQ](#)
- [10 Documents / Resources](#)
  - [10.1 References](#)
- [11 Related Posts](#)







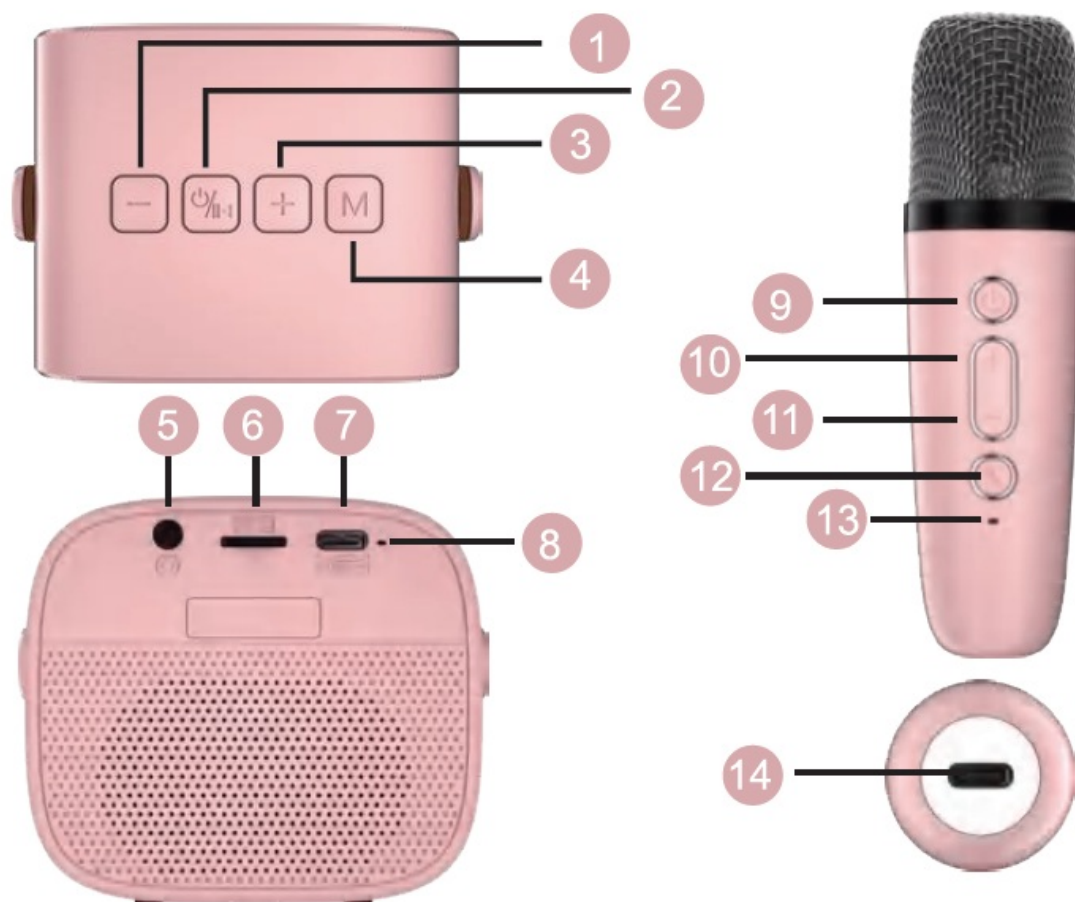

# YLL







## YLL K1-L Portable Wireless Microphone and Speaker




**Product Diagram**



1		Short press to turn down volume of the speaker Long press to switch to the previous song
2		Long press to POWER ON/OFF the machine Short press to PLAY/PAUSE the music
3		Short press to turn up volume of the speaker Long press to switch to the next song
4		Long press to turn on/off LED dancing light Short press to switch modes(TF/Bluetooth)
5		Headphone Port
6		TF card port
7		Charging port <b>5V-1A</b>
8		Working Indicator


9		Press and hold for 2-3s to turn ON/OFF the microphone. Short press to PAUSE/PLAY music remotely.
10		Short press to turn up microphone volume, there are 5 levels of mic volume. Long Press 2-3s to turn up <b>echo volume</b> , there are 5 levels of echo volume. (The default echo is 0)
11		Short press to turn down microphone volume, total 5 levels of mic vol. Long Press 2-3s to turn down <b>echo volume</b> , total 5 levels of echo vol.(The default echo is 0)
12		Short press to switch between 4 kinds of magic voices Long press 2-3s to remove/restore music vocals (Part of IOS music not supported)
13		Working Indicator
14		Charging port for microphone <b>5V-1A</b>

## How to use the speaker

1. Power ON/OFF: Press  and hold for 2-3s to turn ON/OFF. And short-press press + – button to adjust the volume of the speaker.
2. Bluetooth Connection: Turn on the speaker, and press **M** button to switch to Bluetooth mode, there is a voice "Bluetooth" and search the Bluetooth name "K1-L", click and paired.
3. Previous/Next Song: Long press + – and hold for 2- 3s to switch to next/previous song.
4. Play music via TF card: Prepare a micro SD card loaded with MP3 songs, plug the card into the TF card slot of the speaker, it will auto play.

## How to use the microphone

### 1. Power ON/OFF

Press  and hold for 2-3s to turn ON/OFF the microphone.

The mic and speaker will auto-connect with each other when both are powered on.

## 2. How to adjust the microphone volume?

Short press + – to turn up/down the microphone volume, there are 5 levels of mic volume. When reaching the highest or the lowest volume, there will be a prompt voice” du du”


## 3. How to adjust the echo volume?


Long Press + for 2- 3s to turn up echo volume, long press once to turn up 1 level, total 5 levels of echo volume.

Long Press – for 2- 3s to turn down echo volume, long press once to turn down 1 level, total 5 levels of echo volume.

Note: The default echo is 0, pls long-press + to turn up the echo volume to a suitable level for a better singing/karaoke effect.

## 4. Magic Sound Effect

Short press  to switch between 4 kinds of magic voices


Long press  2- 3s to remove/restore music vocals (Part of music for iOS not supported)

## How to Charge


1. Take out the Type-C charging cable included in the package
2. Plug the Type-C end of the cable into the machine or microphone, and the other USB end into a normal USB charging adaptor/PC Port (5V, 1A-2A)
3. When the speaker/mic is being charged, the indicator light turns red. Once it is fully charged, the indicator light will turn off.

## HOW TO USE THE MICROPHONE

### MODEL: V1-C Karaoke Machine

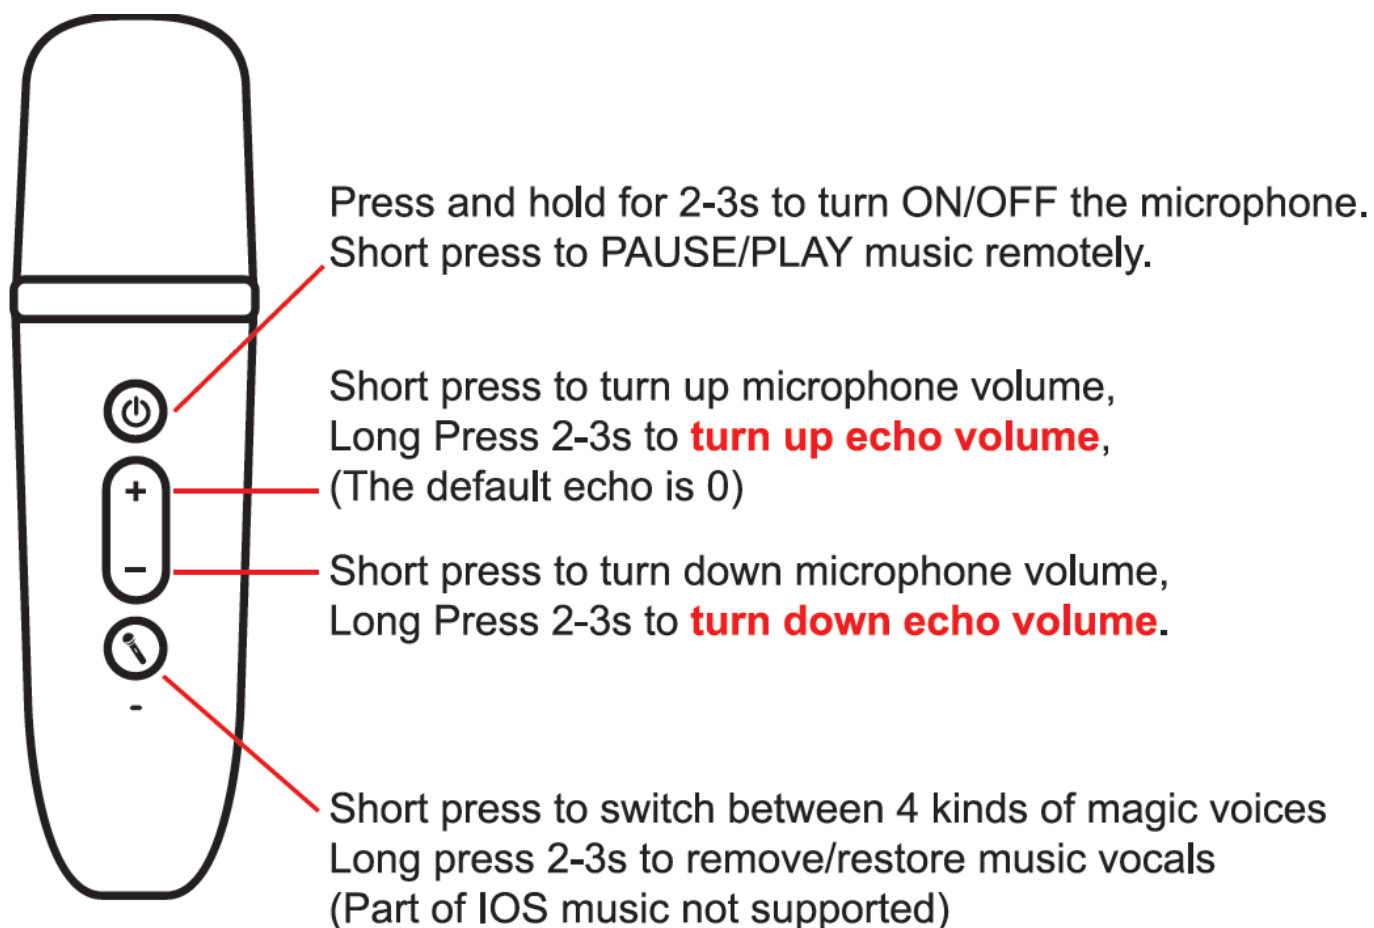

## HOW TO USE THE SPEAKER?

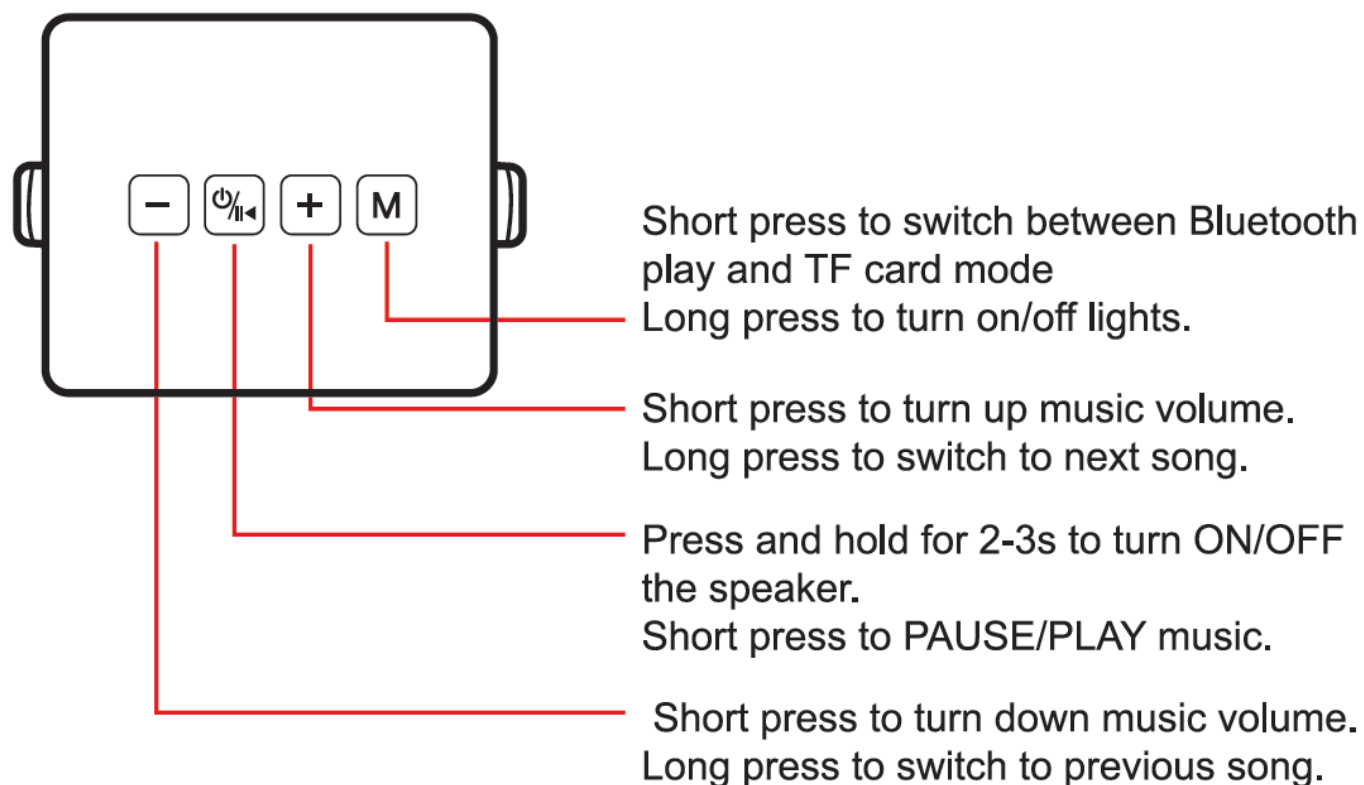

## How to Use





## **Service Description**

### **No worries about this purchase!**

- 30 days no reason money-back guarantee, 1 year Warranty, and 24-hour warm customer service!
- If you encounter any issues with the machine, refer to the user manual or contact us for assistance.

### **How to Contact Us?**

- Click “My Orders”→select your order→click “Order Questions”→write down your questions and send it to us.

## **FCC Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Caution:** Any changes or modifications to this device not explicitly approved by the manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

## **Portable**

### **RF Exposure Information**

The device has been evaluated to meet the general RF exposure requirement. The device can be used in portable exposure conditions without restriction.

## **ISED Statement**

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

The digital apparatus complies with Canadian CAN ICES-3 (B)/NMB-3(B).

This device meets the exemption from the routine evaluation limits in section 6.3 of RSS 102 and complies with RSS 102 RF exposure. Users can obtain Canadian information on RF exposure and compliance.

This equipment complies with Canada's radiation exposure limits set forth for an uncontrolled environment.





## RF Exposure Statement

The device has been evaluated to meet the general RF exposure requirement. The device can be used in portable exposure condition without restriction.

## CONTACT

- Product name: Karaoke Machine
- Model: K1-L, V1-C FCC ID: 2BKSF-K1-L, 2BKSF-V1-C
- IC: 33006-K1L, 33006-V1C
- HVIN: KMKI-L, KMV1-C
- Manufacturer: Dongguan MeiYin keji Co., LTD.
- Manufacturer Address: Room 1004, No.3, Lane 6, Minchang
- Road, Nanzha, Humen Town, Dongguan City, Guangdong Province

## FAQ

- The mic is no sound.
  - Try to charge the mic and use it
  - Try to long-press  the mic to turn on
  - The speaker and mic are not connected successfully.
  - Pls restart them and turn up the mic volume to try again.
- The machine makes no sound when playing music.
  - Check whether the Bluetooth is connected successfully
  - Check if the sound was paused via the mic end, if yes, short press  of the mic to PLAY/PAUSE the music
  - Check if the phone volume is turned up
  - Short press + of the speaker to turn up the speaker's volume

Bluetooth can't be paired

Press M button to switch to Bluetooth mode first. Distant Bluetooth connection, try to adjust the distance between the karaoke machine and the phone. The karaoke machine already paired with other phone. First turn off Bluetooth of other phones and restart the machine, try to pair with phone again.

Presence of noise

Environmental noise, or mobile phone signal interference, Adjust the distance between the karaoke machine and the cellphone, and adjust the distance between the mic and the machine

Long press the power button and the machine/mic indicator does not light up;

Try to charge the device/mic and use it

Bluetooth can't be connected

Pls press M button to switch to Bluetooth mode first If the speaker has been connected to another bluetooth device, pls turn off the other Bluetooth first.


Microphone volume too low

Pls turn up both echo and mic volume to try.

Microphone doesn't work

Fully charge the speaker and the mic, and restart them to connect again.

## Documents / Resources

	<a href="#">YLL K1-L Portable Wireless Microphone and Speaker [pdf]</a> User Manual 2BKSF-K1-L, 2BKSFK1L, K1-L Portable Wireless Microphone and Speaker, K1-L, Portable Wireless Microphone and Speaker, Wireless Microphone and Speaker, Microphone and Speaker, Speaker
---	--

## References

- [User Manual](#)

## Related Posts



[baseus 35PROAIR Portable Wireless Speaker User Manual](#)

35PROAIR Portable Wireless Speaker



[myFirst Voice Blue Portable Microphone & Wireless Speaker User Manual](#)

myFirst Voice Blue Portable Microphone & Wireless Speaker Function Microphone: To achieve the best sound

quality, please hold...



[YLL K1-L Karaoke Machine Portable Wireless Microphone and Speaker User Manual](#)

YLL K1-L Karaoke Machine Portable Wireless Microphone and Speaker Product Diagram How to use

the speaker Power ON/OFF:...



[TREBLAB HD-Energy Portable Wireless Speaker User Manual](#)

HD-Energy Portable Wireless Speaker

YLL

2BKSF-K1-L, 2BKSF-K1L, K1-L, K1-L Portable Wireless Microphone and Speaker, Microphone and Speaker, Portable Wireless Microphone And Speaker, speaker, Wireless Microphone And Speaker, YLL

—Previous Post

[YLL K1-L Karaoke Machine Portable Wireless Microphone and Speaker User Manual](#)

# Leave a comment

Your email address will not be published. Required fields are marked \*

Comment \*

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

**Post Comment**

**Search:**

e.g. whirlpool wrf535swhz

**Search**

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.