



YLW NS009 6-Axis Vibration Burst Wireless Bluetooth Gamepad User Manual

[Home](#) » [YLW](#) » YLW NS009 6-Axis Vibration Burst Wireless Bluetooth Gamepad User Manual

Contents [[hide](#)]

- [1 YLW NS009 6-Axis Vibration Burst Wireless Bluetooth Gamepad](#)
- [2 Product Description](#)
- [3 Specifications](#)
- [4 How to Use](#)
- [5 Function of Turbo](#)
- [6 Indicator Light](#)
- [7 Correction](#)
- [8 FCC Caution](#)
- [9 Documents / Resources](#)
- [10 Related Posts](#)

YLW


YLW NS009 6-Axis Vibration Burst Wireless Bluetooth Gamepad



Product Description

1. It is suitable for N-Switch/PS3/PC/Android games.
2. It supports Bluetooth connection to N-Switch, Android system, and Type- C cable connect to P3 and PC
3. With the function of TURBO, Six-axis gyroscope, and vibration

Button

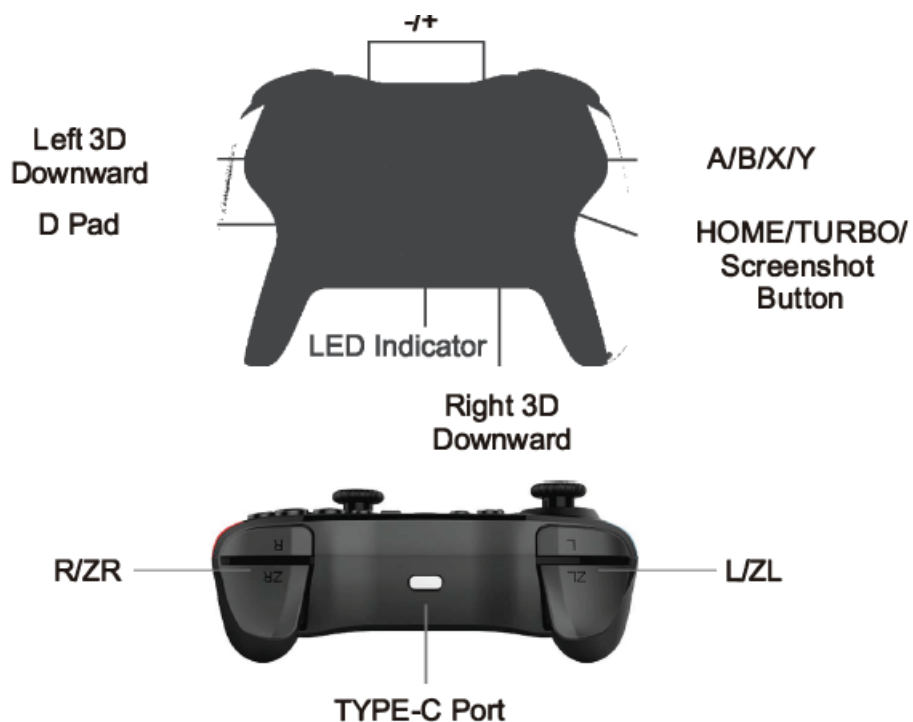

Specifications

1. **Product size:** L 152"W109" H61 mm,
2. **input voltage& current:** DC5V/500mA,
3. **Working Voltage& Current:** DC3.7V/20mA;
4. **Working time:** >10H;

5. **Charging time:** about 2 hours,
6. **Bluetooth 4.0, connect distance:** S8M,
7. **Battery:** 600mAh;
8. **standby time:** 50 days if it is fully charged;
9. **TypeC cable:** 800mm;

How to Use

1. Wireless connection

- **N-Switch mode**

- Click "Controllers" to "Change Grip/Order" in the main interface menu of N-Switch, and enter pairing mode
- Press the button of "Y" & "HOME" for 3 seconds to enter pairing mode, the LED light will be flash slowly like a marquee, the controller will connect with the device auto. Once it is connected, the LED light will be on accordingly.
- Has been connected, just press the HOME button to connect auto, the LED light will be flash slowly like a marquee

- **Android Gamepad connection:**

- Press the button of "A" & "HOME" for 3 seconds to enter the pairing mode, LED2 & LED3 flash quickly, select the pairing name of "Gamepad" from your phone.
- Has been connected, just press the HOME button to connect auto, the LED2 and LED3 will flash slowly at the same time

2. Wired connection

- **N-Switch wired connection:** Using the type C cable to connect a controller and N-Switch, the LED light will be on accordingly, after connected
- **PC wired connection:** Using the USB cable to connect a controller and a computer, the LED1 & LED4 will be light up at the same time, after connection, at this time, it is under X-INPUT mode by default
 - Press the button of "-" & "+" for 5 seconds at the same time to change the mode of □-INPUT, at this time, LED2 & LED3 will be light up at the same time
- **PS3 wired connection:** Press the button of "-", plug a USB to connect a PS3, then LED light will be on accordingly.

Function of Turbo

1. Action key including (A/B/X/Y/L/ZL/R/ZR) 8 keys, TURBO function can be set manually.
2. Setting mode: Long press the action key, and then gently press the TURBO key to turn on; do it again to turn off the TURBO function.
3. After dormant, power off, and restarts, the TURBO function will be cleared automatically. It has to be reset to enable it

Indicator Light

1. Charging

- Low battery, LED light flash quickly

- Undercharging, LED light flash slowly
- Fully charged while working, LED light is on.
- Fully charged while powered off. LED light is off.

2. Power off & wake up

- Long press the button of HOME for 5 seconds to power it off and all lights will be off
- connected Press the shortly. the button of HOME for 1 second to wake ii up, and Connect Shortly,

Correction

In the case of disconnecting with the N-Switch console, lay the controller flat, press the button of "-" and "B" the HOME button at the same time, the LED light will be flash alternately, then press the button of "+", the marquees flashes. Reset successfully after the light is off.*Please do not move the controller until connected

FCC Caution

(1)§ 15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

§ 15.21 Changes or modification warning

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

§ 15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Documents / Resources



[YLW NS009 6-Axis Vibration Burst Wireless Bluetooth Gamepad](#) [pdf] User Manual
NS009, 2AYRM-NS009, 2AYRMNS009, NS009, 6-Axis Vibration Burst Wireless Bluetooth Gam
epad