



yoer IH01S Induction Hob Instruction Manual

[Home](#) » [yoer](#) » yoer IH01S Induction Hob Instruction Manual 

yoer

Beautiful and Intelligent Home Appliances
Inducto IH01S



INSTRUCTION MANUAL

Contents

- 1 IMPORTANT SAFEGUARDS
- 2 KNOW YOUR INDUCTION HOB
- 3 CONTROL PANEL
- 4 USING THE DEVICE
- 5 CLEANING AND MAINTENANCE
- 6 TROUBLESHOOTING
- 7 Documents / Resources
 - 7.1 References

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions before using and keep for future reference.
2. Make sure that your outlet voltage corresponds to the voltage stated on the rating label. Make sure the outlet is properly grounded.
3. Keep the device away from sources of humidity, heat and direct sunlight.
4. To protect against fire, electrical shock and injury do not immerse cord, plug or unit in water or other liquids.
5. This appliance can be used by children of 8 years old and above and persons with reduced physical, sensory or mental capabilities or those who lack experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children should not play with the appliance. Cleaning and user maintenance should not be made by children without supervision.
6. Children of less than 3 years should be kept away unless continuously supervised. Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
7. Keep the device away from children under 8 years old.
8. Place the appliance on a flat, stable, dry surface which is resistant to high temperatures in a well-ventilated room. Maintain clear space between the appliance and the wall as well as other objects.
9. Do not use the device if its power cord or plug is damaged, or in case of any other malfunction.
10. If the power cord is damaged, it must be repaired by manufacturer service or a qualified technician to avoid harm.
11. Make sure the power cord does not touch any hot elements of the appliance or the cookware.
12. Turn the device off before unplugging. Wait for the fan to stop working before unplugging the device.
13. Unplug the device after each use, before carrying, moving or cleaning.
14. Do not touch the power plug with wet hands, because it might cause electrical shock.
15. Do not operate the device with wet hands or barefoot.
16. Avoid using an extension lead.
17. When using an extension lead please ensure you do not exceed the maximum rated running wattage / load of the extension lead.
18. Do not plug the device into a socket where several other appliances are plugged in.
19. When unplugging the device, hold by the plug, not the cord.
20. Do not attempt to repair, disassemble or modify the appliance. There are no user-serviceable parts inside.
21. The appliance is not intended to be controlled by an external timer or separate remote-control system.
22. Ensure that water and other fluids do not enter the interior of the device.
23. Place the induction hob in a safe distance from wet places and flammables such as furniture, window covers etc.
24. Keep the device away from items sensitive to magnetic fields, including but not limited to radios, televisions, automatic credit cards, and cassette tapes.
25. NEVER attempt to extinguish a fire with water, but turn off the device. Cover the flame, for example, with a lid or a non-flammable blanket.
26. Fire hazard: Do not accumulate items on the appliance.
27. Do not place paper, aluminum foil, plastic, or metal objects on the appliance.
28. The appliance's surface heats up to very high temperatures. Do not touch it during operation or immediately


after finished operation to avoid burns.

29. To avoid overheating, the device should not be covered by any heavy or elastic material, such as an aluminum tray or aluminum foil. The use of such objects or materials on the appliance may cause serious damage.
30. Only place on the induction hob cookware designated for use on an induction hob, as listed in this manual, with a diameter ranging from 12 to 22 cm. When using the induction hob, use only cookware with a flat bottom, without edges or protrusions, as otherwise permanent scratches on the glass may occur. Use only clean cookware.
31. Never cook food directly on the heating surface. Always use appropriate cookware and kitchen utensils.
32. Handle with extreme caution when transporting cookware filled with hot oil or other hot liquids.
33. Avoid dropping objects on the appliance.
34. Do not move the appliance when there is cookware on the appliance.
35. Do not heat empty cookware, nor overheat it.
36. Do not use the appliance as a cutting board or a worktable.
37. Do not obstruct the inlet or outlet of air of the device.
38. Only use the device for its intended purposes.
39. Do not leave the device unattended when turned on.
40. The device is not intended for outdoor use.
41. This appliance is intended for household use only (not for commercial purposes). Any other use is considered inappropriate and dangerous.
42. The manufacturer does not accept liability for damage resulting from failure to follow the instruction sheet.



CAUTION – HOT: The appliance's surface heats up to very high temperatures. Never touch it when the appliance is heated up to avoid burns.

KNOW YOUR INDUCTION HOB

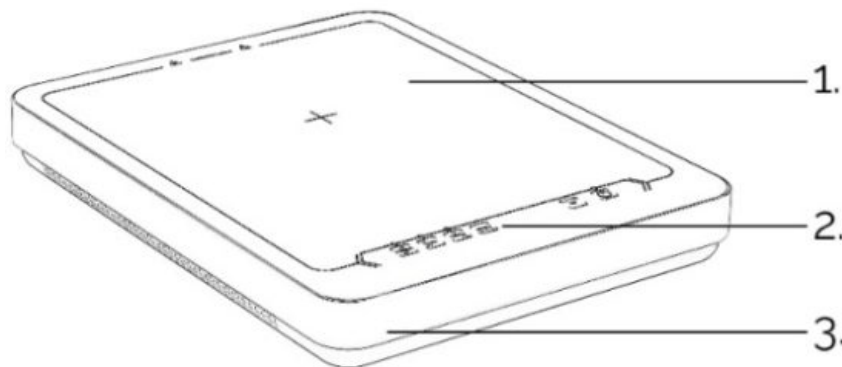

1. Heating surface
2. Control board with display
3. Base

Technical data:

| | |
|---------------------|---------------------|
| Power | 3000 W |
| Voltage / Frequency | 220-240 V~ 50-60 Hz |

CONTROL PANEL



- W** – Power adjustment button
- °C** – Temperature adjustment button
- Timer button
- – Temperature/time/power decrement button
- +** – Temperature/time/power increment button
- ON/OFF button

USING THE DEVICE

1. Place the device in a dry spot, on a flat, heat-resistant surface in a well-ventilated room.
2. Fully extend the cord and plug it into an electrical outlet. The device will emit a distinctive sound signal and then enter standby mode.
3. Place cookware in the center of the heating plate, at the designated spot on the cooktop.
4. Press , and then **W** to turn on the device.
5. Press **W**, and then use **+** and **—** to select the power level. Choose between: 500W, 800W, 1000W, 1300W, 1600W, 1800W, 2000W, 2300W, 2500W, 2700W, 2900W, 3000W or press , and then use **+** and **—** to set the temperature.

Choose between: 60°C, 80°C, 100°C, 120°C, 140°C, 160°C, 180°C, 200°C, 220°C, 240°C.

Tip: It is recommended to use the power adjustment function for cooking and the temperature adjustment function for frying.

Caution: The temperature adjustment function and the power adjustment function of the device do not interact with each other.

6. Press , and then use **+** and **—** to set the time after which the device will turn off.
The time range is 5-180 minutes. To cancel the timer setting, turn off the device.
7. After finishing the operation, press . Wait until the fan stops working, and then unplug the device from the electrical outlet.

Additional information

The device will turn off automatically after about 120 minutes of inactivity, provided that the timer is not previously set for more than 120 minutes.

Use only described below cookware:

Place steel, cast iron, made of enameled cast iron or stainless steel, flat-bottomed pots/pans/skillets without edges or protrusions, with a diameter ranging from 12 to 22 cm, designed for use on the induction hob.



CLEANING AND MAINTENANCE

CAUTION: Never submerge the appliance, power plug or power cord in water!

CAUTION: Ensure that water and other fluids do not enter the interior of the device.

CAUTION: Clean the device after each use.

1. Unplug the device and wait for it to cool down before cleaning.
2. Use a clean, damp soft cloth to remove any stubborn residue, being careful not to press too hard.
3. Clean the heating surface with a clean, soft cloth and a little amount of mild detergent. Then use a dry, soft cloth to dry them thoroughly.
4. Clean the air inlet and outlet by using a clean, soft cloth, and vacuum cleaner.
5. Do not use erosive cleaning agents to clean any parts of the device. Never use a wire brush or other abrasive objects. Never use polishing agents.

STORAGE

1. Follow the steps outlined in the CLEANING AND MAINTENANCE section.
2. Store the device in a dry, clean place, in its original packaging.

TROUBLESHOOTING

| Error code | Possible cause | Solution |
|------------|--|---|
| Eo | There is no cookware on the cooktop. | Place the appropriate cookware on the heating surface , at the center of the heating surface, in the designated area. |
| | The improper cookware is used. | Place the appropriate cookware on the heating surface , at the center of the heating surface, in the designated area. |
| EI | Blocked air inlet and/or air outlet. | Ensure that the air inlet and outlet are not blocked. Wait until the device has completely cooled down. then clean the air inlet and outlet. |
| E2 | Overheating protection has been engaged. | Ensure that the cookware placed on the cooktop is not empty. Remove the cookware from the appliance. and wait for the device to cool down completely. |
| | The problem with the temperature sensor has occurred. | Contact Yoer service. |
| E3 | The outlet voltage does not correspond to the voltage stated on the rating label. The outlet is not properly grounded. | Make sure that your outlet voltage corresponds to the voltage stated on the rating label. Make sure the outlet is properly grounded. |

ENVIRONMENT



This product contains recyclable materials. Do not dispose this product as unsorted municipal waste.

Please contact your local municipality for the nearest collection point.

WARRANTY AND REPAIR

The product warranty includes defects resulting from material or manufacturing defects. This warranty is only valid if the appliance has been used in accordance with the instructions, and provided that it has not been modified, repaired or interfered with by any unauthorized person or damaged by misuse or transportation. The warranty does not apply to defects resulting from natural wear of components or nor breakables such as glass and ceramic items.

This warranty does not limit the customer's basic or any other rights granted by laws regarding appliance purchase.

In the event of a warranty claim please contact the verified vendor or Yoer Service. While submitting the claim please attach information on the nature of the malfunction and a proof of purchase..



Yoer
Beautiful and Intelligent Home Appliances

Yoer sp. z o.o.
Bernardyńska 2
64-000 Kościan
Poland

www.yoer.pl



Documents / Resources

| | |
|--|---|
|  <small>Beautiful and Intelligent Home Appliances</small> Inducto IH01S  | <p>yoer IH01S Induction Hob [pdf] Instruction Manual IH01S Induction Hob, IH01S, Induction Hob, Hob</p> |
|--|---|

References

- [Yoer - piękne i inteligentne AGD -Sklep producenta](#)
- [Yoer - piękne i inteligentne AGD -Sklep producenta](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.