



---

[Home](#) » [yoer](#) » **yoer TF01 Electrical Socket Corresponds User Guide** 

## **Contents** [ [hide](#) ]

- [1 yoer TF01 Electrical Socket Corresponds](#)
- [2 Product Information](#)
- [3 Safety conditions](#)
- [4 Know your fan](#)
- [5 Assembly of the device](#)
- [6 Use of the device](#)
- [7 Adjustment of the blowing direction](#)
- [8 Cleaning and maintenance](#)
- [9 Information to identify the model to which the data provided relates](#)
- [10 Environment](#)
- [11 Warranty and repair conditions](#)
- [12 Frequently Asked Questions](#)
- [13 Documents / Resources](#)
  - [13.1 References](#)



## **yoer TF01 Electrical Socket Corresponds**



## Product Information

### Specifications

- Brand: Verto
- Model: TF01
- Languages: PL, EN, DE, BG, CS, ES, FR, HRV, HU, IT, NL, RO, SK, SL, UA

### Safety conditions

Basic safety rules, including the following, must be observed when using electrical equipment:

1. Before using the appliance, read this manual carefully and keep it for future reference.
2. Make sure that the voltage at the electrical socket corresponds to the voltage indicated on the nameplate.
3. To prevent fire, electric shock and injury, do not immerse the cable, plug or device in water or other liquids.
4. This appliance may be used by children aged 8 years and over and by persons with limited physical, sensory or mental abilities or who lack the appropriate experience and knowledge, if they are supervised or have been instructed in the use of the appliance and understand the hazards of its use. Special care should be taken to ensure that children do not play with the appliance. Cleaning and maintenance of the

appliance should not be carried out by children without appropriate supervision.

5. Ensure that unsupervised children under 3 years of age stay away from the appliance. Children between the ages of 3 and 8 may only switch the appliance on and off if it has been placed and installed in the correct operating position and if they are supervised or have been instructed in the operation of the appliance and understand the hazards of its use. Children between 3 and 8 years of age may not connect, adjust or clean and maintain the appliance.
6. Children, people with disabilities and the elderly should avoid being in the direct vicinity of the fan's airflow for long periods of time.
7. Do not use the appliance if it has a damaged cord or plug or in the event of any other malfunction.
8. If the power cable is damaged, it must only be repaired by the manufacturer's service department or by a person qualified to do so this will help to avoid hazards.
9. Do not attempt to repair, disassemble or modify the unit. There are no user serviceable parts inside the unit.
10. Note: If you use an extension cord, make sure that you do not exceed the maximum rated power/load of the extension cord.
11. Do not insert any objects into the fan as this may cause electric shock, injury or damage to the fan. Do not block or manoeuvre the unit while it is running.
12. The fan is not intended for use in wet or damp areas.
13. Do not use the device while standing barefoot or if your hands are wet.
14. Do not place the fan where it could fall into a bathtub or other body of water.
15. Disconnect the unit from the power supply before cleaning and when not in use. When the fan is not in use, store it in a safe and dry place.
16. Keep batteries out of the reach of children.
17. Never recharge disposable batteries.
18. Do not disassemble, open or destroy the battery.
19. Do not heat the batteries. Do not expose them to heat or fire. Avoid storing them where they would be exposed to sunlight.
20. Do not short-circuit batteries with each other. Do not store them in a box or drawer where they can accidentally short-circuit or be short-circuited by other metal objects.
21. Do not remove the batteries from their original packaging until they have been used.
22. Do not expose the battery to mechanical shocks.
23. In the event of leakage of liquid substances from the battery, do not allow them to

 
- come into contact with the skin or eyes. If such contact does occur, wash the contaminated area thoroughly with plenty of water and seek medical advice.
24. Ensure that the batteries are properly installed according to the polarity (+) and (-) markings.
  25. Children's use of batteries should be supervised. Do not allow children to change batteries without adult supervision.
  26. If a battery is swallowed, seek medical advice immediately.
  27. Keep batteries dry and clean.
  28. Clean the contacts on the battery and remote control before installing them.
  29. Always choose the correct size and type of battery best suited to the intended use.  
Keep the information supplied with your device to help you choose the correct battery.
  30. Remove the batteries from the remote control if it is not to be used for a long period of time, unless it is needed for an emergency.
  31. Dispose of used batteries immediately.
  32. Do not dispose of batteries in a fire, except under conditions of approved and controlled recycling.
  33. Batteries should be disposed of in specially marked containers at designated points.
  34. Do not use the device in a manner incompatible with its intended use.
  35. Do not leave the device unattended.
  36. Never use the device outdoors.
  37. The appliance is intended for domestic use only. Any other use is considered inappropriate and dangerous.
  38. The manufacturer will not be held liable for any damage resulting from non-compliance with these operating instructions.

## **NOTE**


### **KEEP BATTERIES OUT OF THE REACH OF CHILDREN**

Ingestion of batteries can lead to chemical burns, soft tissue perforation and death. Severe burns may occur 2 hours of ingestion. Call medical assistance immediately.

### **Know your fan**

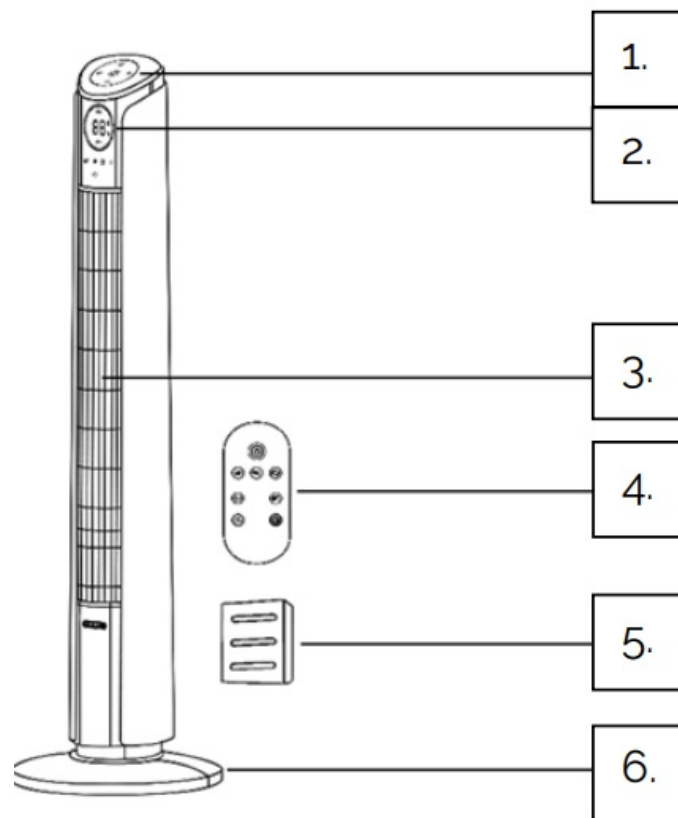

 1. Control panel
2. LED display
3. Air outlet
4. Pilot
5. Essential oil container
6. Basis

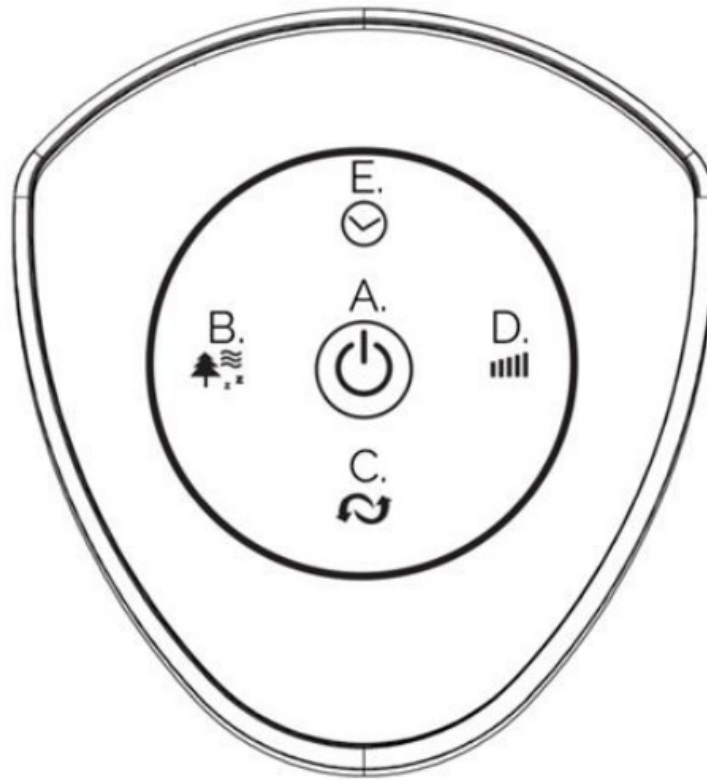
















- A. ON/OFF button / Silent mode
- B. Operating mode selection / Ionisation
- C. Oscillation function / Wi-Fi function
- D. Speed control / Display blanking
- E. Timer


## Assembly of the device

1. Take the device out of the packaging and remove the protective film.
2. Connect the two parts of the base and feed the power cable through the centre hole. Pull the cable under the two notches at the bottom of the base.
3. Align the holes in the base with the holes in the fan and fix the base with four wing nuts.
4. Place the unit in a dry place on a flat, stable surface.
5. The fan can be operated via a control panel or remote control. The remote control requires one CR2025-3V power battery (included).


## Use of the device

1. Plug the power plug into an electrical outlet. Press the  button to switch the unit on. The display will show the current room temperature.

 
2. Press  to set the desired speed level from 1 to 12. Press and hold  for approximately 5 seconds to activate the display blanking. Press any button to deactivate this function.
3. Press  to select the operating mode:
- a) NORMAL mode  – the fan operates at any selected speed,
  - b) NATURAL mode  – the fan imitates the natural wind based on the selected speed,
  - c) NIGHT mode  – the fan starts at the selected speed and then switches first to 9 and then to level 6, where it operates continuously. If the speed is set in the range 7-9, the fan starts at the selected speed and then switches to level 6 where it operates continuously. If the speed is selected in the range 1-6, the unit will operate continuously at this speed. The LED display will extinguish after 30 seconds of operation,
  - d) CHILD mode  – the fan will automatically set the timer for hours, the oscillation and air ionisation function will be activated.
- The unit will start at speed level 12, then switch to level 9 and then to level 6 where it will run continuously. The LED display will extinguish after 30 seconds of operation. You can switch off the oscillation function at any time.
4. Press and hold  for approximately 5 seconds to switch the ionisation function on or off. To switch it on or off using the remote control, press .
5. Using the  button, you can set the time after which the fan should switch off (from 1 to 12 hours).
6. To turn off the button sound, press and hold  for approximately 5 seconds. To deactivate silent mode, press and hold the button again for approximately 5 seconds.
7. You can also activate the silent mode using the remote control. To do this, press the button on the remote control. To deactivate silent mode, press the  button again.
8. Press  to start or stop the oscillation function.
9. Press  on the remote control to turn the display off or on.

10. When you have finished working, switch off the fan by pressing . Pull the plug out of the power socket.

Tip: You can also control the device using the Yoer mobile app via a 2.4

GHz WI-FI connection. Press and hold  for approximately 3 seconds to connect the device to Wi-Fi.

## Adjustment of the blowing direction

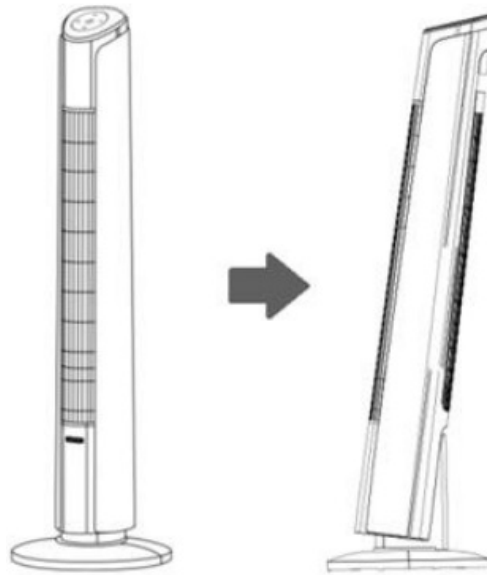

You can adjust the direction of the airflow by tilting the fan backwards or positioning it vertically.

## Cleaning and maintenance

1. Always unplug the unit from the power supply and keep it away from electrical sockets before cleaning.
2. Use a slightly damp cloth to clean the outside of the unit. Dry the cleaned surface thoroughly with a soft, dry cloth before using the fan again.
3. Do not use any chemical products or cleaning agents. Do not allow water to get into the openings of the unit.
4. When the device will not be used for a long period of time, make sure it is completely unplugged. Store the device in its packaging.

## Information to identify the model to which the data provided relates



Information to identify the model to which the data provided relates:

TF01

Description	Symbol	Value	Unit
Maximum fan flow rate	F	32,1	m <sup>3</sup> /min
Fan power	P	24,6	W
Operating value	SV	1,3	(m <sup>3</sup> /min)/W
Standby power consumption	PSB	0,8	W
Fan sound power level	LWA	63,3	dB(A)
Maximum air speed	c	3,1	m/s
Standard for the measurement of in- service value	EN IEC 60879:2019		
For further information, please contact	Yoer sp. z o.o., 267 Dąbrowskiego St., 60-406 Poznań, Poland		

## Environment



The product contains recyclable materials. Do not dispose of the product with municipal waste. Contact your nearest waste collection point.

## Warranty and repair conditions

- The product warranty covers defects caused by material or manufacturing errors.  
Under the guarantee, the manufacturer undertakes to repair or replace any defective components, provided that the appliance has been used in accordance with the instructions and has not been modified, repaired or tampered with in any way by an unauthorised person or damaged by incorrect use or transport. The guarantee does not cover natural wear and tear of components or easily breakable items such as glass or ceramics.
- This guarantee does not limit the consumer's statutory rights or any other rights the consumer has under the applicable legislation on the purchase of consumer items.
- In the event of a warranty claim, please contact a specialist retailer or an authorised Yoer service provider directly. When making a claim, please state the nature of the fault and enclose a copy of the proof of purchase.

## Frequently Asked Questions

- **Q: Can children use this device?**

A: This device can be used by children aged 8 and above under adult supervision.


- **Q: What should I do if a battery is swallowed?**

A: Seek medical advice immediately if a battery is swallowed.

- **Q: How should I store unused batteries?**

A: Store batteries in a dry and clean place away from children's reach.

## Documents / Resources

	<p><a href="#">yoer TF01 Electrical Socket Corresponds [pdf]</a> User Guide</p> <p>TF01, TF01 Electrical Socket Corresponds, TF01, Electrical Socket Corresponds, Socket Corresponds, Corresponds</p>
---	---

## References

- [User Manual](#)

yoer

Corresponds, Electrical Socket Corresponds, Socket Corresponds, TF01, TF01 Electrical Socket Corresponds, yoer

## Leave a comment

Your email address will not be published. Required fields are marked \*

Comment \*

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

**Post Comment**

**Search:**

**Search**

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.