



YOLINK YS1B01-UN Uno WiFi Camera User Guide

[Home](#) » [YOLINK](#) » YOLINK YS1B01-UN Uno WiFi Camera User Guide 

YOLINK YS1B01-UN Uno WiFi Camera User Guide



Contents

- 1 Before You Begin
- 2 In the Box
- 3 Required Items
- 4 Get to Know Your Uno Camera
- 5 Get to Know Your Uno Camera, Cont.
- 6 Power Up
- 7 Install the App
- 8 Add Your Uno Camera to the App
- 9 Warnings
- 10 Installation
- 11 Contact Us
- 12 Documents / Resources
 - 12.1 References
- 13 Related Posts

Before You Begin

Please note: this is a quick start guide, intended to get you started on the installation of your YoLink Uno WiFi Camera. Download the full Installation User Guide by scanning this QR code:




Installation & User Guide

You can also find all guides and additional resources, such as videos and troubleshooting instructions, on the YoLink Uno WiFi Camera Product Support page by scanning the QR code below or by visiting:
<https://shop.yosmart.com/pages/uno-product-support>.

 


Product Support


 The Uno WiFi Camera has a MicroSD memory card slot, and supports cards up to 128GB in capacity. It is recommended to install a memory card (not included) in your camera.

In the Box


- YoLink Uno WiFi Camera

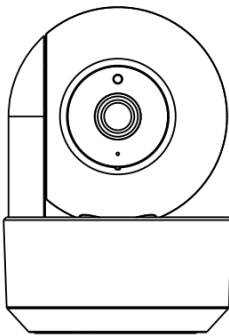


- Quick Start Guide

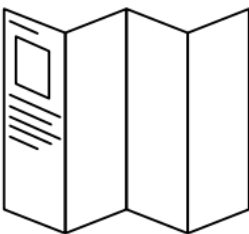 

- AC/DC Power Supply Adapter

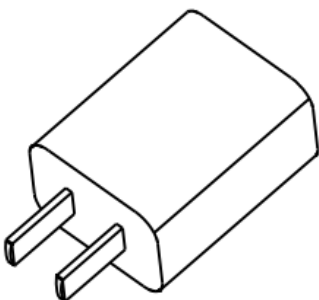 


- USB Cable (Micro B)

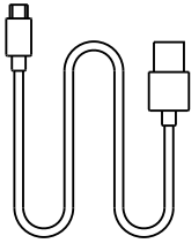 


- Anchors (3)



 
- Screws (3)

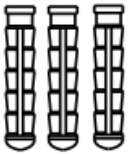

- Mounting Base

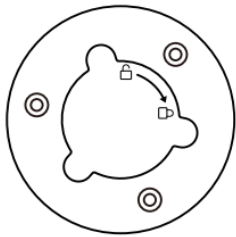 


- Template

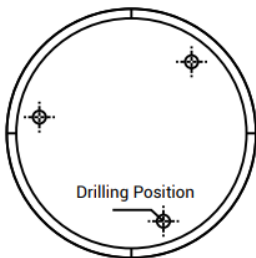 


Required Items

You may require these items:

 
- Drill with Drill Bits

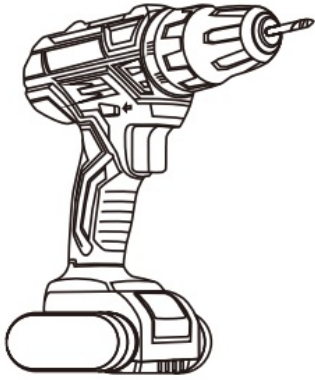

- Medium Phillips Screwdriver

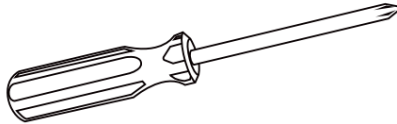 


Get to Know Your Uno Camera

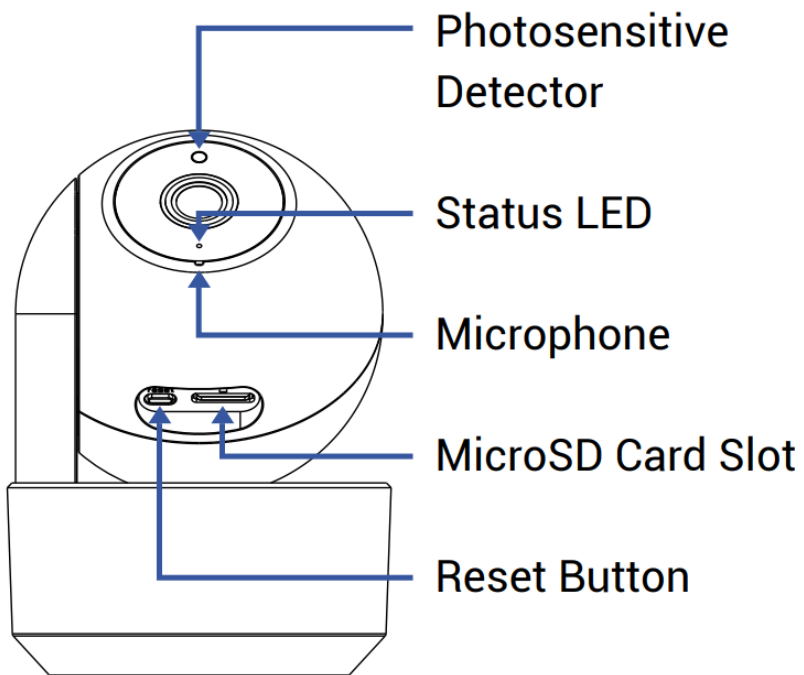 





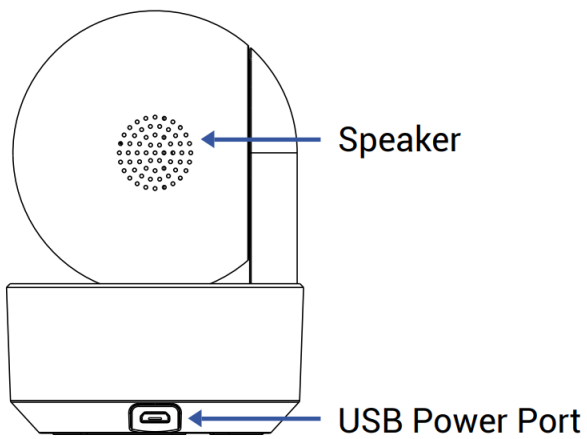 


 The camera supports a MicroSD card that is up to 128 GB.

Get to Know Your Uno Camera, Cont.



 
LED & Sound Behaviors:

-  **Red LED On**
Camera Start-Up or WiFi Connection Failure
-   **One Beep**
Start-Up Complete or Camera Received QR Code.
-  **Flashing Green LED**
Connecting to WiFi
-  **Green LED On**
Camera is Online
-  **Flashing Red LED**
Waiting for WiFi Connection Information.
-  **Slow Flashing Red LED**
Camera Updating

Power Up

Plug in the USB cable to connect the camera and power supply. When the red LED is on, it means the device is on.


Install your MicroSD memory card, if applicable, in the camera at this time.

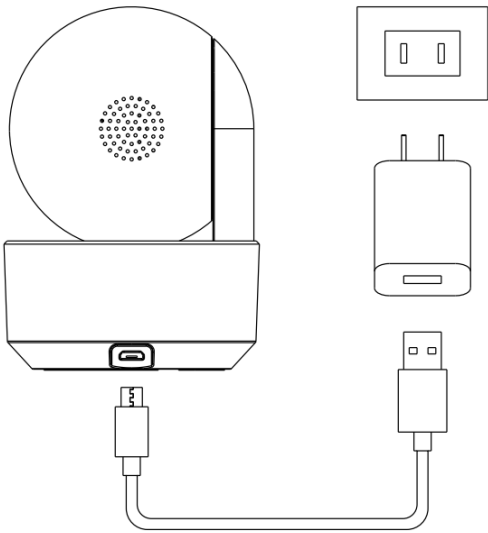

Install the App

If you are new to YoLink, please install the app on your phone or tablet, if you have not already. Otherwise, please proceed to the next section.

 Scan the appropriate QR code below or find the “YoLink app” on the appropriate app store..

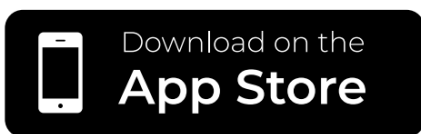



Apple phone/tablet: iOS 9.0 or higher

Android phone or: tablet 4.4 or higher

Open the app and tap Sign up for an account. You will be required to provide a username and a password. Follow the instructions, to set up a new account. Allow notifications, when prompted.

 
You will immediately receive a welcome email from no-reply@yosmart.com with some helpful information. Please mark the yosmart.com domain as safe, to ensure you receive important messages in the future.

Log in to the app using your new username and password.

The app opens to the Favorite screen. This is where your favorite devices and scenes will be shown. You can organize your devices by room, in the Rooms screen, later.


Add Your Uno Camera to the App

1. Tap **Add Device** (if shown) or tap the scanner icon:



Add Your Uno Camerato the App, Cont

 2. Approve access to your phone's camera, if requested. A viewfinder will be shown on the app.

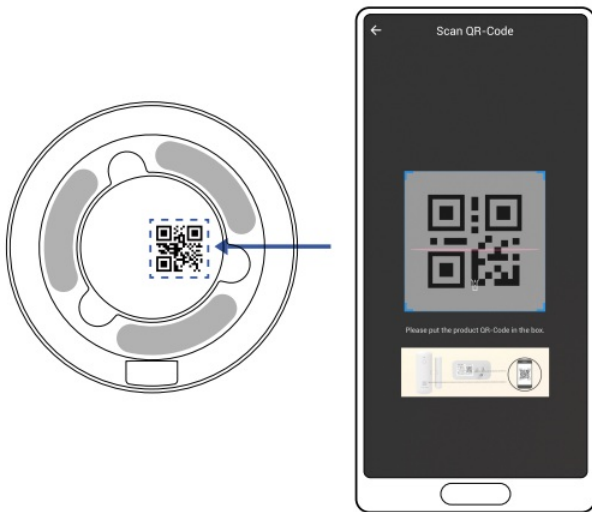

3. Hold the phone over the QR code so that the code appears in the viewfinder. If successful, the **Add Device** screen will be displayed.

You can change the device name and assign it to a room later. Tap **Bind device**.

If successful, the screen will appear as shown. Tap **Done**.

Warnings

1. The camera must not be installed outdoors or in environmental conditions outside of the range specified. The camera is not water resistant. Refer to the environmental specifications on the product support page.
2. Ensure the camera is not exposed to excessive smoke or dust.
3. The camera should not be placed where it will be subjected to intense heat or sunlight
4. It is recommended to use only the supplied USB power adapter and cable, but if either or both must be replaced, use only USB power supplies (do not use unregulated and/or non-USB power sources) and USB Micro B connector cables.
5. Do not disassemble, open or attempt to repair or modify the camera, as damage sustained is not covered by the warranty.

Warnings, Cont.

6. The camera pan & tilt is operated by the app. Do not manually rotate the camera, as this may damage the motor or gearing.
7. Cleaning of the camera should only be done with a soft or microfiber cloth, dampened with water or a mild cleaner suitable for plastics. Do not spray cleaning chemicals directly on the camera. Do not allow the camera to get wet in the cleaning process.

Installation

It is recommended that you setup and test your new camera before installing it (if applicable; for ceiling-mounting applications, etc.)

Location considerations (finding a suitable location for the camera):

1. The camera can be placed on a stable surface, or mounted on the ceiling. It can not be directly mounted to a wall.
2. Avoid locations where the camera will be subjected to direct sunlight or intense lighting or reflections.
3. Avoid locations where the objects viewed may be intensely backlit (intense lighting from behind the viewed object).
4. While the camera has night vision, ideally there is ambient lighting.
5. If placing the camera on a table or other low surface, consider small children or pets that may disturb, tamper with, or knock down the camera.
6. If placing the camera on a shelf or location higher than the objects to be viewed, please note the camera's tilt below the camera 'horizon' is limited.

If ceiling-mounting is desired, please make note of the following important information:

1. Use extra care to ensure the camera is mounted securely to the ceiling surface.
2. Ensure the USB cable is secured in such a way that the weight of the cable does not pull down on the camera.
3. The warranty does not cover physical damage to the camera.

 
Physically installing or mounting the camera:

If mounting the camera on a shelf, table or countertop, simply place the camera at the desired location. It is not necessary to precisely aim it at this time, as the position of the camera lens can be adjusted in the app. Plug in the USB cable to the camera and the plug-in power adapter, then refer to the full Installation & Setup Guide to


complete the setup and configuration of the camera.

Ceiling-mounting:


1. Determine the location for the camera. Before permanently installing the camera, you may wish to temporarily place the camera at the intended location, and check the video images in the app. For example, hold the camera in position on the ceiling, while you or a helper checks the images and field of view and range of motion (by testing the pan and tilt positions).
2. Remove the backing from the mounting base template and place it at the desired camera location. Select an appropriate drill bit and drill three holes for the included plastic anchors.

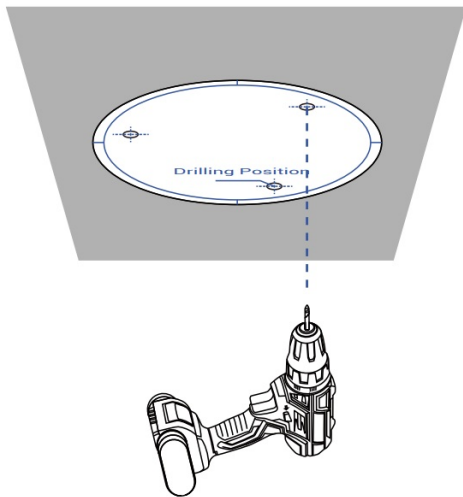

 3. Insert the plastic anchors in the holes.

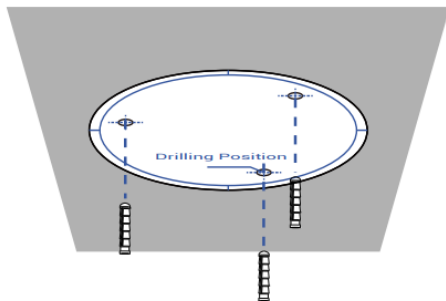

 4. Secure the camera mounting base to the ceiling, using the included screws, and tightening them securely with a Phillips screwdriver.

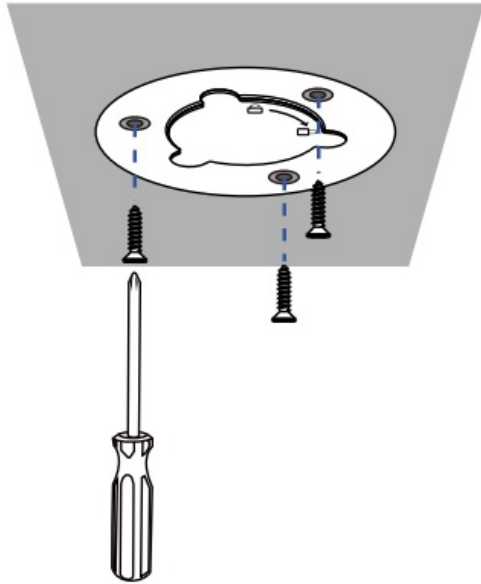

5. Place the bottom of the camera on the mounting base, and snap it into place with a clockwise twisting motion, **as shown in Figures 1 and 2**. Twist the base of the camera, not the camera lens assembly. Check that the camera is secure and that it does not move from the base, and that the base does not move from the ceiling or mounting surface.

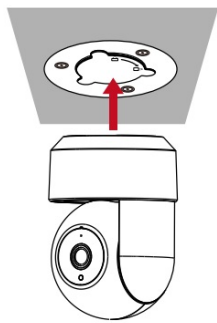 


Figure 1

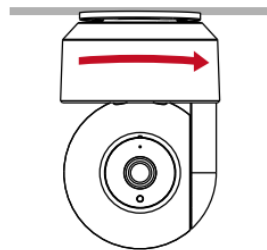 


Figure 2

6. Connect the USB cable to the camera, then secure the cable to the ceiling and to the wall, over its course from the plug-in power supply. An unsupported or dangling USB cable will apply a slightly downward force on the camera, which, combined with a poor installation, may lead to the camera falling off the ceiling. Use a suitable technique for this, such as cable staples intended for the application
7. Plug the USB cable into the plug-in power supply/power adapter.

Refer to the full Installation & User Guide, to complete the setup and configuration of the camera.

Contact Us

We are here for you, if you ever need any assistance installing, setting up or using a YoLink app or product!

Need help? For fastest service, please email us 24/7 at service@yosmart.com

Or call us at **831-292-4831**

(US phone support hours: **Monday – Friday, 9AM to 5PM** Pacific)

You can also find additional support and ways to contact us at: www.yosmart.com/support-and-service

Or scan the QR code:



Support Home Page


Finally, if you have any feedback or suggestions for us, please email us at feedback@yosmart.com
Thank you for trusting YoLink!

15375 Barranca Parkway
Ste. J-107 | Irvine, California 92618



© 2022 YOSMART, INC IRVINE,
CALIFORNIA

YOLINK

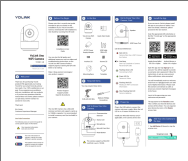Documents / Resources

	<p>YOLINK S1B01-UC Smart Plug With Power Monitoring [pdf] User Guide S1B01-UC Smart Plug With Power Monitoring, S1B01-UC, Smart Plug With Power Monitoring, Power Monitoring</p>
---	--

References

-  [Facebook icon](#)
-  [Facebook icon](#)

Manuals+.