

YONGKANG
**433 Wireless
Remote
Control**



YONGKANG 433 Wireless Remote Control Owner's Manual

[Home](#) » [Yongkang](#) » YONGKANG 433 Wireless Remote Control Owner's Manual 

Contents

- [1 YONGKANG 433 Wireless Remote Control](#)
- [2 Product Usage Instructions](#)
- [3 FAQ](#)
- [4 Safety precautions](#)
- [5 Indicator Light](#)
- [6 Specifications](#)
- [7 Operation instructions](#)
- [8 FCC STATEMENT](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)

YONGKANG

YONGKANG 433 Wireless Remote Control



Product Usage Instructions

Before using the remote control, ensure to follow these safety precautions:

- Read the manual carefully before use.
- Remove the insulation sheet from the remote control before use.
- Avoid exposure to water or metal to prevent fire, electric shock, or burns.
- Avoid using organic solvents for cleaning to prevent damage to the product.
- Supervise children when using the product to prevent injuries.
- Pull out the white battery insulation sheet above the battery box by hand.
- Press the button on the side of the battery bin to release the battery box.
- Replace the battery with a CR2032 3V battery.
- Close the battery box securely after replacement.

If the remote controller will not be used for an extended period, remove the battery from the unit to prevent damage.

FAQ

- **Q:** What should I do if the remote control malfunctions?
- **A:** In case of malfunction, contact the dealer from whom you purchased the product for assistance.
- **Q:** Can children use this product unsupervised?
- **A:** No, adults should provide detailed instructions and supervise children when using the product to prevent

electric shock or injuries.

- **Q:** How should I clean the remote control?
- **A:** Do not use paint thinner, benzene, or other organic solvents. Use a soft cloth if cleaning is necessary.

Please read this manual carefully before use

- This remote control is 433 wireless product
- Please pull out the insulation sheet on the side after receiving the e remote control, so that the remote control can be used normally

Safety precautions

The following precautions are intended to prevent injury or harm to you and others. Before you start using this product, be sure to thoroughly understand and follow these precautions.

If there is any malfunction, problem or damage to this product, please contact the dealer from whom you purchased this product.

WARNING: Please observe the following warnings. Failure to do so may result in death or serious injury

- To avoid causing fire, overheating, chemical leakage, explosion, and electric shock accidents, please follow the following safety matters
- Do not use any other batteries than those specified in the instruction manual. Do not use homemade batteries or modified batteries, or if the product is broken.
- Do not short-circuit the battery, disassemble or modify the battery yourself. Do not heat or solder the battery. Do not allow the battery to come into contact with fire or water. Do not expose the battery to a strong physical impact.
- Do not reverse the positive and negative terminals of the battery.
- When discarding the battery, insulate the battery's electronic contacts with tape. If it comes in contact with other metal objects or batteries, it may cause fire or explosion
- If the battery leaks, changes color, deforms, or emits smoke or fumes, remove it immediately. Take care to avoid burns during handling. If it continues to be used, it may cause fire, electric shock, or burns.
- Keep batteries and battery caps out of the reach of children and infants. If a child or infant swallows a battery or battery cover, etc., seek medical attention immediately. Chemicals in batteries may damage the stomach and intestines..
- Before using this product in an airplane or in a hospital, please first confirm whether the use of this product is allowed in that location. Electromagnetic waves emitted by this product may interfere with the operation of aircraft instruments or medical equipment in hospitals.
- Adults are required to provide detailed instructions on how to use this product when children are using it and to supervise children during the use of the product. Improper use may result in electric shock or other injuries.
- Be careful not to get the product wet. If this product is dropped in water or if water or metal enters this product, remove the batteries immediately. This is to prevent fire, electric shock and burns.
- Do not use paint thinner, benzene, or other organic solvents to clean this product. Otherwise, it may cause a fire or damage your health.

NOTE: Please observe the following precautions. Failure to do so may result in personal injury or property

damage

- Do not insert your fingers into the small holes of this product to prevent getting stuck.

Batteries

- **Installing Batteries** To replace the battery, please pull out the white battery insulation sheet above the battery box by hand, press the button on the side of the battery bin, and then pull out the battery box by hand to replace the battery. As shown in the figure. **Note:** The button battery CR2032 is 3V. Close the battery box in the preceding manner after replacement



Precautions

If the remote controller is not being used for a prolonged time, remove the battery from the unit.

- Do not dismantle or exert heat on the
- Do not drop battery or exert extreme impact that may even cause the case to be damaged.
- Do not immerse the battery in
- There is the danger of explosion if a battery is inserted incorrectly.
- Properly dispose of used

Indicator Light

- The indicator indicates the status of the host. Press button 1 or button 2 or button 3 or button 4 or button 5 or button 6 or button 7, as shown in the picture, the indicator light will be on and the color is blue. Indicates that the product is running properly.
- Specific button selection and use can be based on the different design requirements of the corresponding supporting products. For specific supporting Operations, see Section 4
- When the key is not pressed, it will enter the sleep mode, press any key to wake up.



Specifcations

| | |
|--------------------------|-------------------|
| Working Voltage | 3VDC |
| Power Consumption | <1W |
| Remote Control Frequency | 433MHz |
| Remote Control Distance | >15m in open area |

Operation instructions

Wireless Remote Control

- schematic description: 7 keys + 1 indicator

Key detection

1. Any key pressed, send code 5 packets, if, after 5 packets of data, the key is still pressed, continue to send code, more than 10s stop sending code.
2. When the key is not pressed, it needs to sleep, do low power consumption, static power consumption <1uA, and sleep program processing, any key can wake up.
3. Sending code format: 16-bit address (roll code) + 8-bit data code + 8-bit check code:
Head code time: 300us+6ms
0Code time: 300us+900us
1Code time: 300us+900us

FCC STATEMENT

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, according to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used under the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

Please read this manual carefully before use

- This remote control is 433 wireless product
- Please pull out the insulation sheet on the side after receiving the remote control, so that the remote control can be used normally

Safety precautions

The following precautions are intended to prevent injury or harm to you and others. Before you start using this product, be sure to thoroughly understand and follow these precautions.

If there is any malfunction, problem, or damage to this product, please contact the dealer from whom you purchased this product.

WARNING: Please observe the following warnings. Failure to do so may result in death or serious injury

- To avoid causing fire, overheating, chemical leakage, explosion, and electric shock accidents, please follow the following safety matters
- Do not use any other batteries than those specified in the instruction manual. Do not use homemade batteries or modified batteries, or if the product is broken.
- Do not short-circuit the battery, disassemble or modify the battery yourself. Do not heat or solder the battery. Do not allow the battery to come into contact with fire or water. Do not expose the battery to a strong physical impact.
- Do not reverse the positive and negative terminals of the battery.
- When discarding the battery, insulate the battery's electronic contacts with tape. If it comes in contact with other

metal objects or batteries, it may cause fire or explosion

- If the battery leaks, changes color, deforms, or emits smoke or fumes, remove it immediately. Take care to avoid burns during handling. If it continues to be used, it may cause fire, electric shock or burns.
- Keep batteries and battery caps out of the reach of children and infants. If a child or infant swallows a battery or battery cover, etc., seek medical attention immediately. Chemicals in batteries may damage the stomach and intestines.
- Before using this product in an airplane or in a hospital, please first confirm whether the use of this product is allowed in that location. Electromagnetic waves emitted by this product may interfere with the operation of aircraft instruments or medical equipment in hospitals.
- Adults are required to provide detailed instructions on how to use this product when children are using it and to supervise children during the use of the product. Improper use may result in electric shock or other injuries.
- Be careful not to get the product wet. If this product is dropped in water or if water or metal enters this product, remove the batteries immediately. This is to prevent fire, electric shock, and burns.
- Do not use paint thinner, benzene, or other organic solvents to clean this product. Otherwise, it may cause a fire or damage your health.

NOTE: Please observe the following precautions. Failure to do so may result in personal injury or property damage

- Do not insert your fingers into the small holes of this product to prevent getting stuck.

Battseries

Installing Batteries

To replace the battery, please pull out the white battery insulation sheet above the battery box by hand, press the button on the side of the battery bin, and then pull out the battery box by hand to replace the battery. As shown in the figure. Note: The button battery CR2032 is 3V. Close the battery box in the preceding manner after replacement.



Precautions

If the remote controller is not being used for a prolonged period of time, remove the battery from the unit.

- Do not dismantle or exert heat on the
- Do not drop battery or exert extreme impact that may even cause the case to be damaged.
- Do not immerse the battery in
- There is a danger of explosion if a battery is inserted incorrectly.

- Properly dispose of used

Indicator Light

The indicator indicates the status of the host. Press button 1 or button 2 or button 3 or button 4 or button 5, as shown in the picture, and the indicator light will be on and the color will be blue. Indicates that the product is running properly.

Specific button selection and use can be based on the different design requirements of the corresponding supporting products. For specific supporting Operations, see section 4 When the key is not pressed, it will enter the sleep mode, press any key to wake up.



Specifcations

| | |
|--------------------------|-------------------|
| Working Voltage | 3VDC |
| Power Consumption | <1W |
| Remote Control Frequency | 433MHz |
| Remote Control Distance | >15m in open area |

Operation instructions

- 433 Wireless Remote Control
- schematic description: 5 keys + 1 indicator

Key detection

1. Any key pressed, send code 5 packets, if, after 5 packets of data, the key is still pressed, continue to send code, more than 10s stop sending code.
2. When the key is not pressed, it needs to sleep, do low power consumption, static power consumption <1uA,

and sleep program processing, any key can wake up.

3. Sending code format: 16-bit address (roll code) + 8-bit data code + 8-bit check code:

Head code time: 300us+6ms

0Code time: 300us+900us

1Code time: 300us+900us

FCC Warning

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, according to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used under the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

Please read this manual carefully before use

- This remote control is 433 wireless product
- Please pull out the insulation sheet on the side after receiving the remote control, so that the remote control can be used normally

Safety precautions

The following precautions are intended to prevent injury or harm to you and others. Before you start using this product, be sure to thoroughly understand and follow these precautions.

If there is any malfunction, problem, or damage to this product, please contact the dealer from whom you purchased this product.

WARNING: Please observe the following warnings. Failure to do so may result in death or serious injury

- To avoid causing fire, overheating, chemical leakage, explosion, and electric shock accidents, please follow the following safety matters
- Do not use any other batteries than those specified in the instruction manual. Do not use homemade batteries or modified batteries, or if the product is broken.

- Do not short-circuit the battery, disassemble or modify the battery yourself. Do not heat or solder the battery. Do not allow the battery to come into contact with fire or water. Do not expose the battery to a strong physical impact.
- Do not reverse the positive and negative terminals of the battery.
- When discarding the battery, insulate the battery's electronic contacts with tape. If it comes in contact with other metal objects or batteries, it may cause fire or explosion
- If the battery leaks, changes color, deforms, or emits smoke or fumes, remove it immediately. Take care to avoid burns during handling. If it continues to be used, it may cause fire, electric shock, or burns.
- Keep batteries and battery caps out of the reach of children and infants. If a child or infant swallows a battery or battery cover, etc., seek medical attention immediately. Chemicals in batteries may damage the stomach and intestines.
- Before using this product in an airplane or in a hospital, please first confirm whether the use of this product is allowed in that location. Electromagnetic waves emitted by this product may interfere with the operation of aircraft instruments or medical equipment in hospitals.
- Adults are required to provide detailed instructions on how to use this product when children are using it and to supervise children during the use of the product. Improper use may result in electric shock or other injuries.
- Be careful not to get the product wet. If this product is dropped in water or if water or metal enters this product, remove the batteries immediately. This is to prevent fire, electric shock, and burns.
- Do not use paint thinner, benzene or other organic solvents to clean this product. Otherwise, it may cause a fire or damage your health.

NOTE: Please observe the following precautions. Failure to do so may result in personal injury or property damage.

- Do not insert your fingers into the small holes of this product to prevent getting stuck.

Batteries

Installing Batteries

To replace the battery, please pull out the white battery insulation sheet above the battery box by hand, press the button on the side of the battery bin, and then pull out the battery box by hand to replace the battery. As shown in the figure. Note: The button battery 2xAAA is 3V. Close the battery box in the preceding manner after replacement



Precautions

If the remote controller is not being used for a prolonged time, remove the battery from the unit.

- Do not dismantle or exert heat on the
- Do not drop battery or exert extreme impact that may even cause the case to be damaged.
- Do not immerse the battery in
- There is a danger of explosion if the battery is inserted incorrectly.
- Properly dispose of used

Indicator Light

- The indicator indicates the status of the host. Press button 1 or button 2 or button 3 or button 4 or button 5, as shown in the picture, and the indicator light will be on and the color is blue. Indicates that the product is running properly.
- Specific button selection and use can be based on the different design requirements of the corresponding supporting products. For specific supporting
- Operations, see section 4
- When the key is not pressed, it will enter the sleep mode, press any key to wake up.



Specifcations

| | |
|--------------------------|-------------------|
| Working Voltage | 3VDC |
| Power Consumption | <1W |
| Remote Control Frequency | 433MHz |
| Remote Control Distance | >15m in open area |

Operation instructions

- 433 Wireless Remote Control
- schematic description: 5 keys + 1 indicator

Key detection

1. Any key pressed, send code 5 packets, if, after 5 packets of data, the key is still pressed, continue to send code, more than 10s stop sending code.
2. When the key is not pressed, it needs to sleep, do low power consumption, static power consumption <1uA, and sleep program processing, any key can wake up.
3. Sending code format: 16-bit address (roll code) + 8-bit data code + 8-bit check code:

Head code time: 300us+6ms

0Code time: 300us+900us

1Code time: 300us+900us

FCC Warning

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, according to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used under the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

Yongkang Boyan Electronic Technology Co., Ltd
Room 3, East, Building 1, No. 72 Gongshan Road, Tangxian Town, Yongkang City, Jinhua City, Zhejiang Province China.

Documents / Resources

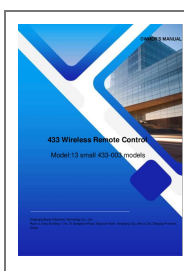

[YONGKANG 433 Wireless Remote Control](#) [pdf] Owner's Manual

13 small 433-003 models, 433 Wireless Remote Control, 433, Wireless Remote Control, Remote Control, Control

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.