



YORTOT W08 Noise Sound Machine User Manual

[Home](#) » [YORTOT](#) » YORTOT W08 Noise Sound Machine User Manual 

Contents

- [1 YORTOT W08 Noise Sound Machine](#)
- [2 INTRODUCTION](#)
- [3 Features](#)
- [4 Power Specifications](#)
- [5 Front View](#)
- [6 Bottom View](#)
- [7 Getting Started](#)
- [8 Sleep Timer](#)
- [9 Volume Adjustment](#)
- [10 FCC Requirement](#)
- [11 Documents / Resources](#)
- [12 Related Posts](#)

YORTOT

YORTOT W08 Noise Sound Machine



If a faulty product is found when setting up Please email our friendly after-sale team at:
customer@kerweilai.com

INTRODUCTION

Thank you for purchasing on YORTOT Please read these instructions carefully and keep the user manual in safe place for future reference.

What included

- 1 White Noise Machine
- 1 AC/DC Adaptor
- 1 USB Charging cable
- 3 AA Batteries sold separately

 
Features

- 10 Nature Sounds
- 5 White Noises
- 5 Fan Sounds
- Sleep Timer
- 7 Color Night Lights
- 5 Level Dimmer
- 1-16 Level Adjustable Volume
- Support Outlet And Battery Power

Power Specifications

 
- AC100-240V, 50/60Hz.
- **Output:** 5V/1A, Class 2.

Front View

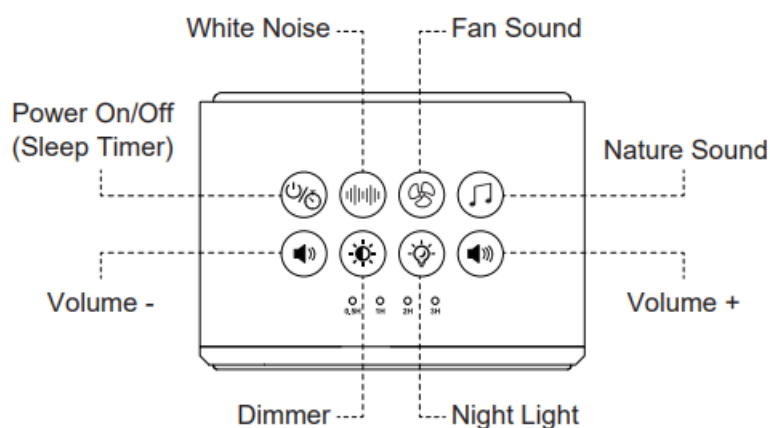


 
Bottom View

Battery Compartment (3* AA Batteries)

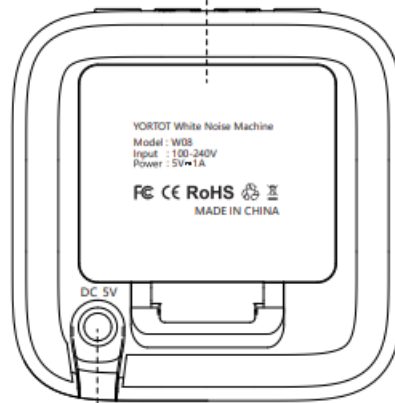


Power Connector


Getting Started

Short Press the “ ” button to turn it on, the machine begin to play sound. Long Press the “ ” button to turn sound off.







Sleep Timer

Use The Timer

When machine is on, press repeatedly the “ ” button to select a sleep timer ranging from 0.5H, 1H, 2H, 3H to enter sleep mode. The led light of the selected timer will light up accordingly. If you want to leave your machine on

all night, please press the “ ” button until there is no led light on. When you use the timer, the sound and light will turn off once preset sleep time comes.

Pick a sound

1. Press the “ ” button to switch among all of 5 white noises sounds in sequence.
2. Long press the “ ” button to turn off white noise.
3. Press the “ ” button to switch among all of 5 fan sounds in sequence.
4. Long press the “ ” button to turn off fan sound.
5. Press the “ ” button to switch among all of 10 nature sounds in sequence.
6. Long press the “ ” button to turn off nature sound.

Here id the list of track



White Noises





Nature Sounds



1	White Noises 1	1	Gentle Waves
2	White Noises 2	2	Lullaby
3	White Noises 3	3	Ocean Waves
4	White Noises 4	4	Rain
5	White Noises 5	5	Thunderstorm
 Fan Sounds		6	Brook
1	Fan Sounds 1	7	Shushing
2	Fan Sounds 2	8	Bird

3	Fan Sounds 3	9	Summer Night
4	Fan Sounds 4	10	Campfire
5	Fan Sounds 5		


Volume Adjustment

Press the “” button to decrease the volume and the “” button to increase the volume maximum level, you will hear a short beep.

Night Light

Press the “” button to select which color night light you like. Long press the “” button to turn off night light.

Brightness of Night Light Adjustment

Press the “” button to select which one Brightness you want.

Battery Operated Setting

Install 3* AA batteries into battery compartment

NOTICE:

In Battery Operated Mode, the machine has all functions. But the battery drains fast, we recommend using Outlet Operated Mode.

Support

The White Noise Machine comes with one year warranty. If you have any issue with this White Noise Machine, please contact us at customer@kerweilai.com. We will address your issue within 24 hours.

FCC Requirement


Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions:

- 1. this device may not cause harmful interference, and
- 2. this device must accept any interference received, including interference that may cause undesired operation

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Documents / Resources

	<p>YORTOT W08 Noise Sound Machine [pdf] User Manual W08 Noise Sound Machine, W08, Noise Sound Machine, Sound Machine</p>
--	--