



# Yucvision VD-PTZ361 4G Router WiFi Zoom IP Camera Instructions

[Home](#) » [Yucvision](#) » Yucvision VD-PTZ361 4G Router WiFi Zoom IP Camera Instructions

4G wifi IP CAMERA

## Contents [ [hide](#) ]

### [1 4G router WIFI ZOOM IP Camera Instruction](#)

#### [1.1 1, How to put SIM card into IP camera](#)

### [2 Documents / Resources](#)

#### [2.1 References](#)

### [3 Related Posts](#)

## 4G router WIFI ZOOM IP Camera Instruction

### 1, How to put SIM card into IP camera

as shown in Figure 1



1

2, Connect the camera power, please do not plug in the network cable. (If you plug in the network cable, the camera will be connected to the wired network first, and the 4G network will not work). and Please wait 1 minute, the 4G camera will automatically complete the 4G network connection.

#### 4, How to add camera on smartphone



Download "P6SLite" ( for IOS and android ) from APP store, open it and click add




Scan the QR code above to enter the download page

A, select the corresponding download option to download the mobile phone APP and manual, of course, can also download the PC software, currently only supports Windows OS software download.


B, download the APP and install it, as shown below:

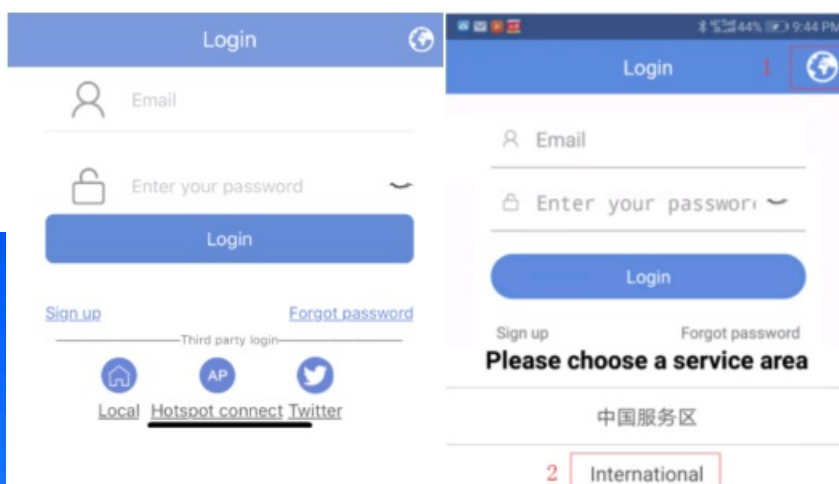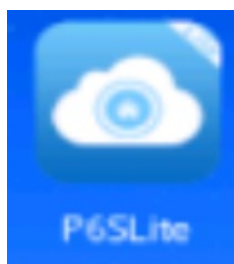

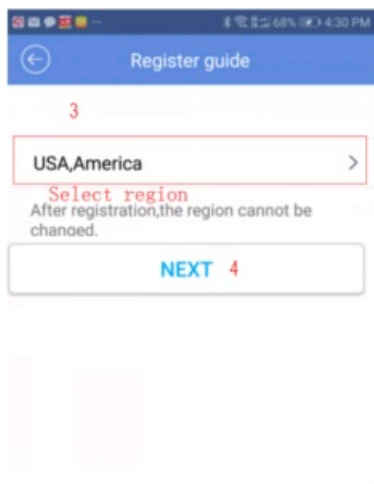


Users can use your e-mail to register an account level. You can also log in to the APP system directly using a Twitter account.

C, QR code added

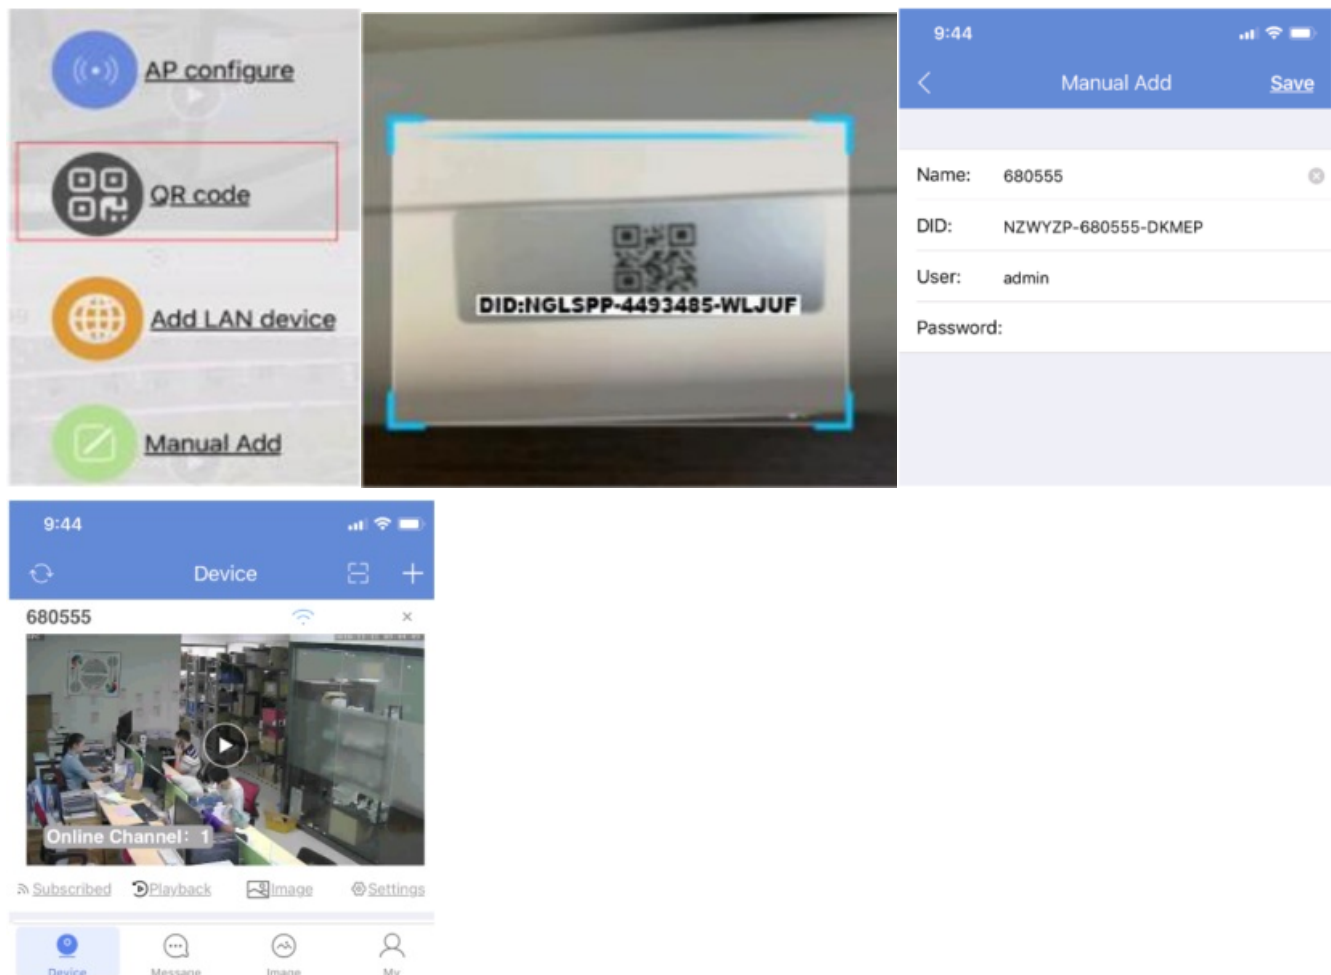

- 1), Open APP Home page, click the  icon in the upper right corner, select the QR code (you can also click on the sweep) as shown. The two-dimensional code recognition will enter the Add Device interface as shown
- 2), Add a successful APP will return to the device home page interface, click the home page list to show the connected device. Will enter the camera preview interface.


User is admin, password is empty

**Now 4G camera Configure the connection successfully.**

## 5, How other network devices connect to the WAN through 4G cameras?


Take a mobile phone through a 4G camera to connect to the WAN as an example.

Open the WIFI settings of the mobile phone, find the wireless WIFI signal of the 4G camera, the WIFI name is MIFI-XXX, select this wireless WIFI signal, and enter the WIFI password: 1234567890. Then save, the mobile phone will successfully connect to the WAN. As shown below

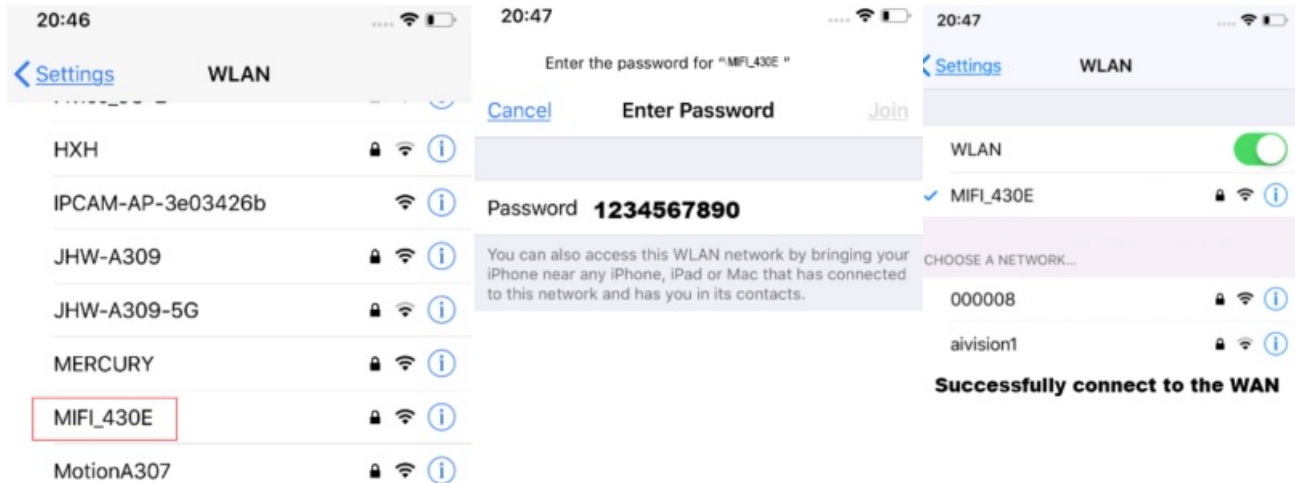

## 6, How to log into 4G router and manage router

A, Use a computer or mobile phone to connect to the WIFI of the 4G camera,

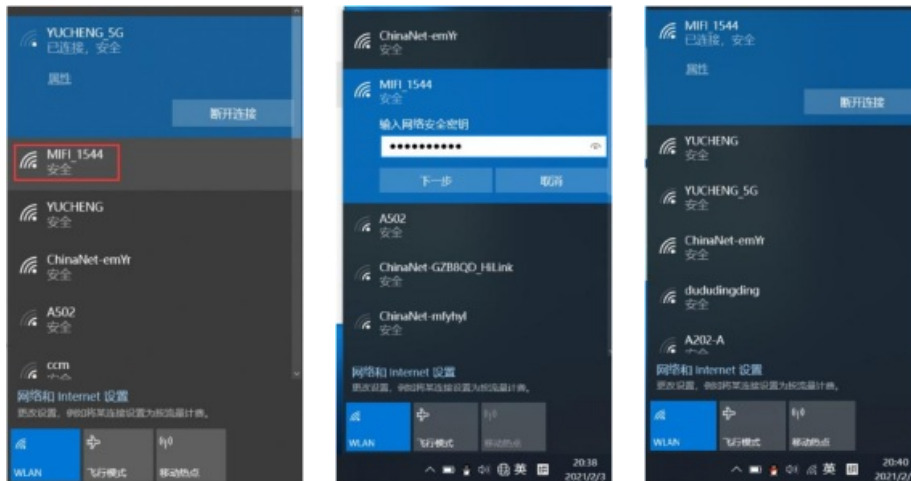

2

3

4


Use a computer to search for the WIFI signal of the camera. The WIFI name is the WIFI signal starting with MIFI-X, as shown in Figure 3. Select this WIFI signal and enter the connection password: 1234567890. Click the connect button, the computer will automatically connect to the camera via WIFI. As shown in Figure 4, the WIFI connection is successful.

B, Open the browser, enter the login address of the 4G router in the address bar of the browser: 192.168.2.1, enter the login user: admin, login password: admin, as shown in Figure 5.

If the system is displayed in Chinese, please change the language to English, as shown in Figure 5: Click: “”, >” select English



**5**

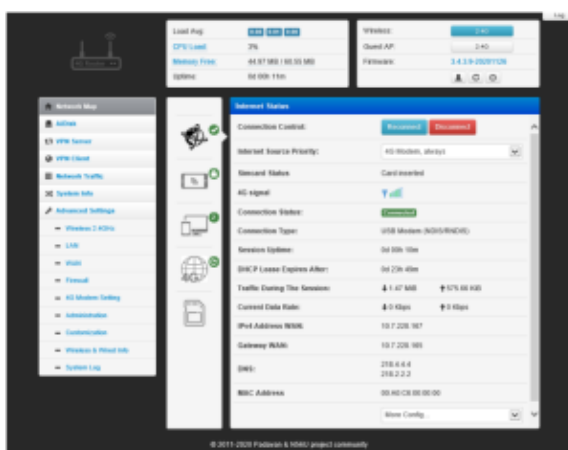

6

C, Figure 5 shows the connection status of the 4G router. If the 4G connection is unsuccessful, please check if your 4G SIM card is normal.

D, You can now start configuring the 4G router





7



8

## Documents / Resources

	<p><a href="#">Yucvision VD-PTZ361 4G Router WiFi Zoom IP Camera</a> [pdf] Instructions</p> <p>VD-PTZ361, 4G Router WiFi Zoom IP Camera</p>
	<p><a href="#">Yucvision VD-PTZ361 4G Router WIFI ZOOM IP Camera</a> [pdf] Instructions</p> <p>VD-PTZ361, 4G Router WIFI ZOOM IP Camera</p>

References