



[Home](#) » [YUNMEI](#) » **YUNMEI YKY-2503 Multi Function Player with Fan Instruction Manual** 

Contents [[hide](#)]

[1 YUNMEI YKY-2503 Multi-Function Player with Fan](#)

[2 Product Location](#)

[3 Description](#)

[4 General Specification](#)

[5 FAQs](#)

[6 Documents / Resources](#)

[6.1 References](#)

YUNMEI

YUNMEI YKY-2503 Multi-Function Player with Fan



Specifications:

- BT / USB / TF / AUX IN / F/L (Fan / Light)
- Battery Capacity: 2200mAh
- Output Power: 5W (RMS) / 4ohm
- Number of Speakers: 4
- Volume Range: 1-100
- Input: DC5V 1A

Power On/Off:

To power on, press and hold the BT mode button. To power off, press and hold the action button for over 2 seconds. Without USB or TF, it defaults to off. There are prompt sounds for both actions.

Mode Switching:

With USB, TF, or AUX connected, short-press the POWER/MODE button to cycle through modes: BT > USB > TF > AUX. Without connections, it defaults to BT.

BT Function:

Short-press the POWER/MODE button to enter BT mode; the display shows “BLUE” and blinks. Pair with devices named YKY2503. Controls include Play/Pause, Prev, Next. Auto power-off after 30 minutes of inactivity. To clear the BT connection, press and hold the PREV key for 6 seconds.

USB Playback:

Insert USB to switch to USB mode; it starts reading music automatically. Playback controls include Play/Pause, Prev, Next. Auto power-off after 30 minutes of inactivity.

TF Playback:

Insert TF card to switch to TF mode; it reads music automatically. Playback controls include Play/Pause, Prev, Next. Auto power-off after 30 minutes of inactivity.

AUX IN Function:

Insert a 3.5mm audio cable to switch to AUX mode; playback starts with external devices. Sound mutes when AUX is connected.

Fan Function:

A short press of the F/L button switches the fan speed. Long-press turns off the fan. When the fan is on, long-pressing allows you to adjust fan speeds from F001 to F100 and back with 100 levels for adjustment.

Color Light Function:

Default lights on (L-01 mode). Long-press F/L to change modes.


Volume Adjustment:

Rotate the VOLUME knob to adjust volume from 00 to 30.

Charging Function:

Built-in battery with USB-C charging (5V, 1A max). The red LED indicates charging. When the battery is low, the unit will emit a beeping sound and display L0. Charge the battery immediately.


Product Location

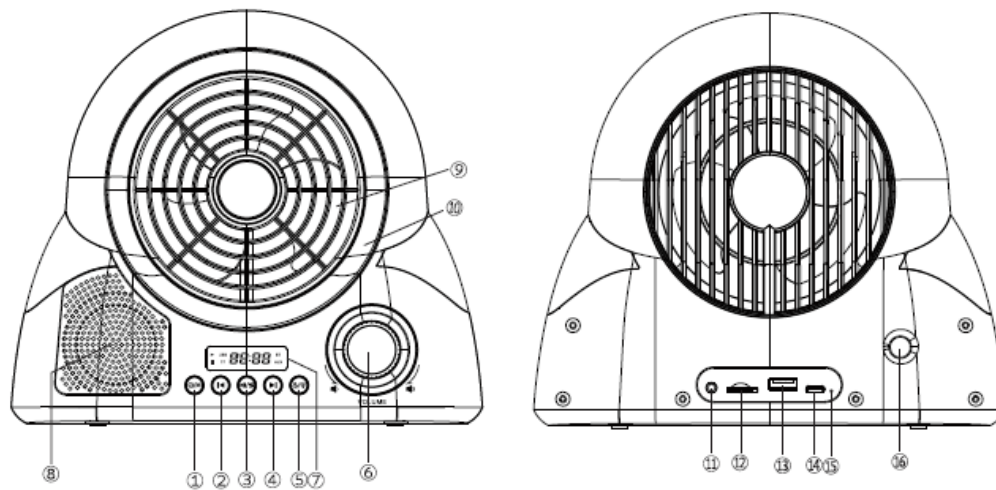


Description


1. POWER/MODE button
2. PREV button
3.  PLAY/PAUSE/ button
4. NEXT button
5.  F/L (Fan / Light) button
6. VOLUME knob
7. LED Display
8. Speaker
9. Fan
10. Light
11. AUX socket
12. TF Card
13. USB
14. Type-C connector(DC5V/1A)
15. LED indicator
16. Wind pipe

Power On/Off


To power on, press and hold the  for over 2 seconds. Without USB or TF, it defaults to BT mode.

To power off, press and hold the  for over 2 seconds. There are prompt sounds for both actions.

Mode Switching


With USB, TF, or AUX connected, short press  to cycle through modes: BT → USB → TF → AUX. Without connections, it defaults to BT.

BT Function

- Short press to enter BT mode; the display shows “bLUE” and blinks.
- Pair with devices named YKY2503.
- Controls:  Prev, Next. Auto power-off after 30 minutes of inactivity.
- Press and hold the PREV key for 6 seconds to clear the BT connection. It will allow other devices to connect when “beep” sounds. The next time you power on, you’ll need to reconnect manually.


USB Playback

Insert the USB to switch to USB mode; it starts reading music automatically.

Playback controls  : Prev, Next. Auto power-off after 30 minutes of inactivity.

TF Playback




Insert the TF card to switch to TF mode; it reads music automatically.

Playback controls  : Prev, Next. Auto power-off after 30 minutes of inactivity.


AUX IN Function

Insert a 3.5mm audio cable to switch to AUX mode; playback starts with external devices. Mutes the sound.

Fan Function

Short press of the “” key switches the fan speed, with the LED display showing the following settings in order: F-0P (fan on, no timer), F-30 (30-minute timer), F-60 (60-minute timer), F-90 (90-minute timer), and F-0F (fan off) in a loop. A long press of the key  quickly turns off the fan. When the fan is on, a long press of the  key allows you to cycle through fan speeds from F001 to F100 and back to F001, with 100 levels for adjustment.

Color Light Function

Default lights on (L-01 mode). Long-press  F/L to change modes.

Volume Adjustment

Rotate the VOLUME knob to adjust (00-30).

Charging Function

Built-in battery; USB-C charging (5V, 1A max). The red LED indicates charging.

When the battery is low, the unit will emit a “Biz Biz” sound, and the display will indicate “L0.” Please charge the battery immediately..

Forced Reset

Use a toothpick to press the AUX reset switch if frozen.

Reminder

Contains a rechargeable battery.

Charge for 6-8 hours for optimal battery life.

General Specification

- T/USB/TF/Aux In/Fan/Light Function
- Battery : 3.7V / 2200mAh
- Speaker Power: 5W/4 ohm
- Fan size 4 Inch
- Light Color: RGB Lights
- Wind Speed 1- 100 Adjustable Wind speed levels
- Power Input: D C 5V 1A

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, under part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used according to the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. Suppose this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. In that case, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

The device has been evaluatec to meel general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FAQs

Q: How do I clear the BT connection?

A: Press and hold the PREV key for 6 seconds to clear the BT connection.

Q: How do I switch between fan speeds?

A: Short-press the F/L button to switch between fan speeds. Long-press turns off the fan.

Documents / Resources



[YUNMEI YKY-2503 Multi Function Player with Fan \[pdf\]](#) Instruction Manual

I

YKY2503, 2AQTN-YKY2503, 2AQTNKYKY2503, YKY-2503 Multi Function Player with Fan, YKY-2503, Multi Function Player with Fan, Player with Fan, Fan

References

- [User Manual](#)

YUNMEI

2AQTN-YKY2503, 2AQTNKYKY2503, fan, Multi-Function Player with Fan, Player with Fan, YKY-2503, YKY-2503 Multi Function Player with Fan, yky2503, YUNMEI

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.