

# **Push Compatible Z-Wave Knob Smart Dimmer**

Home » Z-Wave » Push Compatible Z-Wave Knob Smart Dimmer 🖫

## Contents

- 1 Push Compatible Z-Wave Knob Smart Dimmer
- **2 Function introduction**
- **3 Product Data**
- **4 Product Description**
- **5 Main Features**
- 6 Installation Guide
- **7 Factory Reset**
- 8 Association
- 9 Operating the device
- 10 Technical Data
- 11 Installation
- 12 Documents / Resources
- **13 Related Posts**




**Push Compatible Z-Wave Knob Smart Dimmer** 




Important: Read All Instructions Prior to Installation

**Function introduction** 

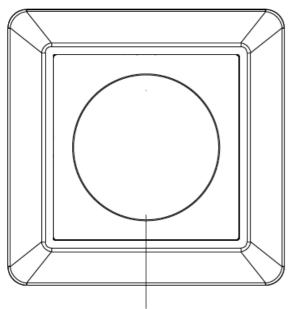


Rotary knob, short press to turn on/off, rotate clockwise to increase brightness, rotate counterclockwise to decrease brightness

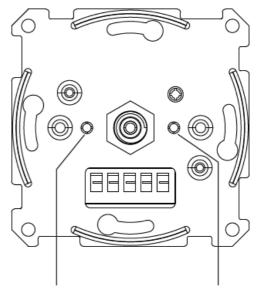


"Reset" Key: for Z-Wave network inclusion or exclusion, or factory reset the device

"Min. Set" Key: for minimum brightness and startup brightness setting

## Front side

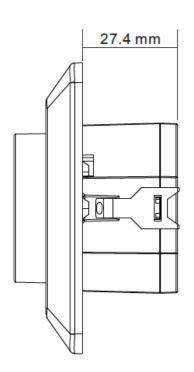

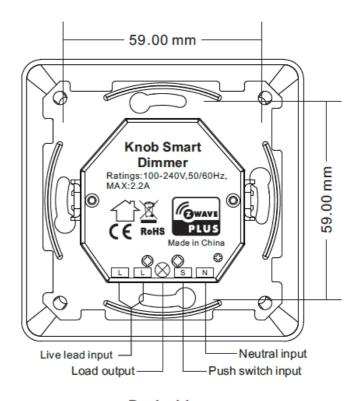

Back side

## **Product Data**

| Z-Wave Frequency      | 868.42MHZ (EU)/908.42MHz(US)/921.42MHz(ANZ) |
|-----------------------|---|
| Input Voltage         | AC100-240V                                  |
| Output Voltage        | AC100-240V                                  |
| Max. Load Current     | 2.2A  |
| Operating temperature | 0 to 40°C                                   |
| Relative humidity     | 8% to 80%                                   |
| Dimensions            | 83.8×83.8×47.1mm                            |

#### Safety & Warnings

- DO NOT install with power applied to device.
- DO NOT expose the device to moisture.

#### **Quick Start**

How to install:

- Step 1: power on the Z-Wave Knob Smart dimmer.
- Step 2: activate inclusion mode on your Z-Wave controller.
- Step 3: activate inclusion mode of the dimmer by triple press the reset button on the dimmer. The dimmer will be included to Z-Wave network.

## **Product Description**

The knob smart dimmer is a Z-Wave device designed to work with various types of light sources. It may be connected to two-wire or three-wire configuration so it can operate with or without neutral lead. The dimmer can switch or dim connected light source either through Z-Wave devices or through the rotary knob directly. The smart dimmer is equipped with an algorithm of smart light source detection which makes configuration easier and ensures high compatibility of the device. It may be used as a switch with non-dimmable light sources (in 3- wire connection).

The dimmer can be included and operated in any Z-Wave network with other Z-Wave certified devices from other manufacturers and/or other applications. All non-battery operated nodes within the network will act as repeaters regardless of vendor to increase reliability of the network.

The encryption mode that the dimmer supports is S2 Unauthenticated. When the dimmer is being included into a Z-Wave network, you can use your primary controller/gateway to enable encryption mode or disable encryption. (The primary controller/gateway shall support encryption mode configuration). The dimmer supports OTA and can update firmware wirelessly.

#### **Main Features**

- Advanced microprocessor control,
- Implemented algorithm of smart light source detection,
- Auto-adjustment of the appropriate control mode to connected load,
- Active power and energy metering functionality,
- · Soft start function,
- Memory of the last lighting level settings

· With push switch input, can be controlled by universal AC push switches

## It operates under the following loads:

- Conventional incandescent and HV halogen light sources
- ELV halogen lamps and dimmable LED bulbs (with electronic transformers)
- MLV halogen lamps (with ferromagnetic transformers)
- Dimmable LED bulbs
- Dimmable compact fluorescent CFL tube lamps

## It can be configured to use "Trailing edge" or "Leading edge" to control following load types:

- "Trailing edge" for resistive loads
- "Trailing edge" for capacitive loads
- · "Leading edge" for inductive loads

#### **Installation Guide**

Please read carefully the enclosed user manual before installation of the knob dimmer, in order to ensure an error-free functioning.

### **Minimum and Startup Brightness Setting Button**

- 1. Press and hold down the button for 3 seconds to set minimum brightness: when current brightness value is 1%-50%, it will be set as minimum brightness. When current brightness value is 0%, previously set minimum brightness will be deleted.
- 2. Short press the button twice to set startup brightness: when current brightness value is 1%-50%, it will be set as startup brightness. When current brightness value is 0%, previously set startup brightness will be deleted.

**ATTENTION:** Prior to the assembly of the product, the voltage network has to be switched OFF and ensured against re-switching.

### Inclusion (adding to a Z-Wave network)

- 1. Set primary controller/gateway into inclusion mode (Please refer to your primary controller's manual on how to turn your controller into inclusion).
- 2. Power on the knob dimmer and set it into inclusion mode. There are two methods to set the dimmer into inclusion mode:
  - Repower on the dimmer, it will be set into inclusion mode automatically, and waiting to be included.
  - Triple press reset button on the dimmer, it will set the dimmer into inclusion mode.

## **Exclusion (removing from a Z-Wave network)**

There are two exclusion methods:

**Method 1:** Exclusion from the primary controller/gateway as follows:

1. Set the primary controller/gateway into exclusion mode (Please refer to your primary controllers manual on how

- to set your controller into exclusion).
- 2. Triple press reset button, the dimmer will be set to exclusion mode, and waiting to be excluded, then the dimmer will be excluded from the network.

**Method 2:** Factory reset the dimmer will force it to be excluded from a network. (please refer to the part "Factory Reset" of this manual)

**Note:** Factory reset is not recommended for exclusion, please use this procedure only if the primary controller/gateway is missing or otherwise inoperable.

## **Factory Reset**

Press and hold down the reset button for over 10 seconds, the dimmer will be reset to factory defaults, the load brightness will be restored to 50% and will flash slowly.

#### **Association**

Z-Wave devices control other Z-Wave devices. The relationship between one device controlling another device is called association. In order to control a different device, the controlling device needs to maintain a list of devices that will receive controlling commands. These lists are called association groups and they are always related to certain events (e.g. button pressed). In case the event happens all devices stored in the respective association group will receive a common wireless command.

## **Association Groups:**

| Association Groups | Group Nam<br>e | Max Nod<br>es | Description  |
|--------------------|----------------|---------------|--|
|                    |                |               | 1. When press and hold down "Reset" button for 10S to reset the dimmer, send "Device Reset Locally Notification CC" to associated devices of this group to report factory reset information. |
|                    |                |               | 2. When load state changes, send "Basic Report CC" to associate d devices of this group.   |
|                    |                |               | 3. When a load over current is detected, send "Over-current detected" to Lifeline.   |
| Group 1            | Lifeline       | 5             | 4. When a mains voltage drop is detected, send "Voltage drop/drif t" to Lifeline.  |
|                    |                |               | 5. When a load malfunction is detected, send "Emergency shutoff status" to Lifeline.   |
| Group 2            | Launch 1       | 5             | When short press the knob, send "Basic Set 0xff/0x00" to associated devices of this group.   |

#### Set and unset associations:

(Note: All association information will be cleared automatically once the dimmer is excluded from a network.) Set association by operating primary controller/gateway to send packets to the dimmer:

The primary controller/gateway sends packets to the dimmer using "Command Class ASSOCIATION"

## Operating the device

Short press the reset button on the dimmer to switch ON/OFF the load. Short press the knob to switch ON/OFF the load, rotate the knob clockwise to increase light intensity to 100%, rotate the knob counterclockwise to decrease light intensity to 1%. Short press external push switch to switch ON/OFF the load, press and hold external push switch to increase/decrease light intensity between 1% to 100%.

#### **Node Information Frame**

The Node Information Frame is the business card of a Z-Wave device. It contains information about the device type and the technical capabilities. The inclusion and exclusion of the device is confirmed by sending out a Node Information Frame. Beside this it may be needed for certain network operations to send out a Node Information Frame.

#### How to send out Node Information Frame:

When the dimmer is set to inclusion/exclusion mode again, it will send out Node Information Frame, there are 2 kinds of operation as follows:

- 1. triple press reset button, the dimmer will be set to inclusion/exclusion mode, then send out Node Information Frame.
- 2. When the dimmer is under inclusion mode, there are two kinds of operation:
  - Triple press inclusion/exclusion button, the dimmer will be set to inclusion mode again, and send out Node Information Frame.
  - Power off and power on the dimmer, it will be set to inclusion mode automatically, and send out Node Information Frame.

#### **Technical Data**

| Wireless Range         | up to 100 m outside, on average up to 40 m inside buildings |
|------------------------|---|
| SDK                    | 6.71.03   |
| Explorer Frame Support | Yes   |
| Device Type            | Light Dimmer Switch   |
| Generic Device Class   | GENERIC_TYPE_SWITCH_MULTILEVEL                              |
| Specific Device Class  | SPECIFIC_TYPE_POWER_SWITCH_MULTILEVEL                       |
| Role Type              | Always On Slave (AOS)                                       |
| Routing                | Yes   |

#### SUPPORTED COMMAND CLASS

| Node Info                         |    | Security Command Supported Report   |    |  |
|-----------------------------------|----|-------------------------------------|----|--|
| COMMAND_CLASS_ZWAVEPLUS_INFO      | V2 | COMMAND_CLASS_MANUFACTURER_SPECIFIC | V2 |  |
| COMMAND_CLASS_TRANSPORT_SERVIC V2 |    | COMMAND_CLASS_VERSION               | V2 |  |
| COMMAND_CLASS_SECURITY            | V1 | COMMAND_CLASS_SWITCH_MULTILEVEL     | V4 |  |
| COMMAND_CLASS_SECURITY_2          | V1 | COMMAND_CLASS_SCENE_ACTIVATION      | V1 |  |
| COMMAND_CLASS_SUPERVISION \       |    | OMMAND_CLASS_SCENE_ACTUATOR_CONF    | V1 |  |
|                                   |    | COMMAND_CLASS_METER                 | V3 |  |
|                                   |    | COMMAND_CLASS_NOTIFICATION          | V8 |  |
|                                   |    | COMMAND_CLASS_CONFIGURATION         | V1 |  |
|                                   |    | COMMAND_CLASS_ASSOCIATION_GRP_INFO  | V3 |  |
|                                   |    | COMMAND_CLASS_ASSOCIATION           | V2 |  |

|  | COMMAND_CLASS_FIRMWARE_UPDATE_MD   | V4 |
|--|------------------------------------|----|
|  | COMMAND_CLASS_POWERLEVEL           | V1 |
|  | COMMAND_CLASS_DEVICE_RESET_LOCALLY | V1 |

# **Notification Command Class**

## Voltage drop/drift

The dimmer supports Voltage drop/drift, when a mains voltage drop is detected, the dimmer will send out Voltage drop/drift to Lifeline.

| Notification Type       | Notification              |
|-------------------------|---------------------------|
| Power management (0x08) | Voltage drop/drift (0x05) |

### **Over-current detected**

The dimmer supports Over-current detected, when over current of the load is detected(current over 3.2A continuously for over 20 seconds), the dimmer will send out Over-current detected to Lifeline.

| Notification Type       | Notification                 |
|-------------------------|------------------------------|
| Power management (0x08) | Over-current detected (0x06) |

## **Emergency shutoff**

The dimmer supports Emergency shutoff, when a load malfunction is detected, the dimmer will send out Emergency shutoff status to Lifeline

| Notification Type | Notification                    |
|-------------------|---------------------------------|
| System (0x09)     | Emergency shutoff status (0x07) |

# **Configuration Command Class**

| Parameter | Size | Description  |   | Default Value |  |
|-----------|------|--|---|---------------|--|
|           |      | Info: Saving load state  | before power failure 0 shutoff load   |               |  |
| 2         | 1    | <ul><li>1 turn on load</li><li>2 save load state before</li></ul>                              |   |               |  |
|           |      | Info: Enable/disable to the load state changed   | Info: Enable/disable to send the basic report to the Lifeline when the load state changed |               |  |
|           |      | When value set as 1, r report automatically  | re-power on the dimmer, it will send Basic  |               |  |
| 3         | 1    | 0 Disable to send Bas  | sic report  | 1             |  |
|           |      | 1 Enable to send Bas   | sic report  |               |  |
|           |      | Default fade time (unit is second, this value has the same function as Duration of Multilevel) |   |               |  |
|           |      | Valid value: 0~127   | Valid value: 0~127  |               |  |
|           |      | Value  | Description   |               |  |
| 4         | 1    | 0x00   | Instantly   | 1             |  |
|           |      | 0x010x7F   | 1 second (0x01) to 127 seconds (0x7F) in 1 second resolution.                             |               |  |
|           |      | Setting minimum bright   | ness value  |               |  |
| 5         | 1    | Valid value: 0~50, the bigger the value is, the higher the load's minimum brightness is        |   | 15            |  |
| 6         | 1    | Setting maximum brightness value Valid value: 0~100  |   | 100           |  |
|           |      | Choose MOSFET driving type 0 – trailing edge   |   |               |  |
| 7         | 1    | 1 – leading edge   |   | 0             |  |
|           |      | Setting step of the know   |   |               |  |

|   |   | Setting step of the knob  |   |
|---|---|---|---|
| 8 | 1 | Corresponding dimming stepping level for each rotation of the k nob (a full dimming stepping level is 99),  Valid value: 1-50 | 5 |

| Added to and removed from a network through external switch ( when enables this function, triple press the external switch ( when enables this function, triple press the external switch within  1.5 seconds to be added to or removed from a network)  0 - disable  1 - enable  Enable/disable to detect load after re-power on (detect load type minimum brightness, maximum brightness) 0 - disable  1 - enable to detect overy time after re-power on 2 - enable to detect only after first re-power on  Note: When the device does not belong to any network, load det ection will be enabled every time after re-power on. When the d evice has already been added to a network, load detection will b e disabled.  Wiring type 0 - unknown  1 - 2 Wire With No Neutral 2 - 3 Wire With Neutral  0 - unknown  1 - resistive  (read only)  1 - resistive  2 - inductive 3 - capacitive  Enable/disable over current protection (over 3.2A for 20 seconds continuously)  1 0 - disable 1 - enable  Power automatic report absolute threshold, unit is W When pow rechanges above the absolute threshold, immediately report current power value  Power automatic report percentage threshold, unit is % When p over changes above the percentage threshold, immediately rep ort current power value  2 Power metering automatic report time cycle, unit is second Valid time cycle value: 5-2678400  Energy metering automatic report time cycle, unit is second Valid time cycle value: 5-2678400  Energy metering automatic report time cycle, unit is second Valid of time cycle value: 5-2678400 |    |   |   |    |
|---|----|---|---|----|
| , minimum brightness, maximum brightness) 0 – disable  1 – enable to detect every time after re-power on 2 – enable to detect only after first re-power on 1  1 1 evice When the device does not belong to any network, load detection will be enabled every time after re-power on. When the device has already been added to a network, load detection will be disabled.  Wiring type 0 – unknown  1 1 – 2 Wire With No Neutral 2 – 3 Wire With Neutral  1 2 Wire With No Neutral 2 – 3 Wire With Neutral  1 – resistive  1 2 – inductive  3 – capacitive  Enable/disable over current protection (over 3.2A for 20 seconds continuously)  1 0 – disable  1 – enable  1 0 – disable  1 – enable  1 Power automatic report absolute threshold, unit is W When power changes above the absolute threshold, immediately report current power value  Power automatic report percentage threshold, immediately report current power value  Power metering automatic report time cycle, unit is second Valid time cycle value: 5-2678400  Energy metering automatic report time cycle, unit is second Valid time cycle value: 5-2678400   | 9  | 1 | when enables this function, triple press the external switch within 1.5 seconds to be added to or removed from a network)  0 — disable  | 0  |
| Note: When the device does not belong to any network, load det ection will be enabled every time after re-power on. When the device has already been added to a network, load detection will be edisabled.  Wiring type 0 – unknown  1 1 2 Wire With No Neutral 2 – 3 Wire With Neutral  Load type 0 – unknown 1 – resistive 1 2 – inductive 3 – capacitive  Enable/disable over current protection (over 3.2A for 20 seconds continuously)  1 0 – disable 1 – enable  Power automatic report absolute threshold, unit is W When power changes above the absolute threshold, immediately report current power value  Power automatic report percentage threshold, immediately report current power value  Power changes above the percentage threshold, immediately report current power value  Power metering automatic report time cycle, unit is second Valid time cycle value: 5-2678400  Energy metering automatic report time cycle, unit is second Valid time cycle value: 5-2678400   |    |   | , minimum brightness, maximum brightness) 0 – disable  1 – enable to detect every time after re-power on 2 – enable to d  |    |
| 1   | 10 | 1 | Note: When the device does not belong to any network, load det ection will be enabled every time after re-power on. When the d evice has already been added to a network, load detection will b | 0  |
| 12 (read only) 1 - resistive  1 - resistive  2 - inductive  3 - capacitive  Enable/disable over current protection (over 3.2A for 20 seconds continuously)  1 0 - disable 1 - enable  1 Power automatic report absolute threshold, unit is W When power changes above the absolute threshold, immediately report current power value  Power automatic report percentage threshold, unit is % When power changes above the percentage threshold, immediately report current power value  Power metering automatic report time cycle, unit is second Valid time cycle value: 5~2678400  Energy metering automatic report time cycle, unit is second Valid time cycle value: 5~2678400   |    | 1 |   | 0  |
| Enable/disable over current protection (over 3.2A for 20 seconds continuously)  1 0 - disable 1 - enable  1 Power automatic report absolute threshold, unit is W When power changes above the absolute threshold, immediately report current power value  Power automatic report percentage threshold, unit is % When power changes above the percentage threshold, immediately report current power changes above the percentage threshold, immediately report current power value  Power metering automatic report time cycle, unit is second Valid time cycle value: 5~2678400  Energy metering automatic report time cycle, unit is second Valid time cycle value: 5~2678400  |    | 1 | 0 - unknown 1 - resistive 2 - inductive   | 0  |
| er changes above the absolute threshold, immediately report current power value  Power automatic report percentage threshold, unit is % When power changes above the percentage threshold, immediately report current power value  Power metering automatic report time cycle, unit is second Valid time cycle value: 5~2678400  Energy metering automatic report time cycle, unit is second Valid  Energy metering automatic report time cycle, unit is second Valid  Energy metering automatic report time cycle, unit is second Valid  | 13 | 1 | Enable/disable over current protection (over 3.2A for 20 seconds continuously)  0 — disable   | 1  |
| 1 ower changes above the percentage threshold, immediately report current power value  20  21  4 Power metering automatic report time cycle, unit is second Valid time cycle value: 5~2678400  Energy metering automatic report time cycle, unit is second Valid 1800  Energy metering automatic report time cycle, unit is second Valid 1800   | 14 | 2 | er changes above the absolute threshold, immediately report cu  | 10 |
| Power metering automatic report time cycle, unit is second Valid time cycle value: 5~2678400 (10 minutes)  Energy metering automatic report time cycle, unit is second Valia  | 15 | 1 | ower changes above the percentage threshold, immediately rep  | 20 |
| Energy metering automatic report time cycle, unit is second Vali  | 21 | 4 |   |    |
|   | 22 | 4 |   |    |

| 33 | 1 | External switch type  0 – Push button switch 1 – normal on/off switch  | 0    |
|----|---|--|------|
| 32 | 1 | Setting startup brightness of the load Valid value: 0~99  Note: every time when turn on the load from OFF status, if the ta rget brightness is lower than the startup brightness, the brightness will first go to the startup brightness value then fall down to the target brightness | 0    |
| 31 | 1 | Setting dimming curve 0 – linear dimming  1 – logarithmic dimming  | 0    |
| 24 | 4 | Current metering automatic report time cycle, unit is second Valid time cycle value: 5~2678400   | 3600 |
| 23 | 4 | Voltage metering automatic report time cycle, unit is second Valid time cycle value: 5~2678400   | 3600 |

| 33 1 |  | External switch type  0 – Push button switch 1 – normal on/off switch | 0 |
|------|--|---|---|
|      |  |   |   |


# Notes for the diagrams:

- L terminal for live lead
- N terminal for neutral lead
- x output terminal of the dimmer (controlling connected light source)
- S terminal for push switch


| upported load types |   | 100-2   | 40V~ |  |
|---------------------|---|---|------|--|
|                     | Resistive loads  Conventional incandescent and halogen light sources                                      | 20-500W @ 230V<br>20-250W @ 110V  |      |  |
|                     | Capacitive loads  Fluorescent tube lamp (compact / with electro nic ballast), electronic transformer, LED | Using Bypass:  3-250W @ 230V  3-125W @ 110V  No Bypass Use 20-250W @ 23 V  20-125W @ 110V V |      |  |
|                     | Inductive loads Ferromagnetic transformers  | 20-250W @ 230V<br>20-125W @ 110V  |      |  |

| Supported load types |   |        | 100-240V~                       |  |
|----------------------|---|--------|---------------------------------|--|
|                      | Resistive loads  Conventional incandescent and halogen light sources                                      |        | DW @ 230V<br>DW @ 110V          |  |
|                      | Capacitive loads  Fluorescent tube lamp (compact / with electronic ball ast), electronic transformer, LED | 3-250\ | Bypass:<br>W @ 230V<br>W @ 110V | No Bypas<br>s Used: 2<br>0-250W<br>@ 230V<br>20-125W<br>@ 110V |
|                      | Inductive loads Ferromagnetic transformer s   |        | DW @ 230V<br>5W @ 110V          | ·  |

## (1) 2-Wire Connection With No Neutral Lead Single push switch wiring

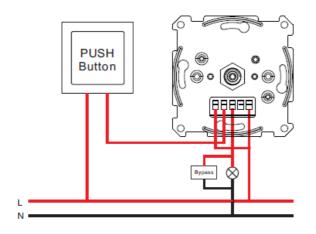


# Multiple push switches wiring for multiple control points

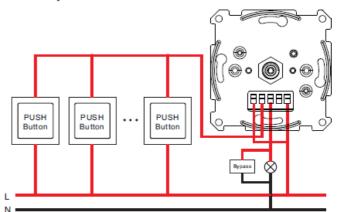


The Bypass is a device designed to work with the knob smart dimmer. It should be used in case of connecting LED bulbs or energy saving compact fluorescent lamps. The Bypass prevents flickering of the LED lights and glowing of the turned off compact fluorescent lamps. In the case of 2-wire connection, the Bypass allows to reduce minimum power of load required by the dimmer for correct operation. The Bypass provides powering of the dimmer in case of controlling the low loads of minimum power down to 3W (for cosφ>0.5).


## (2) 3-Wire Connection With Neutral Lead Single push switch wiring

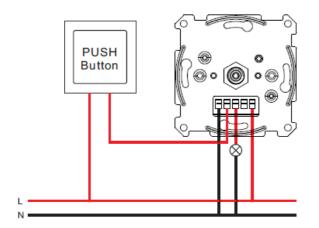


- (3) With normal on/off switch
- 2-Wire connection without neutral lead

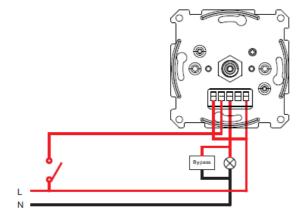


Multiple push switches wiring for multiple control points

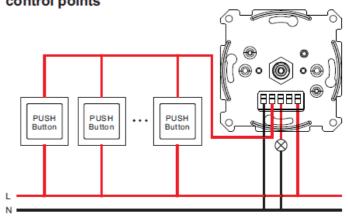

## 3-Wire connection with neutral lead

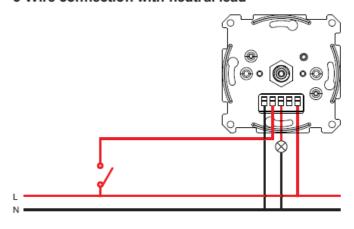

## Installation

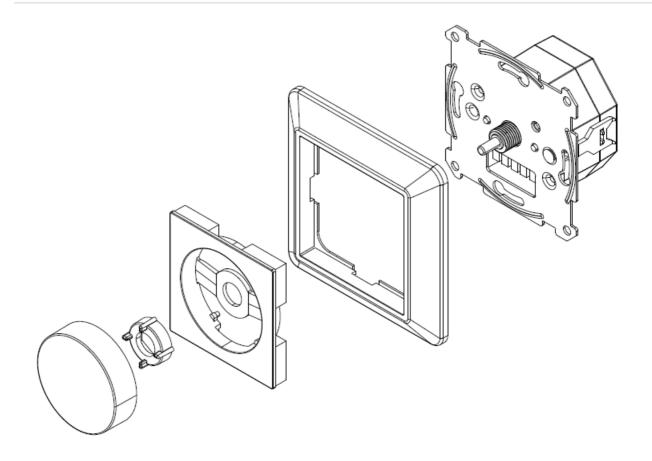

## **Documents / Resources**



**Z-Wave Push Compatible Z-Wave Knob Smart Dimmer** [pdf] Instruction Manual Z-Wave, Push Compatible, Z-Wave Knob, Smart Dimmer, SR-ZV2835RAC-S

Manuals+,