



ZALMAN T6 ATX Mid Tower Computer PC Case User Manual

[Home](#) » [ZALMAN](#) » ZALMAN T6 ATX Mid Tower Computer PC Case User Manual 

Contents

- [1 ZALMAN T6 ATX Mid Tower Computer PC Case](#)
- [2 Precautions](#)
- [3 Specification](#)
- [4 DIMENSIONS](#)
- [5 Accessories component](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)

ZALMAN

ZALMAN T6 ATX Mid Tower Computer PC Case



- To ensure safe and easy installation, please read the following precaution.
- Product design and specifications may be revised to improve quality and performance.



Precautions

- Read this manual carefully before installing.
- Check the product and components before installing. If you find any abnormality, contact the location where you purchased the product for a replacement or refund.
- Wear gloves to prevent accidents when installing the product.
- Severe damage may occur when mounting the system, so do not apply excessive force.
- Connecting the cable incorrectly may cause a fire due to a short circuit. Make sure to refer to the manual when connecting the cable.
- Be careful not to block the ventilation hole of the product when using the system.
- Avoid locations with direct sunlight, water, moisture, oil, and excessive dust. Store and use the product in a well-ventilated location.
- Do not wipe the surface of the product using chemicals. (organic solvents such as alcohol or acetone)
- Do not insert your hand or other object into the product during operation, as this may injure your hand or damage the object.
- Store and use the product out of children's reach.
- Our company assumes no responsibility for any problem that occurs due to the use of the product for purposes other than its designated purposes and/or the carelessness of the consumer.
- The exterior design and specifications of the product are subject to change without prior notice to consumers for quality improvement.


Specification

Model		T6
Case Form Factor		ATX Mid Tower
Dimensions		377(D) x 200(W) x 430(H) mm
Weight		2.82 kg
Case Materials		Steel, Plastic
Motherboard Support		ATX / mATX / Mini-ITX
Maximum VGA Length		280mm (But, 260mm or less when front HDD is installed)
Maximum CPU Cooler Height		165mm (But, 140mm or less when Side fan is installed)
Maximum PSU Length		160mm
PCI Expansion Slots		7
Case Drive Bays		2 x 3.5", 2 x 2.5", 1 x 5.25"
Fans Mount Locations	Front	2 x 120mm
	Rear	1 x 120mm
	Side	1 x 120mm
Fan Included	Rear	1 x 120mm
I/O Ports		1 x Headphone, 1 x Mic, 2 x USB 2.0, 1 x USB 3.0

DIMENSIONS

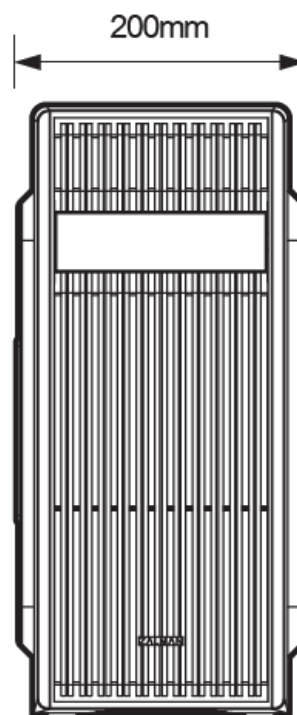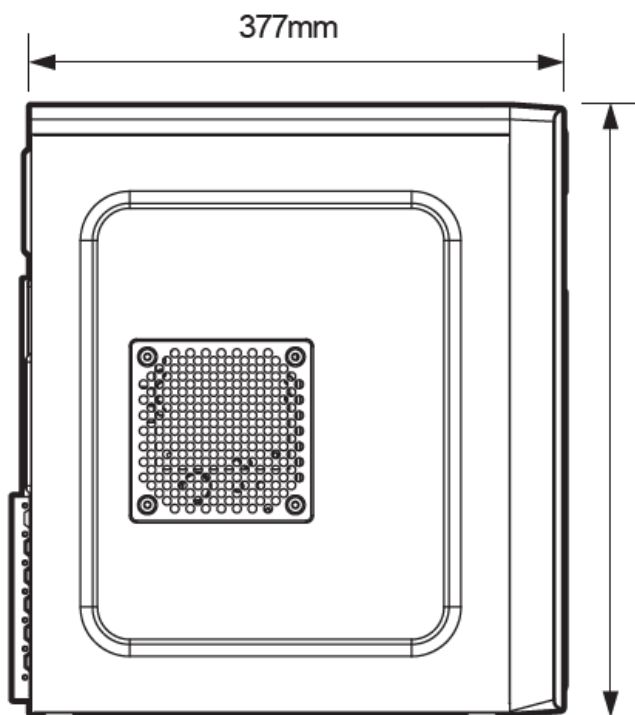

Accessories component

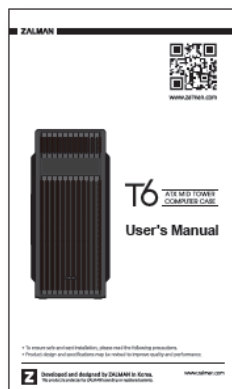

User's
manual



PCI Slot
cover x 2



Cable
tie x 5



USB Rubber
cover x 3



Media rubber
cover x 2



HDD
Screw x 8



SSD / MB
Screw x 22




PSU / VGA
Screw x 8




Motherboard
stand-off x 6

I/O Ports


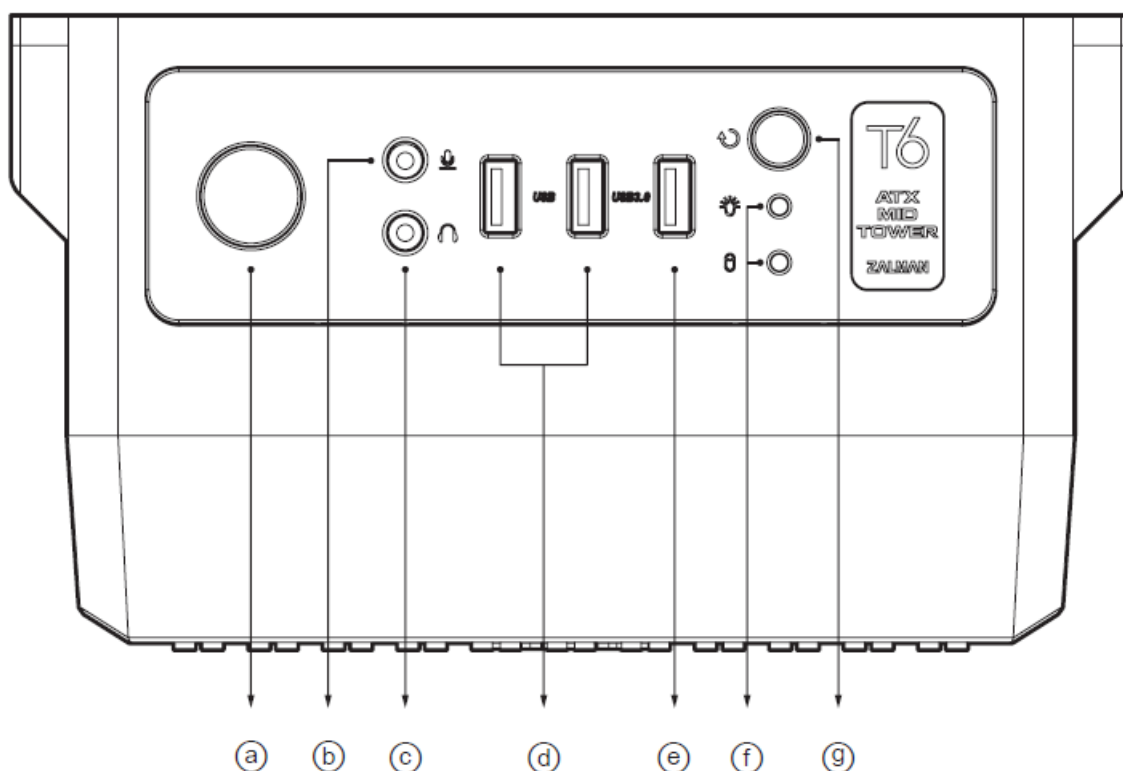


#	Part	#	Part	#	Part	#	Part
(a)	Power button	(b)	Microphone jack	(c)	Headphone jack	(d)	USB 2.0 Ports
(e)	USB 3.0 Port	(f)	HDD / Power LED	(g)	Reset button		

1. Removing the side panels

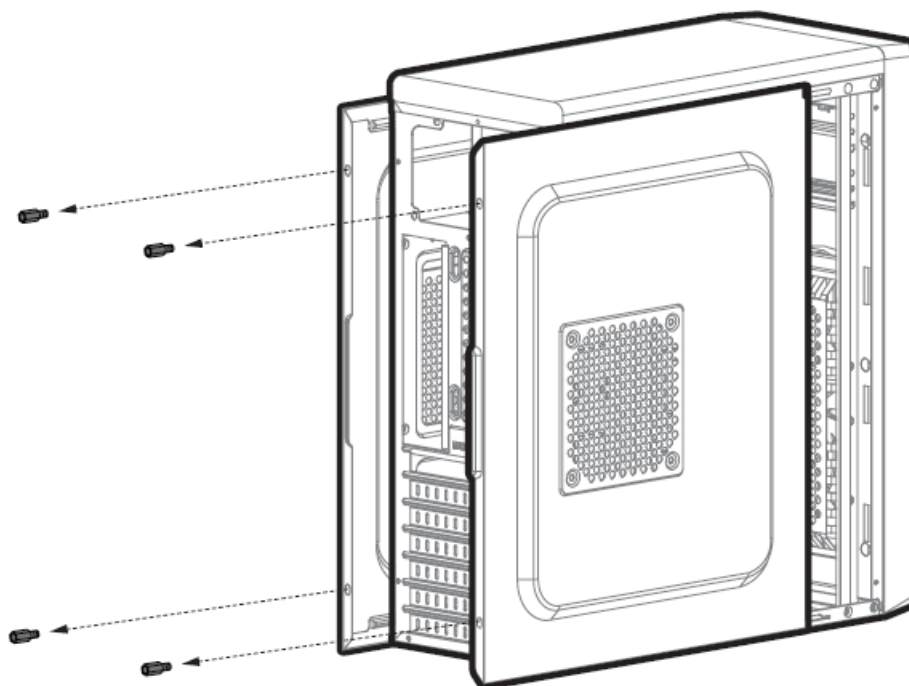


 2. Mounting the motherboard

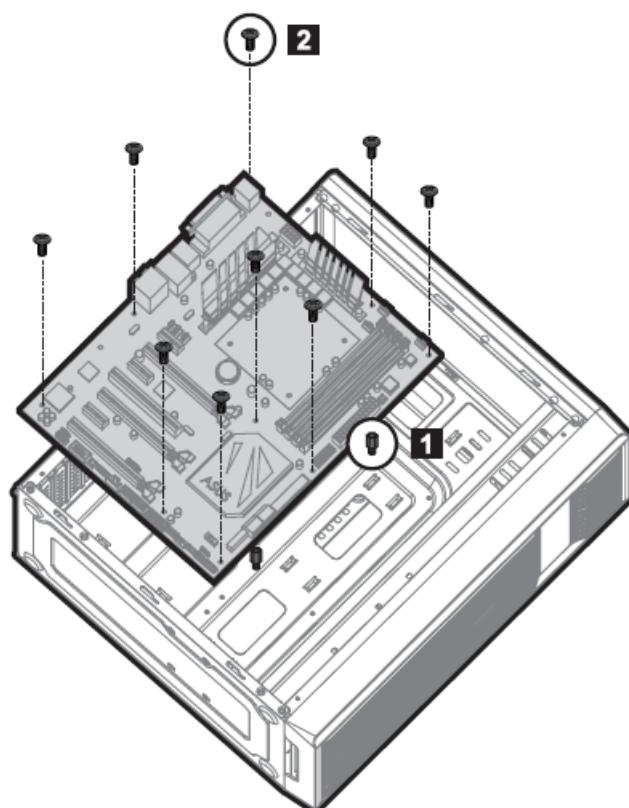


3. Motherboard size


1) ATX

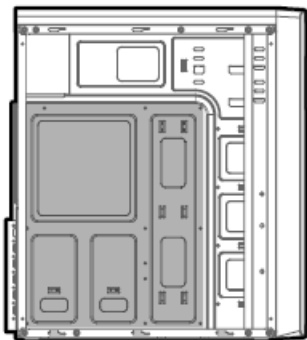



2) mATX

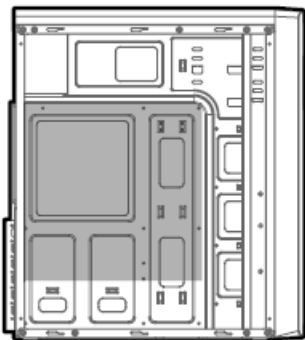



3) Mini-ITX

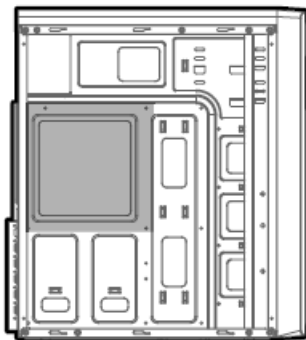


 
4. Mounting the PCI-E(VGA) card

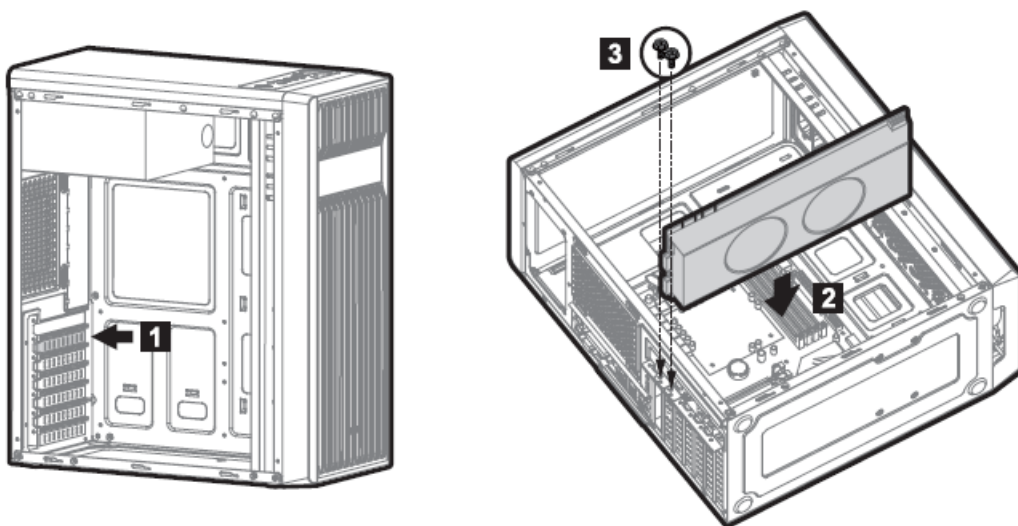

 
5. Mounting the PSU

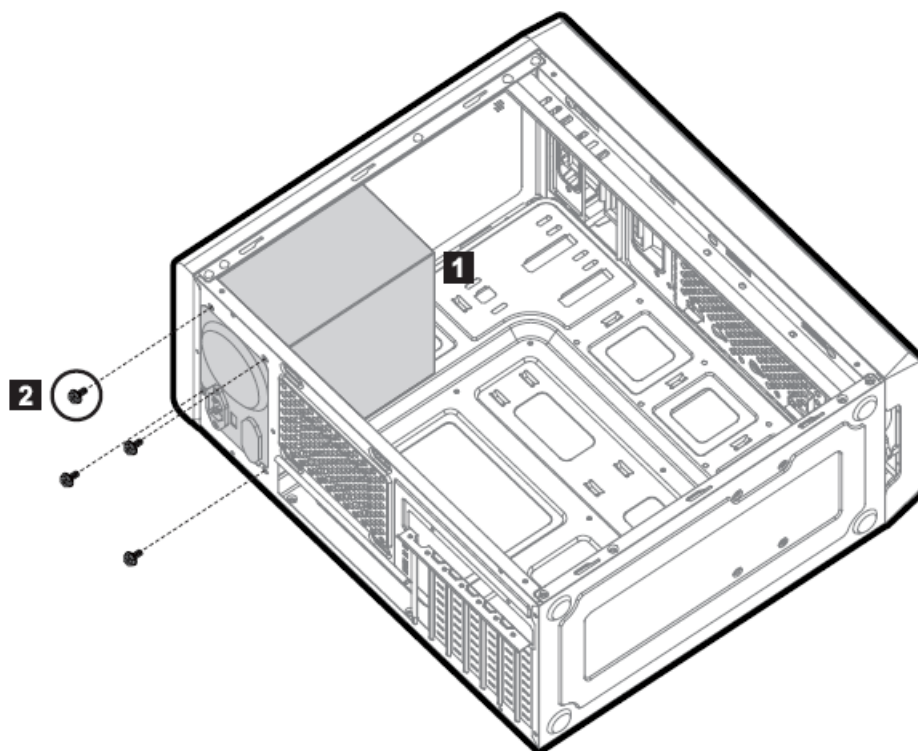

 6. Mounting the 3.5" HDD

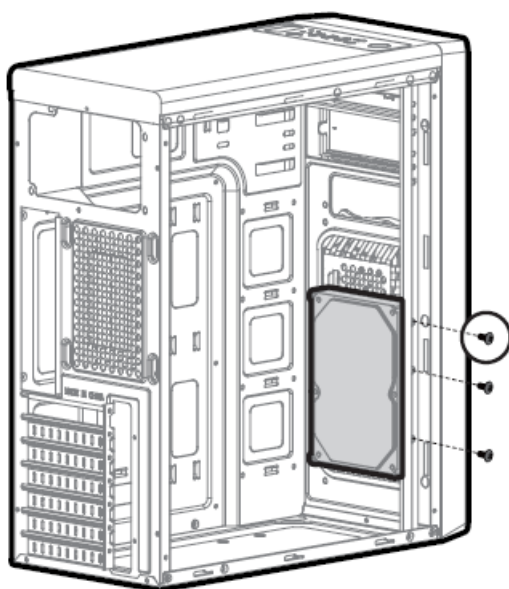



A




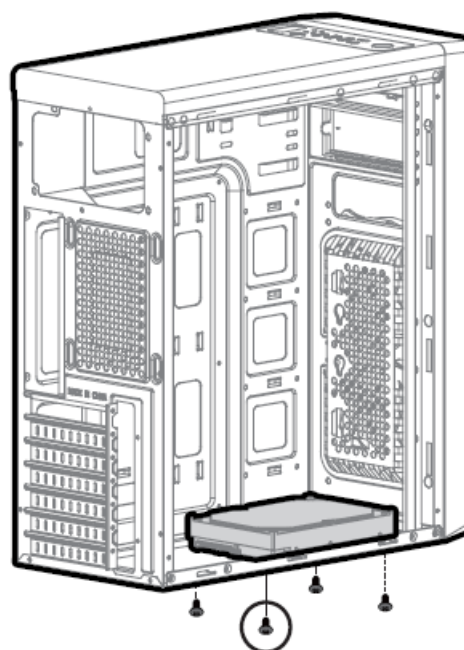


B


7. Mounting the 2.5" SSD

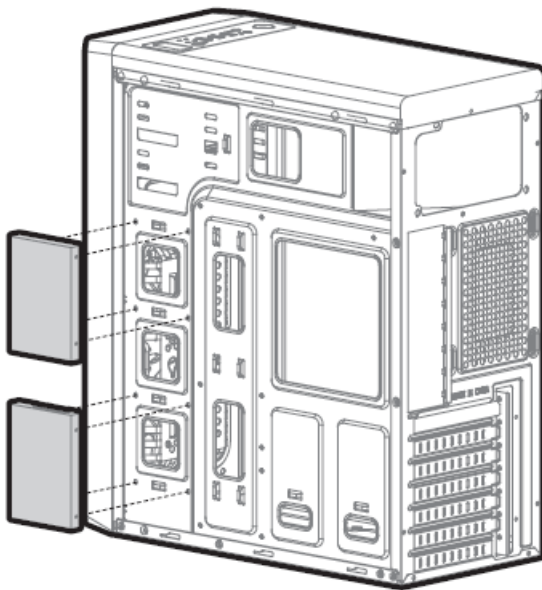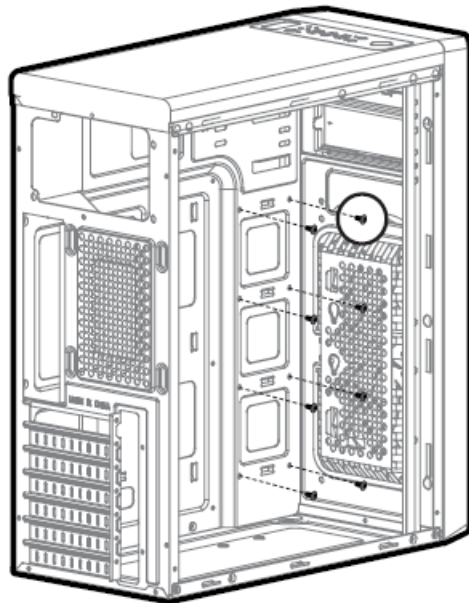**1****2**

 
8. Mounting the ODD

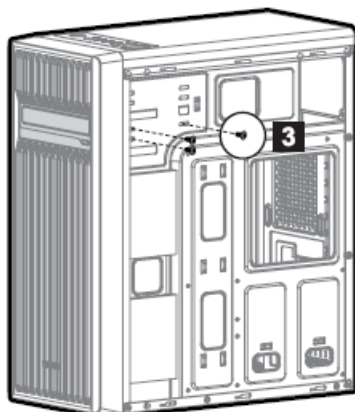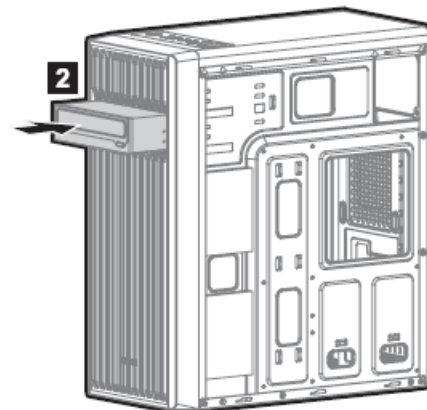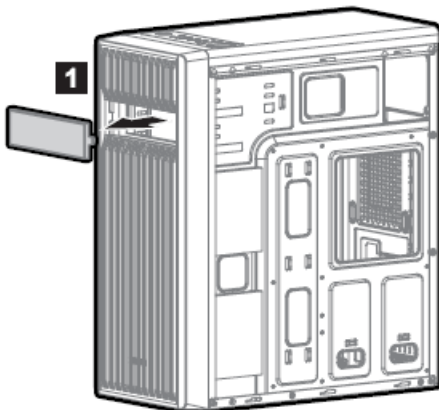


9. Mounting the front fan

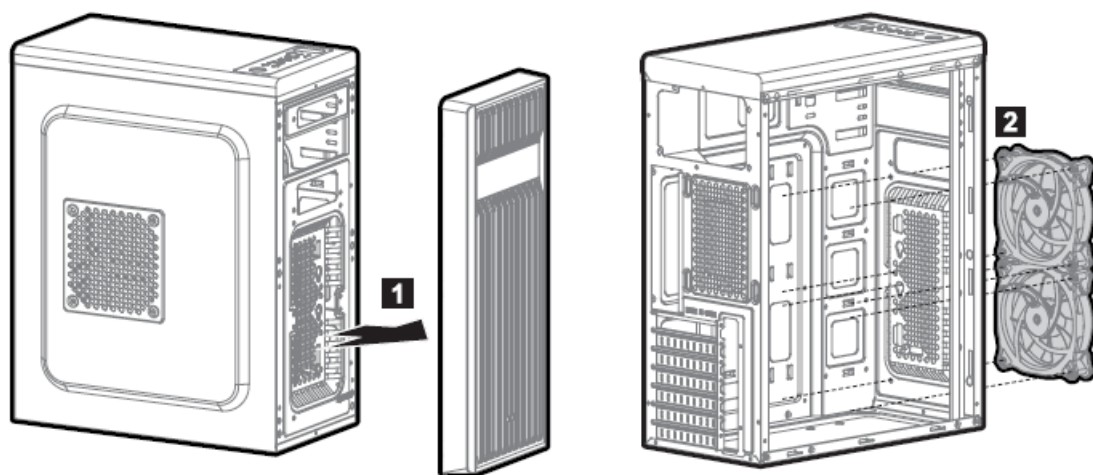

10. Mounting the side fan

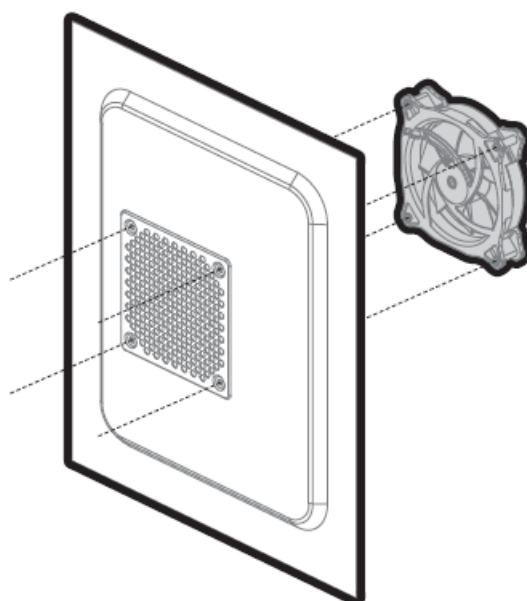


11. Cable connection

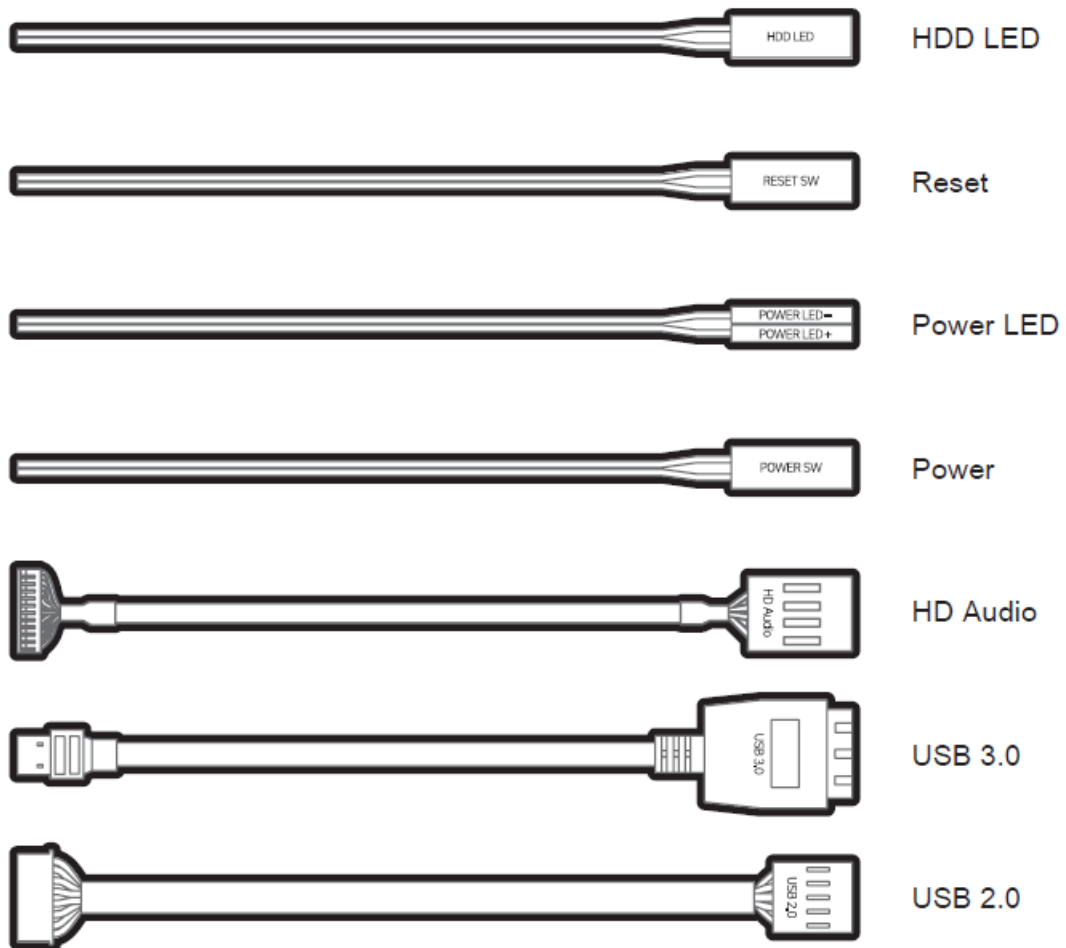

www.zalman.com



Documents / Resources

 <p>T6 ATX MID TOWER COMPUTER PC CASE User's Manual</p>	<p>ZALMAN T6 ATX Mid Tower Computer PC Case [pdf] User Manual T6 ATX Mid Tower Computer PC Case, T6, ATX Mid Tower Computer PC Case, Tower Comput er PC Case, Computer PC Case, PC Case, Case</p>
---	---

References

- zalman.com

