

ZALMAN Z8 ATX MID Tower Computer Case User Manual

Home » ZALMAN » ZALMAN Z8 ATX MID Tower Computer Case User Manual





Z8/Z8MS/Z8TG **ATX MID-TOWER COMPUTER CASE User's Manual**

- * To ensure safe and easy installation, please read the following precaution.
- * Product design and specifications may be revised to improve quality and performance without notice. Ver. 041120

Contents

- 1 Precautions
- 2 Specifications
- 3 Accessories
- 4 Documents /

Resources

- 4.1 References
- **5 Related Posts**

Precautions


- Read this manual carefully before installing.
- · Check the product and components before installing. If you find any abnormality, contact the location where you purchased the product for a replacement or refund.
- Wear gloves to prevent accidents when installing the product.
- Severe damage may occur when mounting the system, so do not apply excessive force.
- Connecting the cable incorrectly may cause a fire due to a short circuit. Make sure to refer to the manual when

connecting the cable.

- Be careful not to block the ventilation hole of the product when using the system.
- Avoid locations with direct sunlight, water, moisture, oil, and excessive dust. Store and use the product in a well-ventilated location.
- Do not wipe the surface of the product using chemicals. (organic solvents such as alcohol or acetone)
- Do not insert your hand or another object into the product during operation, as this may injure your hand or damage the object.
- Store and use the product out of children's reach.
- Our company assumes no responsibility for any problem that occurs due to the use of the product for purposes other than its designated purposes and/or the carelessness of the consumer.
- The exterior design and specifications of the product are subject to change without prior notice to consumers for quality improvement.

Specifications


Model		Z8	Z8 MS	Z8 TG
Case Form Factor		ATX Mid-Tower		
Dimensions		460 x 212 x 493(H)mm		
Weight		6.3kg		6.8kg
Case Materials		Tempered Glass, Plastic, Steel		
Motherboard Support		E-ATX(~280mm) / ATX / mATX / Mini-ITX		
Maximum VGA Length		350mm		
Maximum CPU Cooler Height		160mm		
Maximum PSU Length		180mm		
PCI Expansion Slots		7		
Drive Bays		2xCombo (3.5" or 2.5", Toolless), 4x2.5"		
	Тор	2x120mm / 2	x140mm	
	Front	3x120mm / 3	x140mm	
Fan Support	Rear	1 x 120mm		
	Bottom	2 x 120mm (Remove SSD Brackets)		
	Front	3 x 120mm	Addressabl	e RGB 3 x 120mm
Fan(s) Included	Rear	1x120mm		
			ARGB Con	troller Included
	Тор	120mm / 240mm / 280mm		
Radiator Support	Front	120mm		
	Rear	120mm		
I/O Ports		2xUSB3.0, 1xUSB2.0, 1xHeadphone Jack, 1xMicrophone jack, Power Button, Reset Button, LED Button		

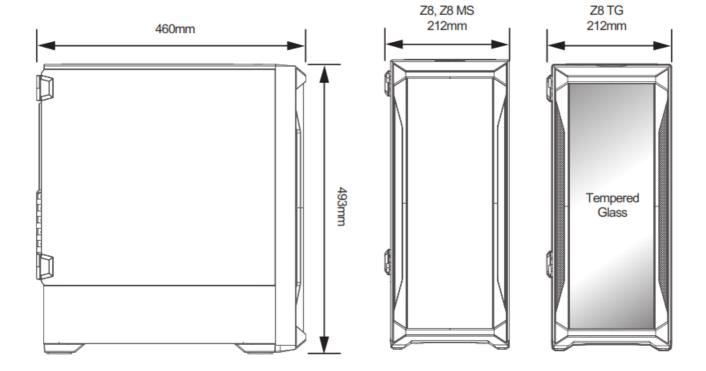

Accessories



I/O Ports

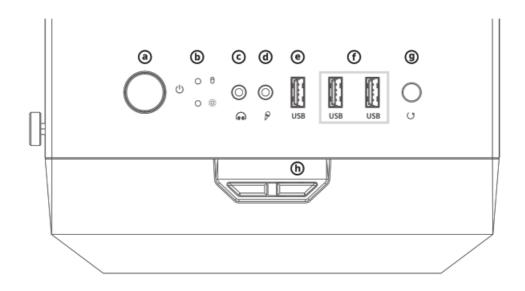


#	Part
	Power Button
	HDD / Power LED
	Headphone Jack
	Microphone Jack
	USB 2.0 Port
	USB 3.0 Ports
	Reset Button
	LED Button


1. Removing the side panels

- 1) Tempered Glass
- 2) Steel Panel

2.

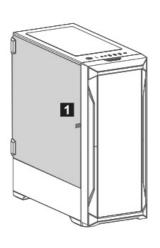




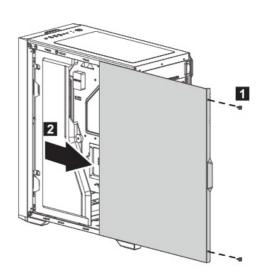


Removing the front panel

3. Mounting the motherboard

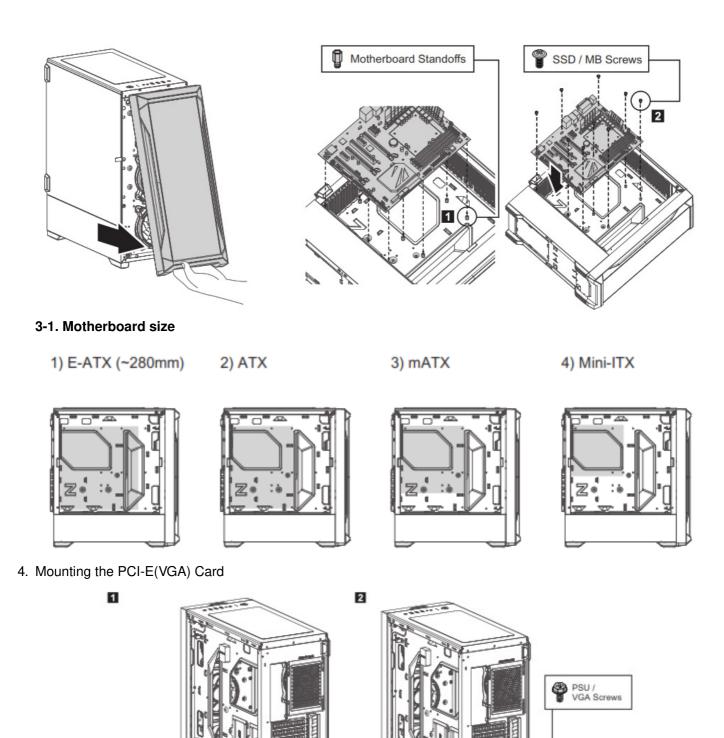

5. Mounting the 2.5" SSD

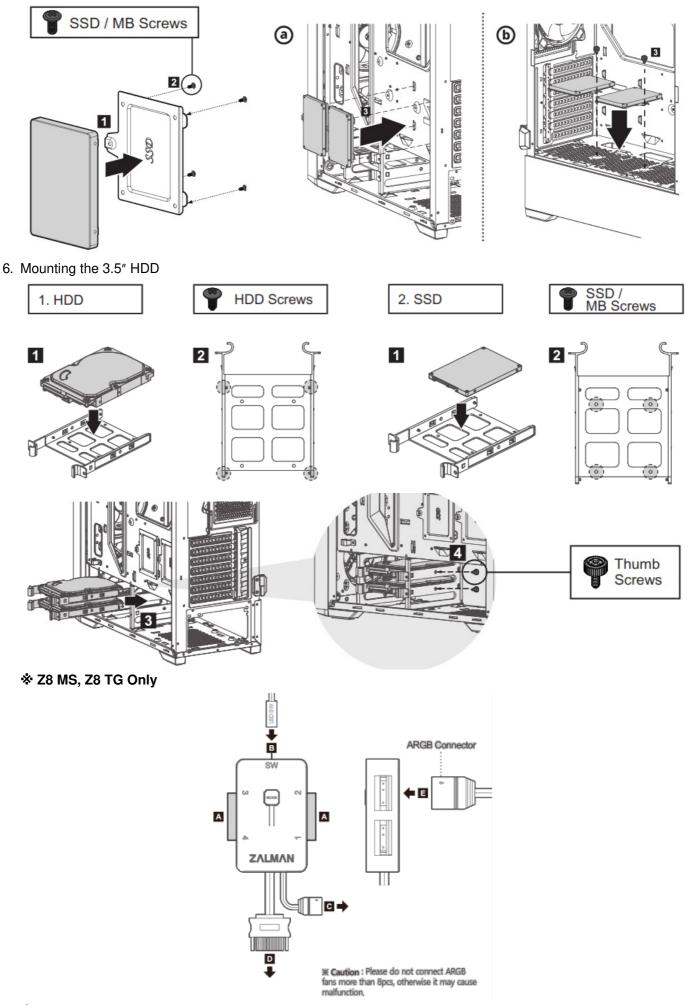

* How to control RGB LED

- LED colors & patterns can be changed by pressing the LED Button on I/O ports.


- Long pressing on the LED Button for 6 seconds, RGB LED will be turned off after blinking twice in white.
- Long pressing on the LED Button for 3 seconds, RGB will be synchronized with the motherboard after blinking once in white.

Press the LED Button again to desynchronize with the motherboard.


A. ARGB LED 1~4 / 3-Pin




- B. ARGB LED Control Button / 2-Pin
- Connector to ARGB LED Control Button
- C. Other Motherboards Sync / 3-Pin
- Connector to Motherboard
- Requires Motherboard that Supports RGB Sync

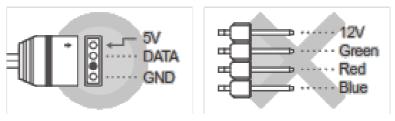


 - * Caution: if Addressable 3 Pin connects to a 12V header instead of a 5V header improperly, It may cause fatal damages to the product by the overvoltage.
- D. SATA Power / 15-Pin
- Connector to PSU
- Input: 5V



- E. Connect the ARGB connector to the RGB hub
- 7. Mounting the PSU

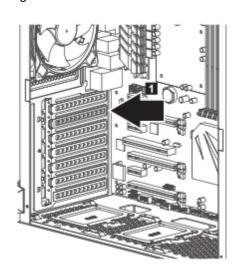


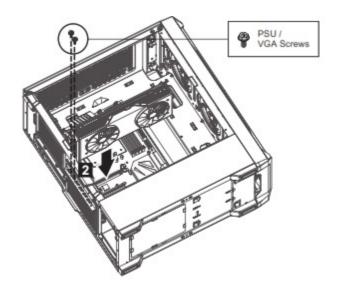


8. Mounting the radiator

- 1. Mounting the top radiator
 - 120mm
 - 240mm
 - 280mm
- 9. Mounting the front and rear radiator

120mm

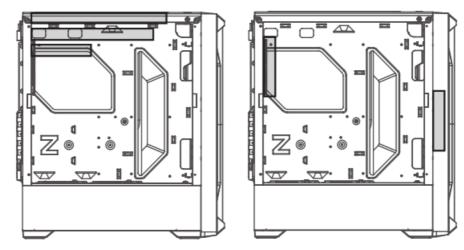



10. Fans Included / Specifications

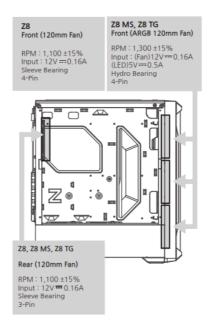


11. Mounting the fans


- 1. Mounting the top & bottom fans
 - 2 x 120mm
 - 2 x 140mm
- 2. Mounting the rear fan
 - 1 x 120mm
- 3. Mounting the front fans
 - 3 x 120mm
 - 3 x 140mm

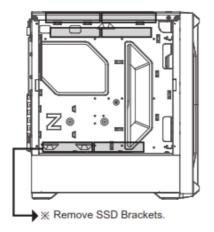

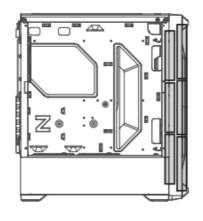

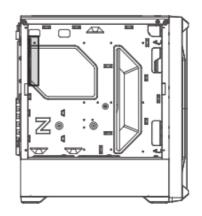

12. I/O Connectors

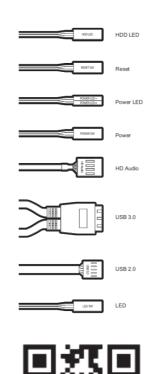



www.zalman.com

Documents / Resources

ZALMAN Z8 ATX MID Tower Computer Case [pdf] User Manual Z8, Z8 MS, Z8 TG, Z8 ATX MID Tower Computer Case, ATX MID Tower Computer Case, Tower Computer Case, Computer Case, Case
ZALMAN Z8 ATX Mid Tower Computer Case [pdf] User Manual Z8, Z8 MS, ATX Mid Tower Computer Case, Tower Computer Case, ATX Mid Computer Case, Computer Case, Case
ZALMAN Z8 ATX Mid Tower Computer Case [pdf] User Manual Z8, Z8 MS, Z8 TG, Z8 ATX Mid Tower Computer Case, Z8, ATX Mid Tower Computer Case, To wer Computer Case, Computer Case, Case

References

- **Z**zalman.com
- <a>Q <a>ANDPRO.RU интернет магазин компьютерной и офисной техники с выгодными ценами и доставкой

Manuals+,