

Zaply
GT4286 Retro Arcade
Game Console



ZAPLY GT4286 Retro Arcade Game Console User Manual

[Home](#) » [ZAPLY](#) » ZAPLY GT4286 Retro Arcade Game Console User Manual 

Contents

- 1 ZAPLY GT4286 Retro Arcade Game Console
- 2 Product Usage Instructions
- 3 FAQ
- 4 Box Contents
- 5 Product Diagram
- 6 Installation
- 7 Operation
- 8 Settings
- 9 Troubleshooting
- 10 Specifications
- 11 Warranty Information
- 12 CONTACT
- 13 Documents / Resources
 - 13.1 References

Zaply

ZAPLY GT4286 Retro Arcade Game Console



Product Usage Instructions

- Insert the USB plug of the USB to DC power cable into the USB mains power adaptor.
- **Note:** Ensure voltage and current match 5VDC, 1A to avoid issues.
- Insert the DC plug of the USB to DC power cable into the power socket on the rear of the game console.
- Plug the USB mains power adaptor into a 240VAC mains wall socket and turn it on.
- Press the power switch to turn on the unit (the LED status indicator should light up blue).
- Connect the HDMI cable from the console to your TV, monitor, or projector.
- Use R/L buttons to access the class menu displaying available ROMs.
- Select the collect menu to view saved favorite games. Add or remove games using the coin and start buttons.
- Access the search menu to find games by navigating letters with a joystick and selecting with A button.

FAQ

- **Q:** How do I add a second player?
- **A:** Press the coin button while in the game menu to add a second player, then press start to begin the game for the second player.
- **Q:** What should I do if the unit does not turn on?
- **A:** Check the power source, ensure correct voltage and current (5VDC, 1A), and verify all connections are secure.

Box Contents



1 x Retro Arcade Game Console



1 x Inbuilt 32GB microSD Card



1 x 3m HDMI Cable

 


1 x 1.2m USB to DC Power Cable



1 x USB Mains Power Adaptor

Product Diagram

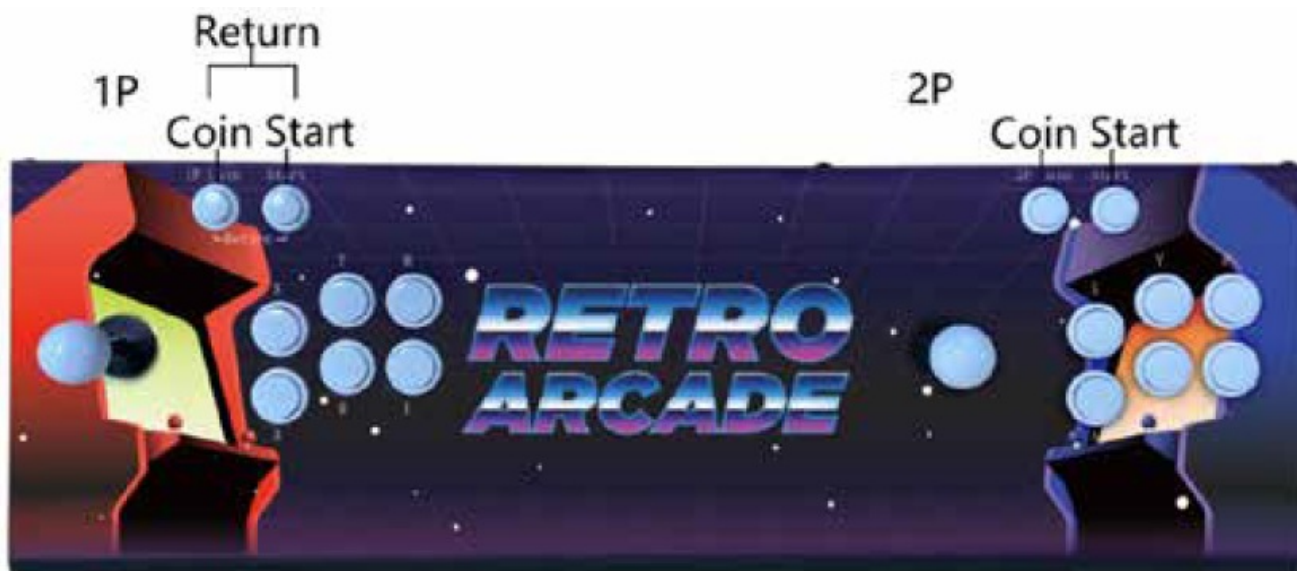

Feature	Description
Joystick	Push up/down to sort through the game list Push left/right to sort through the game pages Push up/down/left/right movements while in-game
X, Y, R, A, B, L Buttons	Press A to select the current game Press the X, Y, R, A, B, and L buttons for actions while in-game
Return/Pause (1st Player)	Press the coin and start buttons at the same time to return to the previous menu
Coin (1st Player)	Press the coin button while in the game menu so that you can start playing
Start (1st Player)	Press the start button after the coin has been added to the game
Coin (2nd Player)	Press the coin button while in the game menu so that it adds a second player
Start (2nd Player)	Press the start button after the coin has been added to the game to add a second player



Feature	Description
Power On/Off	Press the switch to turn the unit On and press again to turn the unit Off
HDMI Input	Connect to the HDMI socket of a TV, monitor, or projector using a HDMI cable
Power Socket (DC5 V,1A)	Connect to the USB to DC power cable and USB mains power adaptor to power the unit
microSD Card Slot	Insert a microSD card up to 128GB (32GB included)
USB Input	Connect to a USB external game controller

Installation

1. Insert the USB plug of the USB to DC power cable in to a the USB mains power adaptor.
Note: If using a third party USB mains power adaptor or TV USB port, the voltage and current needs to match 5VDC, 1A otherwise it may not work.
2. Insert the DC plug of the USB to DC power cable in to the power socket located on the rear of the game console.
3. Plug the USB mains power adaptor into a suitable 240VAC mains wall socket and turn on.
4. Press the power switch to On, the LED status indicator should light up blue.
5. Connect the HDMi cable to the HDMi socket of your TV, monitor or project.
6. Connect the opposite end of the HDMI cable to the HDMI socket of the game console.

Operation

- Once the game console has been powered on, the menu will show below



List

- To sort through the list of games and activate the game, use the following commands shown below:

Key	Description
Joystick Up	Scroll Games List Up
Joystick Down	Scroll Games List Down
Joystick Left	Turn Page Left
Joystick Right	Turn Page Right
A Button	Select Game

Class

- Press the R/L buttons to select the class menu to display the list of ROMs available as shown below:



History

- Press the R/L buttons to display a list of previous games played



Collect

- Press the R/L buttons to select the collect menu which displays your favorite saved games.
- When viewing the main menu games list; press the coin and start buttons together to add the game to your favorite list. Press the coin and start buttons again to cancel it from the list.



Search

- Press the R/L buttons to select the search menu which allows you to search a game within the main menu game list.
- Push the joystick in the direction of each letter you want to search and press the A button to select.



Download

- Press the R/L buttons to display downloaded games that you have added to the inbuilt 32GB microSD card.



 
1. To add downloaded games to this game console, you are required to remove the inbuilt 32GB microSD card from the rear of the console and insert it inside a computer.

Note: A microSD card reader may be required if your computer or laptop does not have a microSD card slot.


Note: Do NOT delete any other folders besides the ones in the download folder otherwise the system may not operate.

2. Once the microSD card has been inserted; open up the microSD card folder in My Computer.

3. Select the folder called download which is shown below:

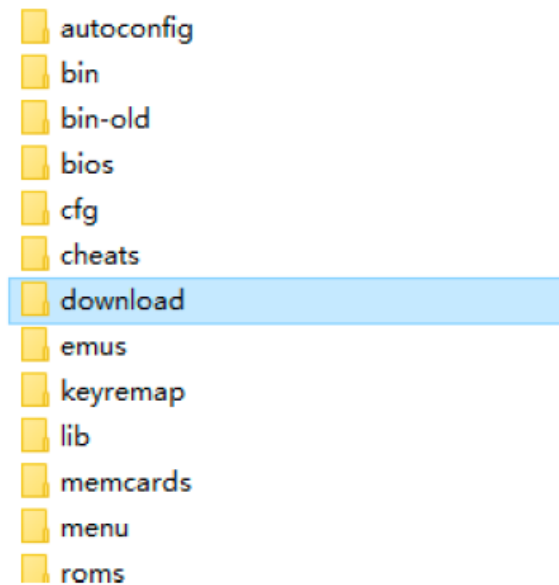

 4. Insert the game depending on the format to the correct emulator folder as shown below:

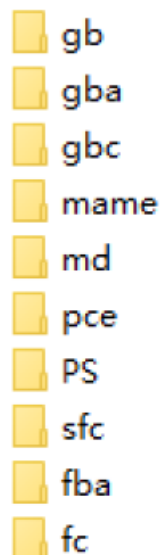

Note: The games are required to be inside a ZIP folder when placed inside the emulator folder otherwise they may not play correctly.

Note: Depending on the format and type of game, some games may not be compatible with this system.

Settings

- Press the R/L buttons to display the settings menu.
- It shows different language options, keystone settings, factory settings, and system information.



Troubleshooting

Problem	Solution
Unit Will Not Power On	Connect the USB mains power adaptor to the USB to DC power cable and DC socket on the game console, and connect properly to a 240VAC wall socket.
	Make sure the power switch is turned on
	If using a third-party USB mains power adaptor or TV USB port, ensure the voltage and current match 5VDC, 1A otherwise it may not power on
No Display	Connect the USB mains power adaptor to the USB to DC power cable and DC socket on the game console, and connect properly to a 240VAC wall socket.
	Make sure the power switch is turned on
	If using a third-party USB mains power adaptor or TV USB port, ensure the voltage and current match 5VDC, 1A otherwise it may not power on
	Ensure the HDMI cable is connected properly from the game console to the TV, monitor, or display
	Ensure the microSD card has been inserted correctly
Added Game Won't Play	Ensure the game is in the correct M.A.M.E format and placed in a ZIP folder.
	Ensure the game file is placed in the correct folder on the microSD card
	Some games may not be compatible with this system

Safety

- Do not open the case of the game console to avoid damage and injury.
- Keep the game console away from high temperatures as it may cause damage to the unit.
- Disconnect the USB mains power adaptor when not in use long term as it may cause permanent damage.
- If using a replacement or third-party USB mains power adaptor; make sure the voltage and current match the specifications as 5VDC, 1A.

Features

- 2 Players
- Add & Play your own ROMs
- Inbuilt 32GB microSD Card
- External USB Controller Port

Specifications

- **Supported Resolution:** Up to 4K (3840 x 2160)
- **Resolution:** 1080p (1920 x 1080)
- **HDMI:** 1.4
- **microSD Card Capacity:** Up to 128GB (32GB Included)
- **microSD Card Format:** FAT32
- **Power:** 5VDC, 1A
- **Dimensions:** 762(L) x 246(W) x 122(H)mm

Warranty Information


- Our product is guaranteed to be free from manufacturing defects for 12 Months.
- If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for the intended purpose.
- This warranty will not cover modified products; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.
- Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.
- To claim a warranty, please contact the place of purchase. You will need to show a receipt or other proof of purchase. Additional information may be required to process your claim.
- Any expenses relating to the return of your product to the store will normally have to be paid by you.
- The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law with the goods or services to which this warranty relates.

CONTACT

- This warranty is provided by:
- Electus Distribution

- Address 46 Eastern Creek Drive, Eastern Creek NSW 2766
- Ph. 1300 738 555

Documents / Resources

<div><div>Retro Arcade Game Console</div><div></div><div>User Manual GT4286</div></div>	<div>ZAPLY GT4286 Retro Arcade Game Console [pdf] User Manual</div> <div>GT4286 Retro Arcade Game Console, GT4286, Retro Arcade Game Console, Arcade Game Co nsole, Game Console, Console</div>
--	---

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.