




ZEBRA TC22 Touch Computer User Guide

[Home](#) » [ZEBRA](#) » ZEBRA TC22 Touch Computer User Guide 

ZEBRA TC22 Touch Computer User Guide



Contents

- [1 Copyright](#)
- [2 Terms of Use](#)
- [3 Features](#)
- [4 Installing the Battery](#)
- [5 Documents / Resources](#)
- [6 Related Posts](#)

Copyright

ZEBRA and the stylized Zebra head are trademarks of Zebra Technologies Corporation, registered in many jurisdictions worldwide. All other trademarks are the property of their respective owners. ©2022 Zebra Technologies Corporation and/or its affiliates. All rights reserved. Information in this document is subject to change without notice. The software described in this document is furnished under a license agreement or nondisclosure agreement. The software may be used or copied only in accordance with the terms of those agreements. For

further information regarding legal and proprietary statements, please go to:

SOFTWARE: zebra.com/linkoslegal.

COPYRIGHTS: zebra.com/copyright.

WARRANTY: zebra.com/warranty.

END USER LICENSE AGREEMENT: zebra.com/eula.

Terms of Use

Proprietary Statement

This manual contains proprietary information of Zebra Technologies Corporation and its subsidiaries ("Zebra Technologies"). It is intended solely for the information and use of parties operating and maintaining the equipment described herein. Such proprietary information may not be used, reproduced, or disclosed to any other parties for any other purpose without the express, written permission of Zebra

Technologies.

Product Improvements Continuous improvement of products is a policy of Zebra Technologies. All specifications and designs are subject to change without notice.

Liability Disclaimer

Zebra Technologies takes steps to ensure that its published Engineering specifications and manuals are correct; however, errors do occur. Zebra Technologies reserves the right to correct any such errors and disclaims liability resulting therefrom.

Limitation of Liability

In no event shall Zebra Technologies or anyone else involved in the creation, production, or delivery of the accompanying product (including hardware and software) be liable for any damages whatsoever (including, without limitation, consequential damages including loss of business profits, business interruption, or loss of business information) arising out of the use of, the results of use of, or inability to use such product, even if Zebra Technologies has been advised of the possibility of such damages. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Features

This section lists the features of the TC22 touch computer.

Figure 1 Front and Side Views

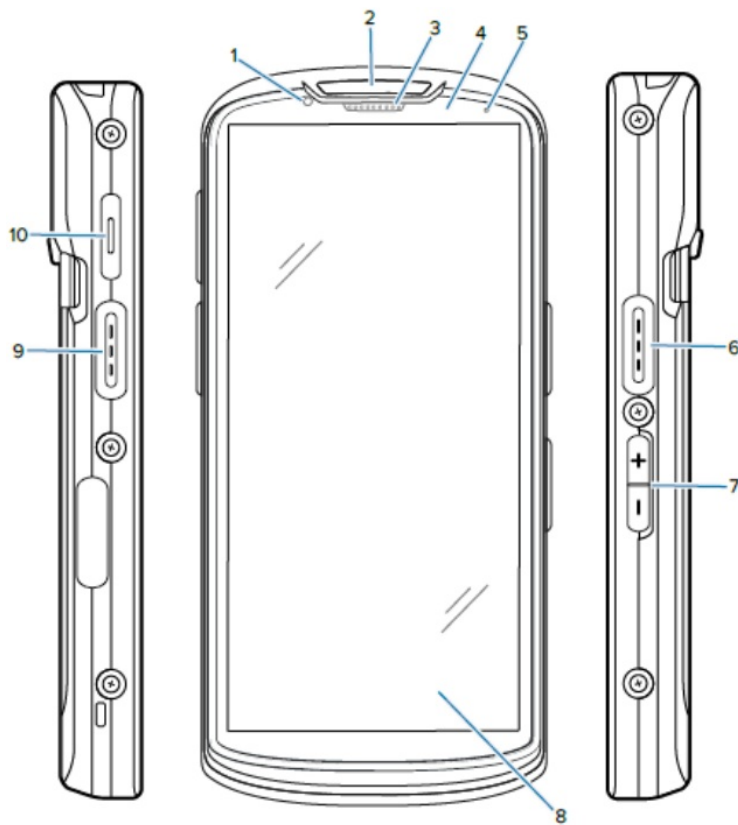 


Table 1 TC22 Front View

Number	Item	Description
1	Front camera 8MP	Takes photos and videos.
2	Scan LED	Indicates data capture status.
3	Receiver Port	Use for audio playback in Handset mode.
4	Proximity/light sensor	Determines proximity and ambient light for controlling display backlight intensity.
S	Status LED	Indicates battery charging status while charging and application generated notifications.
6, 9	Scan button	Initiates data capture (programmable).
7	Volume up/down button	Increase and decrease audio volume (programmable).
8	6 in. LCD touchscreen	Displays all information needed to operate the device.
10	PTT button	Typically used for PTT communications. Where regulatory restrictions exist., button is configurable for use with other applications.
Note 1: Pakistan, Qatar		

Figure 2 Back, Top, and Bottom View

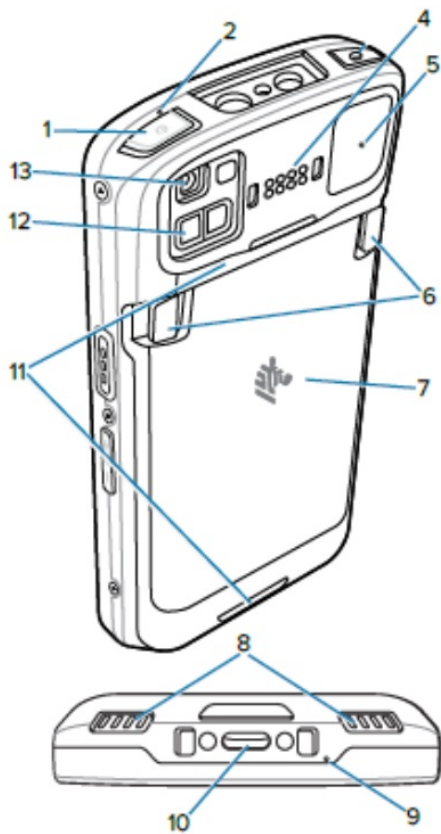 


Table 2 TC22 Rear View

Number	Item	Description
1	Power button	Turns the display on and off. Press and hold to reset the device, power off or swap battery.
2,5,9	Microphone	Use for noise cancellation.
4	Back common 8 pins	Provides host communications, audio and device charging via cables and accessories.
6	Battery release latches	Press to remove the battery.
7	Battery	Provides power to the device.
8	Speaker ports	Provides audio output for video and music playback. Provides audio in speakerphone mode.
10	Common 10 USB Type C and 2 charge pins	Provides power to the device using 10 USB-C interface with 2 charge pins.
11	Hand strap attachment points	Attachment points for the hand strap.
12	ToF module	Employs time of flight techniques to resolve distance between the camera and subject.
13	16 MP rear camera with flash	Takes photos and videos with flash to provide illumination for the camera.

 
Installing the Battery

This section describes how to install the battery into the device.



NOTE: User modification of the device, particularly in the battery well, such as labels, asset tags, engravings, stickers, etc., may compromise the intended performance of the device or accessories. Performance levels such as sealing (Ingress Protection (IP)), impact performance (drop and tumble), functionality, temperature resistance, etc. could be effected. DO NOT put any labels, asset tags, engravings, stickers, etc. in the battery well.

1. Insert the battery, bottom first, into the battery compartment in the back of the device.
2. Press the battery down until it snaps into place.

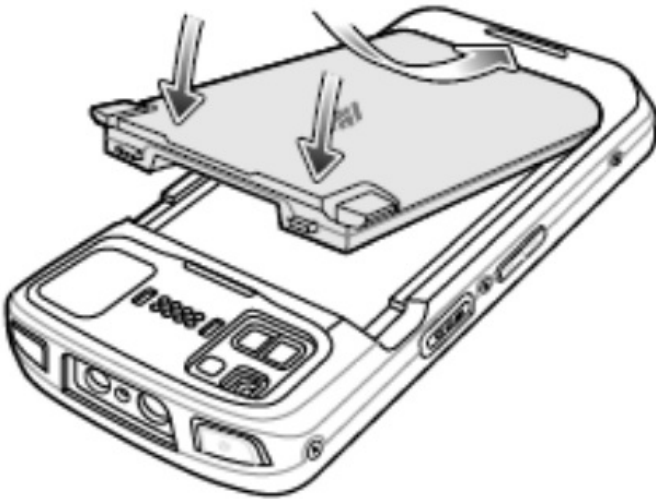

Charging

Use one of the following accessories to charge the device and/or spare battery.

Charging and Communication

Description	Part Number	Charging		USB	Communication	Remark
		Battery e)	Spare(in batterydevic			
Charging/USB Cable	CBL-TC5X-USBC2A-01	Yes	No	Yes	No	
1-Slot USB/Charge Only Cradle Kit	CRD-NGTC5-2SC1B	Yes	No	Yes	No	Optional
5-Slot Charge Only Cradle with Battery Kit	CRD-NGTC5-5SC4B	Yes	Yes	No	No	Optional

Charging the Device

This section provides information for charging the device.

NOTE: Ensure that you follow the guidelines for battery safety described in the TC53 Product Reference Guide.

1. To charge the main battery, connect the charging accessory to the appropriate power source.
2. Insert the device into a cradle or attach to a cable. The device turns on and begins charging. The Charging/Notification LED blinks amber while charging, then turns solid green when fully charged.

The battery charges from fully depleted to 90% in approximately 2.5 hours and from fully depleted to 100% in approximately three hours. In many cases the 90% charge provides plenty of charge for daily use. A full 100% charge lasts for approximately 14 hours of use. To achieve the best charging results use only Zebra charging accessories and batteries. Charge batteries at room temperature with the device in sleep mode.

Charging the Spare Battery

This section provides information on charging a spare battery.






1. Insert a spare battery into the spare battery slot.
2. Ensure the battery is seated properly. The Spare Battery Charging LED blinks indicating charging. See Charging Indications for **charging indicators**.

The battery charges from fully depleted to 90% in approximately 2.3 hours and from fully depleted to 100% in approximately three hours. In many cases the 90% charge provides plenty of charge for daily use. A full 100% charge lasts for approximately 14 hours of use. To achieve the best charging results use only Zebra charging accessories and batteries.


Charging Indications

The charging/notification LED indicates charging status.


Table 3 Charging/Notification LED Charging Indicators

Status	LED	Indications
Off		Device is not charging. Device is not inserted correctly in the cradle or connected to a power source. Charger/cradle is not powered.
Slow Blinking Amber(1 blink every 4 seconds)		Device is charging.
Solid Green		Charging complete.
Fast Blinking Amber(2 blinks/second)		Charging error, e.g.: <ul style="list-style-type: none">• Temperature is too low or too high.• Charging has gone on too long without completion (typically eight hours).
Fast Blinking Red (2 blinks/second)		Charging error but the battery is at end of useful life., e.g.: <ul style="list-style-type: none">• Temperature is too low or too high.• Charging has gone on too long without completion (typically eight hours).

 Charge/USB-C Cable

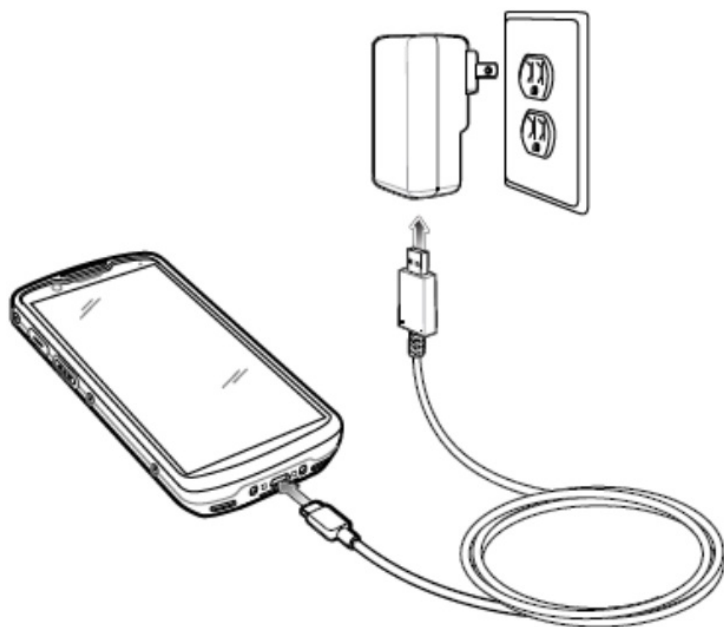


1-Slot USB Charging Cradle

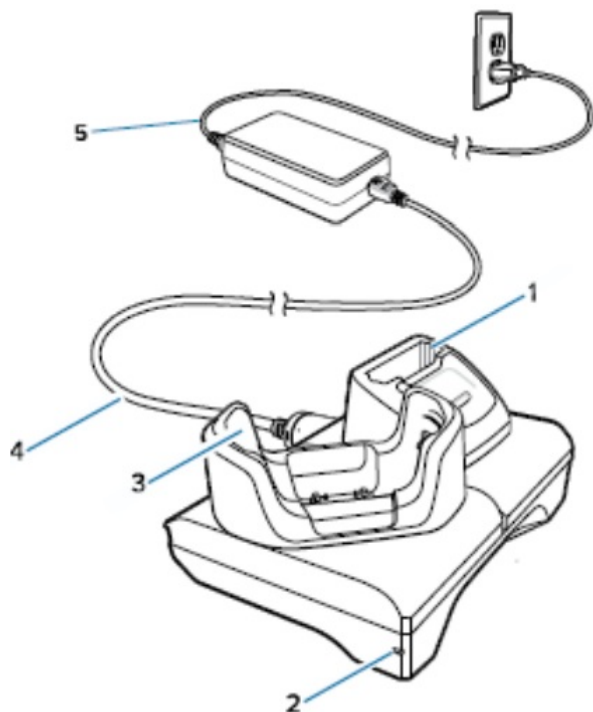 

1	Spare battery charging slot
2	Power LED
3	Device charging slot
4	Power line cord
5	AC line cord

 5-Slot Charge Only Cradle with Battery Charger

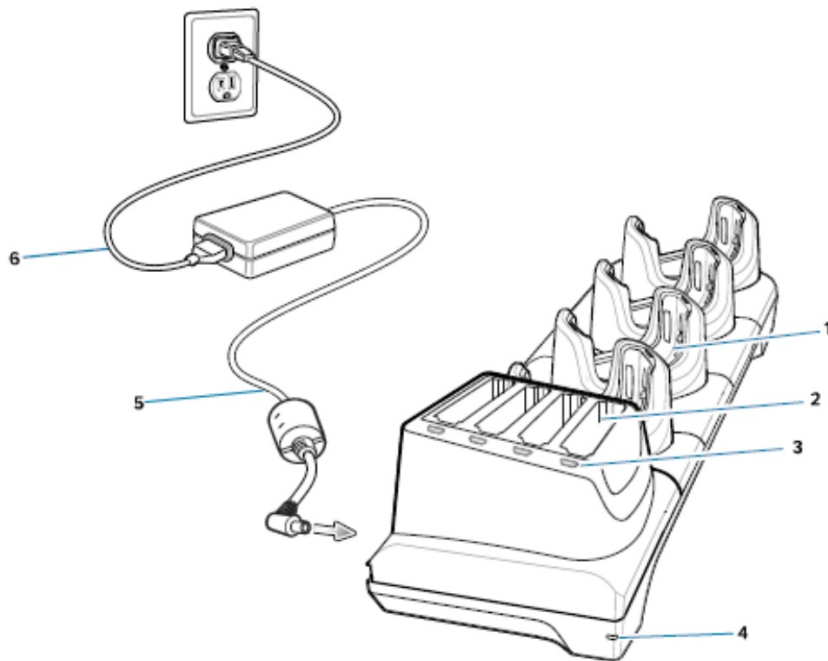


1	Device charging slot
2	Spare battery charging slot
3	Spare battery charging LED
4	Power LED
5	Power line cord
6	AC line cord

Scanning

To read a barcode, a scan-enabled application is required. The device contains the DataWedge application that allows the user to enable the imager, decode the barcode data and display the barcode content.

 1. Ensure that an application is open on the device and a text field is in focus (text cursor in text field). 2. Point the exit window on the top of the device at a barcode.
2. Press and hold the scan button.

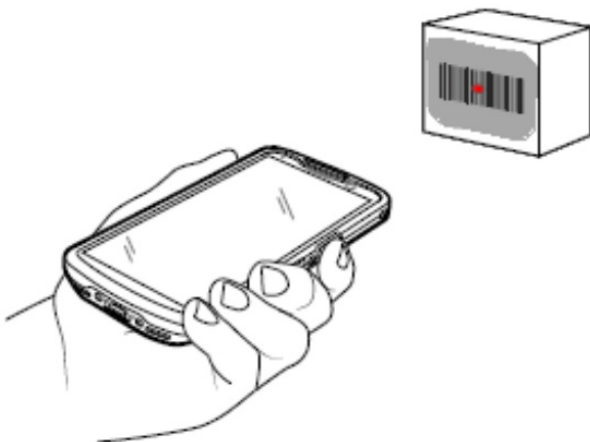

The red LED aiming pattern and red aiming dot turns on to assist in aiming.




NOTE: When the device is in Picklist mode, the imager does not decode the barcode until the crosshair or aiming dot touches the barcode.

3. Ensure the barcode is within the area formed by the cross-hairs in the aiming pattern. The aiming dot is used for increased visibility in bright lighting conditions.

 Figure 3 Aiming Pattern

 


Figure 4 Pick List Mode with Multiple Barcodes in Aiming Pattern

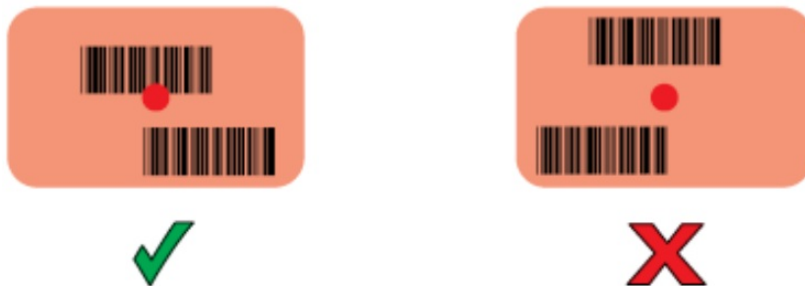


4. The Data Capture LED lights green and a beep sounds, by default, to indicate the barcode was decoded successfully.
5. Release the scan button.
NOTE: Imager decoding usually occurs instantaneously. The device repeats the steps required to take a digital picture (image) of a poor or difficult barcode as long as the scan button remains pressed.
6. The barcode content data displays in the text field.

Ergonomic Considerations

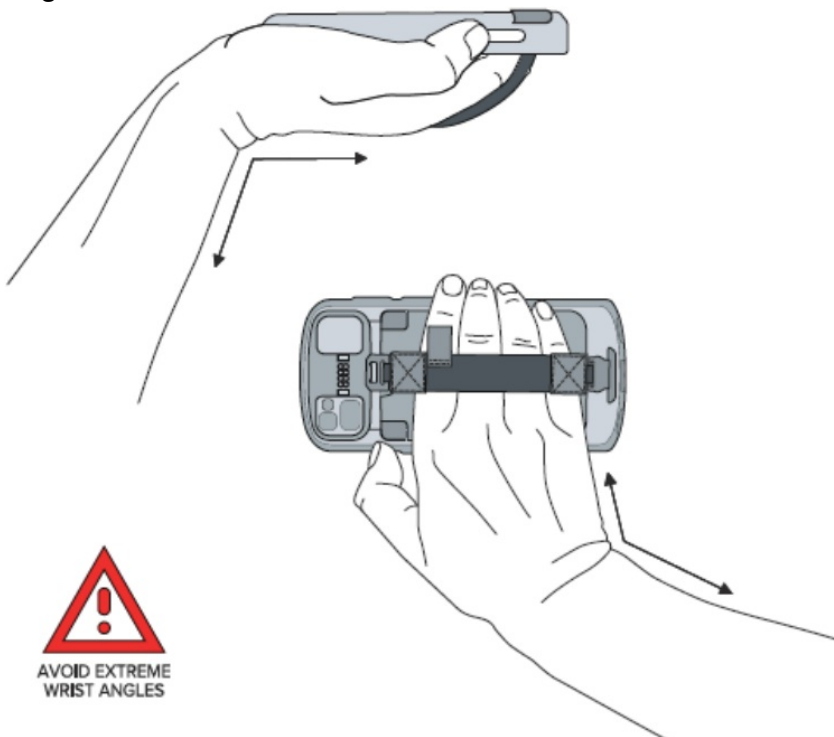



Documents / Resources

 <p>TC22 Touch Computer</p> <p>Quick Start Guide</p>	<p>ZEBRA TC22 Touch Computer [pdf] User Guide UZ7WLMT0, UZ7WLMT0, TC22, TC22 Touch Computer, Touch Computer, Computer</p>
---	---