

# **ZEBRA TC22 Trigger Handle Installation Guide**

Home » ZEBRA » ZEBRA TC22 Trigger Handle Installation Guide 🖺



### Contents

- 1 ZEBRA TC22 Trigger Handle
- **2 Product Information**
- **3 Product Usage Instructions**
- 4 Features
- **5 Rugged Boot Installation**
- **6 Device Installation**
- 7 Charging
- 8 Documents / Resources
  - 8.1 References
- 9 Related Posts



**ZEBRA TC22 Trigger Handle** 



#### **Product Information**

## **Specifications**

• Model: TC22/TC27

• Product Type: Trigger Handle

• Manufacturer: Zebra Technologies

• Features: Rugged Boot, Lanyard Mount, Release Latch

## **Product Usage Instructions**

## **Trigger Handle Installation Guide**

- 1. Remove any hand strap if installed before proceeding.
- 2. Attach the trigger handle to the device following the provided instructions.

## **Rugged Boot Installation**

- 1. Remove any existing rugged boot if present.
- 2. Install the new rugged boot securely onto the device.

#### **Device Installation**

1. For device installation, ensure to follow the specific device model instructions provided.

## **Charging:**

- 1. Before charging, remove any shim in the cable cup to ensure proper connection.
- 2. Connect the charging cable to the device as per the device manual.

#### **Optional Lanyard Installation:**

1. If desired, follow the optional lanyard installation steps provided.

#### Removal

1. To remove the trigger handle or any other accessories, carefully follow the removal steps outlined in the manual.

### **FAQ (Frequently Asked Questions)**

- Q: How do I attach the lanyard to the trigger handle?
  - A: To attach the lanyard, follow the optional lanyard installation steps provided in the installation guide.
- Q: Do I need to remove any components before charging the device?
  - A: Yes, it is recommended to remove any shim in the cable cup before connecting the charging cable to ensure proper charging.
- Q: Can I install the rugged boot without removing the trigger handle?

A: It is advisable to remove any existing accessories like the trigger handle before installing the rugged boot for a secure fit.


#### TC22/TC27


Trigger Handle Installation Guide

Zebra Technologies | 3 Overlook Point | Lincolnshire, IL 60069 USA **zebra.com** 

ZEBRA and the stylized Zebra head are trademarks of Zebra Technologies Corp., registered in many jurisdictions worldwide. All other trademarks are the property of their respective owners. © 2023 Zebra Technologies Corp. and/or its affiliates. All rights reserved.


#### **Features**

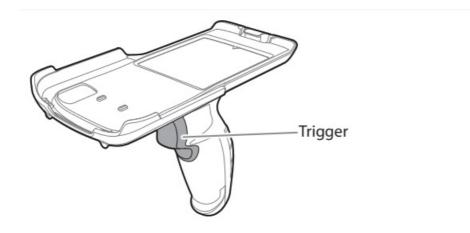

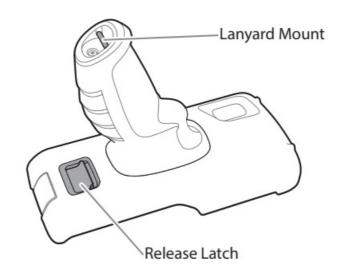


# **Rugged Boot Installation**

 $\label{NOTE:} \textbf{NOTE:} \ \textbf{If hand strap is installed, remove it prior to installation.}$ 

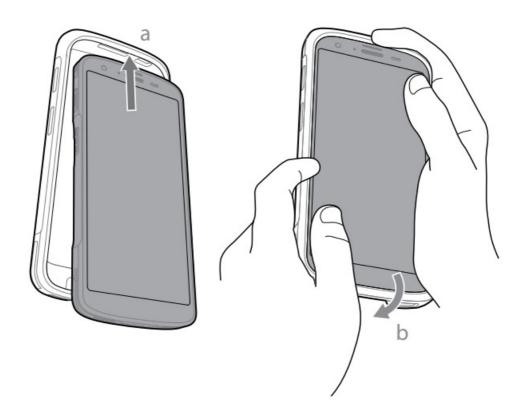


## **Device Installation**

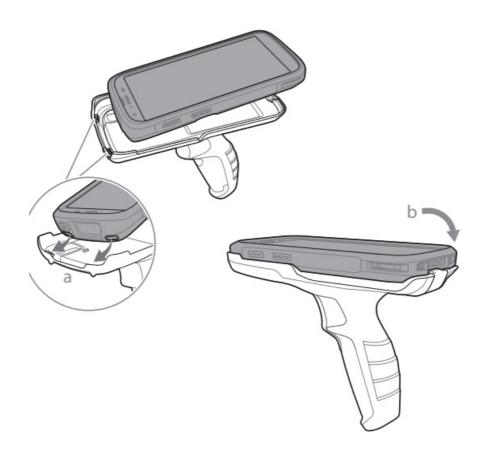


# Charging

**NOTE:** Remove Shim in Cable Cup before installing onto device.

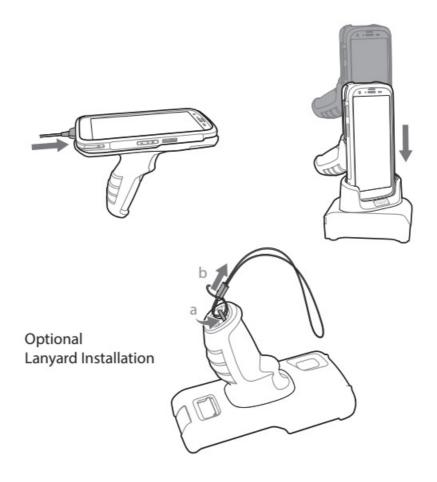

## Removal

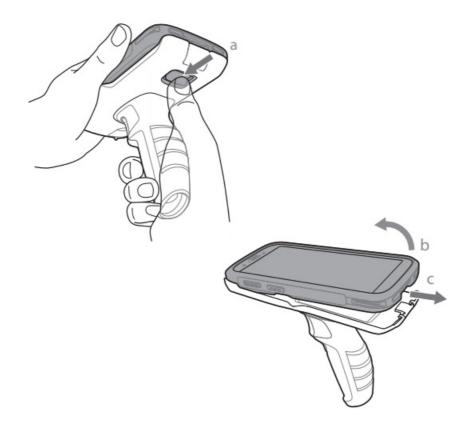

### References

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.