



ZEBRA WT0 Wearable Computer User Guide

[Home](#) » [ZEBRA](#) » ZEBRA WT0 Wearable Computer User Guide 



WT0
Wearable Computer
Quick Start Guide – Draft
MN-004955-O1EN Rev A

Contents

- [1 WT0 Wearable Computer](#)
- [2 Terms of Use](#)
- [3 Device Features](#)
- [4 Battery Safety Guidelines](#)
- [5 Installing the Battery](#)
- [6 Replacing the Battery](#)
- [7 Charging the Device](#)
- [8 Charging Temperature](#)
- [9 USB/Charge Cable](#)
- [10 Ergonomic Considerations](#)
- [11 Documents / Resources](#)
 - [11.1 References](#)

WT0 Wearable Computer

Copyright

2024/03/1

ZEBRA and the stylized Zebra head are trademarks of Zebra Technologies Corporation, registered in many jurisdictions worldwide. All other trademarks are the property of their respective owners. ©2023 Zebra

Technologies Corporation and/or its affiliates. All rights reserved.

Information in this document is subject to change without notice. The software described in this document is furnished under a license agreement or nondisclosure agreement. The software may be used or copied only in accordance with the terms of those agreements.

For further information regarding legal and proprietary statements, please go to:

SOFTWARE: zebra.com/linkoslegal.

COPYRIGHTS: zebra.com/copyright.

PATENTS: ip.zebra.com.

WARRANTY: zebra.com/warranty.

END USER LICENSE AGREEMENT: zebra.com/eula.

Terms of Use

Proprietary Statement

This manual contains proprietary information of Zebra Technologies Corporation and its subsidiaries ("Zebra Technologies"). It is intended solely for the information and use of parties operating and maintaining the equipment described herein. Such proprietary information may not be used, reproduced, or disclosed to any other parties for any other purpose without the express, written permission of Zebra Technologies.

Product Improvements

Continuous improvement of products is a policy of Zebra Technologies. All specifications and designs are subject to change without notice.

Liability Disclaimer

Zebra Technologies takes steps to ensure that its published Engineering specifications and manuals are correct; however, errors do occur. Zebra Technologies reserves the right to correct any such errors and disclaims liability resulting therefrom.


Limitation of Liability

In no event shall Zebra Technologies or anyone else involved in the creation, production, or delivery of the accompanying product (including hardware and software) be liable for any damages whatsoever (including, without limitation, consequential damages including loss of business profits, business interruption, or loss of business information) arising out of the use of, the results of use of, or inability to use such product, even if Zebra Technologies has been advised of the possibility of such damages. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Device Features

This section lists the features of the WTO wearable computer.

 Figure 1 Front View

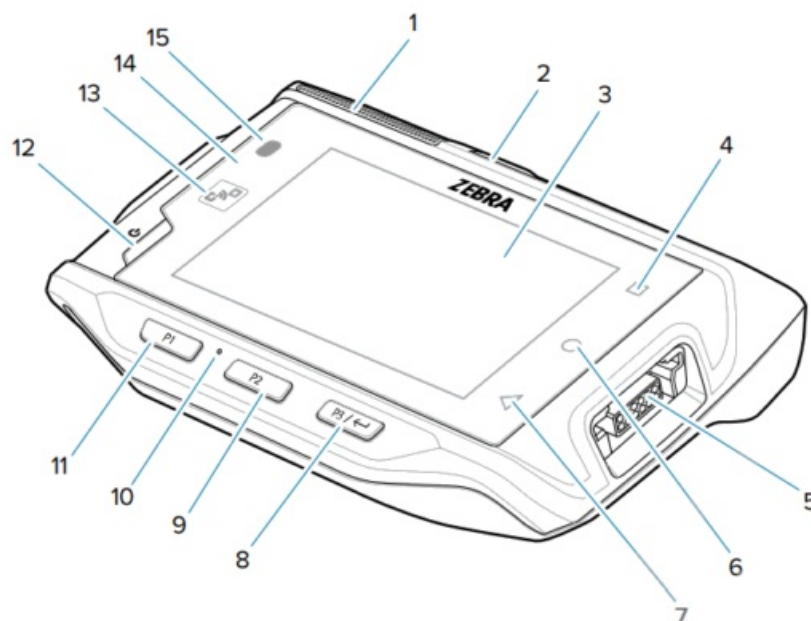

Number	Item	Function
1	Speaker	Provides audio output for video and music playback.
2	Battery	Provides power to the device.
3	Display	Displays all information needed to operate the device.
4	Recent button	Displays recently open applications.
5	Right interface connector	Provides USB host and client communication, audio and device charging via cables and accessories.
6	Home button	Displays the Home screen.
7	Back button	Displays the previous screen.
8	P3 button / Enter button	Use as the Enter button. If programmed as PTT, initiates Push-To-Talk communication.
9	P2 button	Increases volume.
10	Microphone	Use for communication on handset.
11	P1 button	Decreases volume.
12	Power button	Turns the display on and off. Press and hold to reset the device and power off.
13	NFC antenna	Provides communication with other NFC-enabled devices.
14	Ambient light sensor	Determines ambient light for controlling display backlight intensity.
15	Notification/ Charge LED	Indicates battery charging status while charging with USB Charge cable and provide notifications from applications.

Figure 2 Rear View

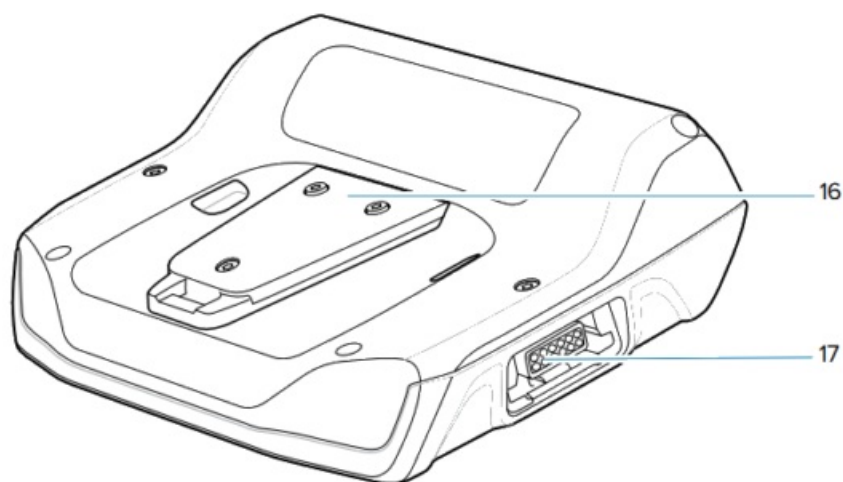 


Table1 Rear View

16	Cleat	Provides alignment and secures the device to the wrist and hip mounts.
17	Left interface connector	Provides USB host and client communication, audio and device charging via cables and accessories.

Battery Safety Guidelines

To use the device safely, you must follow the battery guidelines.

- The area in which the units are charged should be clear of debris and combustible materials or chemicals. Particular care should be taken when the device is charged in a non-commercial environment.
- Follow the battery usage, storage, and charging guidelines found in this guide.
- Improper battery use may result in a fire, explosion, or other hazard.
- To charge the mobile device battery, the ambient battery and charger temperatures must be between +32°F and +104°F (0°C and +40°C).
- Do not use incompatible batteries and chargers, including non-Zebra batteries and chargers. Use of an incompatible battery or charger may present a risk of fire, explosion, leakage, or other hazard. If you have any questions about the compatibility of a battery or a charger, contact the Global Customer Support Center.
- For devices that utilize a USB port as a charging source, the device shall only be connected to products that bear the USB-IF logo or have completed the USB-IF compliance program.
- Do not disassemble, open, crush, bend, deform, puncture, or shred the battery.
- Severe impact from dropping any battery-operated device on a hard surface could cause the battery to overheat.
- Do not short-circuit a battery or allow metallic or conductive objects to contact the battery terminals.
- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, or expose to fire, explosion, or other hazard.
- Do not leave or store the equipment in or near areas that might get very hot, such as in a parked vehicle or near a radiator or other heat source. Do not place a battery into a microwave oven or dryer.
- Battery usage by children should be supervised.
- Please follow local regulations to properly dispose of used rechargeable batteries.
- Do not dispose of batteries in a fire.
- In the event of a battery leak, do not allow the liquid to come in contact with the skin or eyes. If contact has been made, wash the affected area with water for 15 minutes, and seek medical advice.
- If you suspect damage to your equipment or battery, contact Customer Support to arrange for inspection.

Installing the Battery

This section describes how to install the battery into the WTO.

1. Insert the end of the battery into the battery well.

Figure 3 Standard Battery Installation


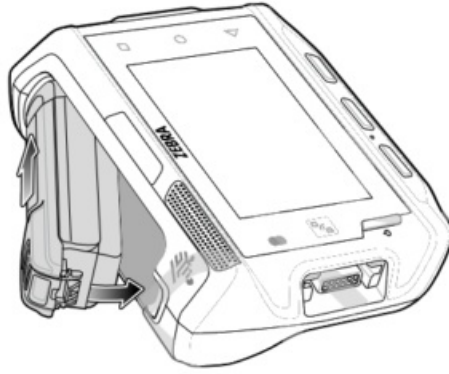 


Figure 4 Extended Battery Installation

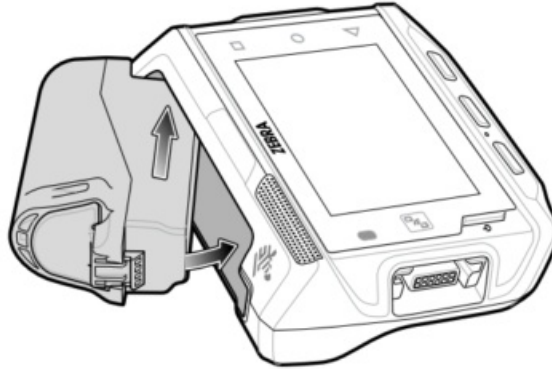 

2. Press the battery down until it snaps into place.

Replacing the Battery


Replacing the battery in the WTO.

1. Press the Power button to place the device in suspend mode.
2. Using fingertip, press the battery release latch toward the end of the battery.

Figure 5 Pull Release Latch Back on Standard Battery



 Figure 6 Pull Release Latch Back on Extended Battery

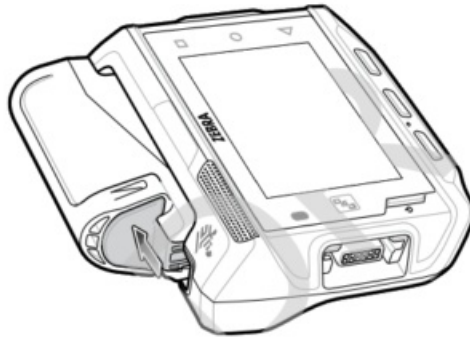

3. Lift the battery out of the battery well.

Figure 7 Standard Battery Removal


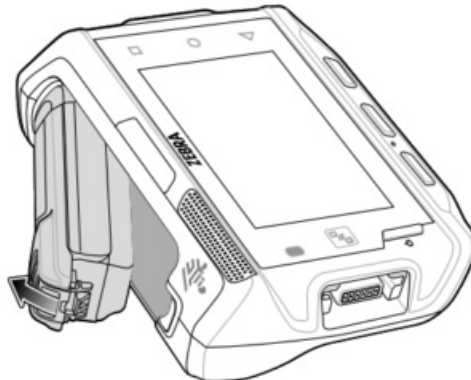 


Figure 8 Extended Battery Removal

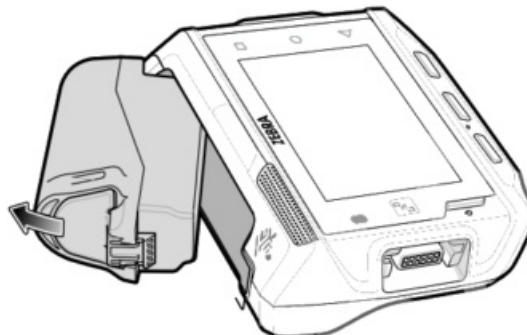 

4. Insert the end of the battery into the battery well.

Figure 9 Standard Battery Installation


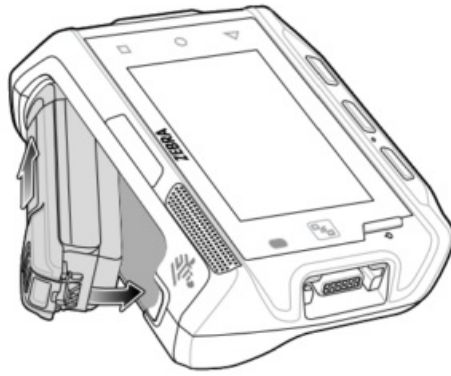 



Figure 10 Extended Battery Installation

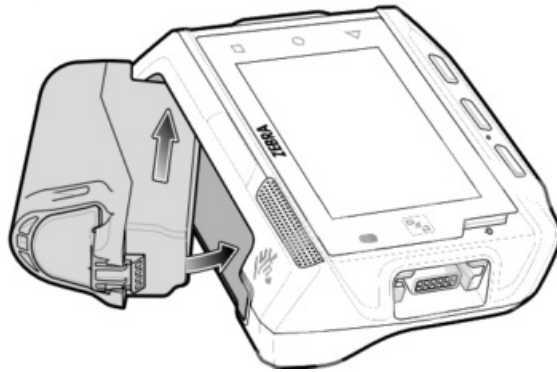 


5. Press the battery down until it snaps into place.

Charging the Device

 1. If charging a device with a standard battery, insert either end of the device into the device charging slot.

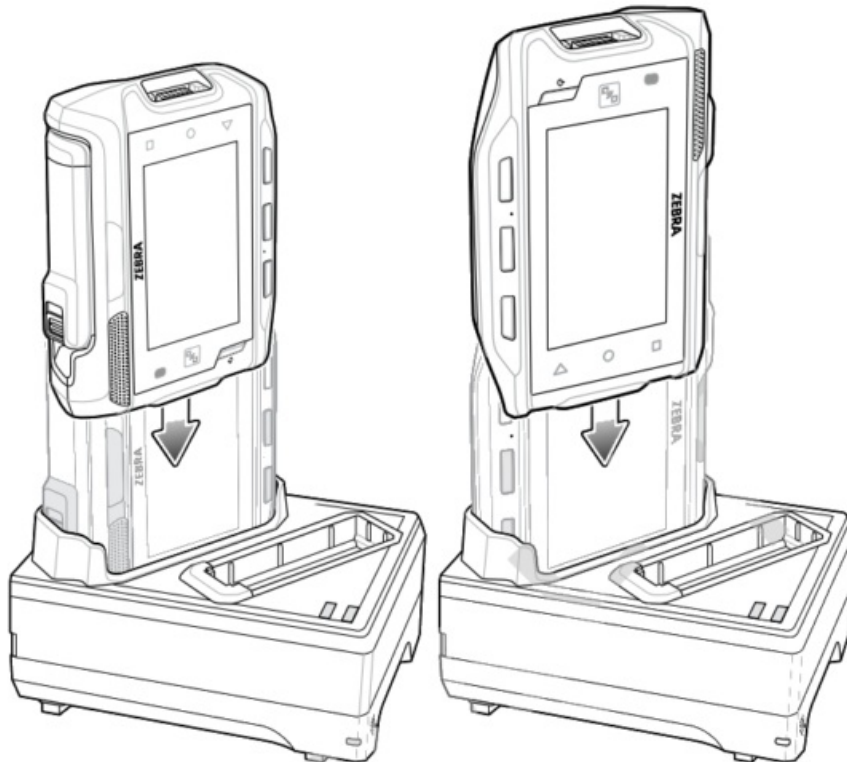

 2. If charging a device with an extended battery, insert the end of the device into the device charging slot as shown below.

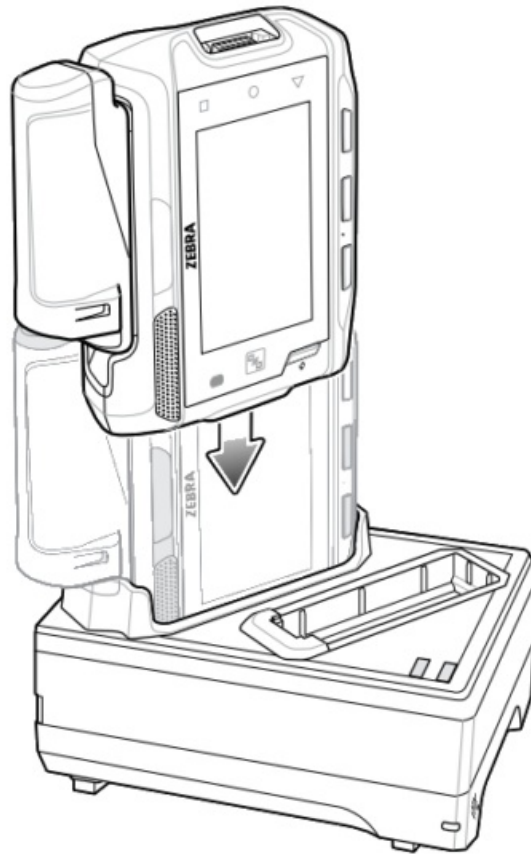

3. Ensure the device is seated properly.
The device Charge LED blinks indicating charging.

Charging the Spare Battery

1. Insert a spare battery into the spare battery slot.
2. Gently press down on the battery until it snaps into place.

Figure 11 Standard Spare Battery


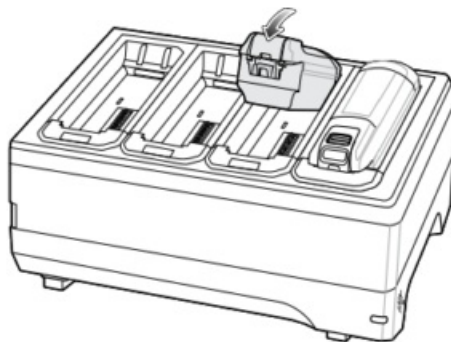 


Figure 12 Extended Spare Battery

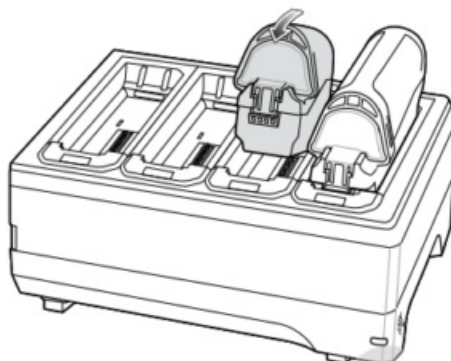 

Charging Temperature


Charge batteries in temperatures from 0°C to 40°C (32°F to 104°F). The device or cradle always performs battery charging in a safe and intelligent manner. At higher temperatures (for example, approximately +37°C (+98°F)) the device or cradle may for small periods of time alternately enable and disable battery charging to keep the battery at acceptable temperatures. The device and cradle indicates when charging is disabled due to abnormal temperatures via its LED.

1-Slot USB Charging Cradle

CAUTION: Ensure that you follow the guidelines for battery safety described in Battery Safety Guidelines on page 4.

The 1-Slot USB Charging Cradle:

 - Provides 5.4 VDC (nominal) power for operating the device.
- Provides USB communication with a host computer
- Charges a spare battery.

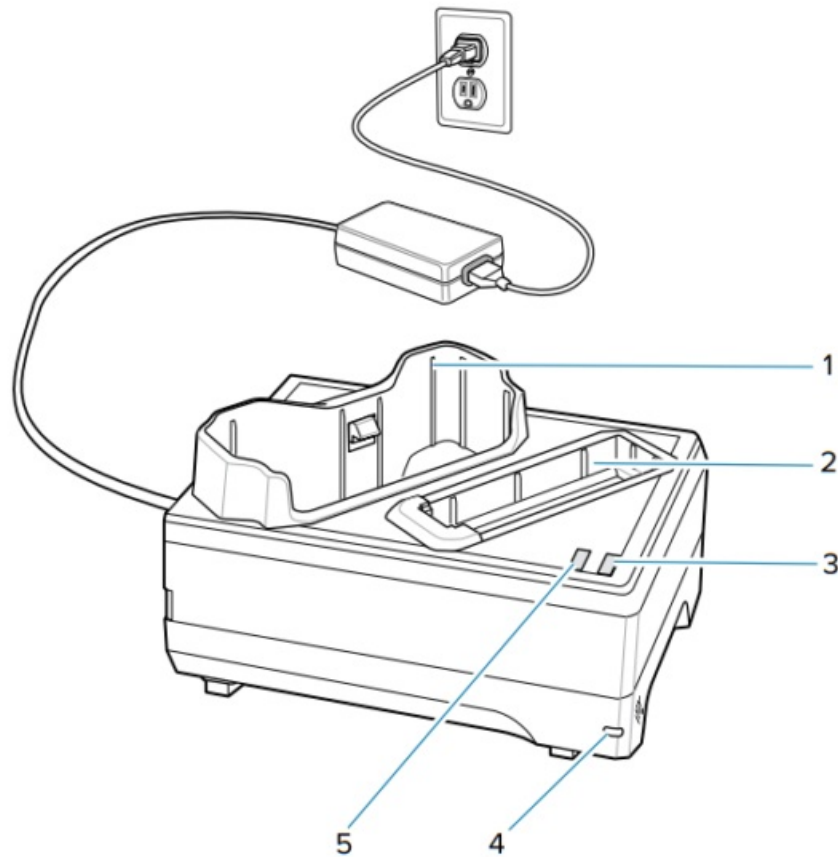


1	Device charging slot
2	Spare battery charging slot
3	Power LED
4	Spare battery charging LED
5	Device charging LED

2-Slot Device/RS6000 Charging Cradle

CAUTION: Ensure that you follow the guidelines for battery safety described in Battery Safety Guidelines on page 4.

The 2-Slot Device/RS6000 Charging Cradle:

 - Provides 5.4 VDC (nominal) power for operating the device and RS6000.
- Provides USB communication with a host computer.

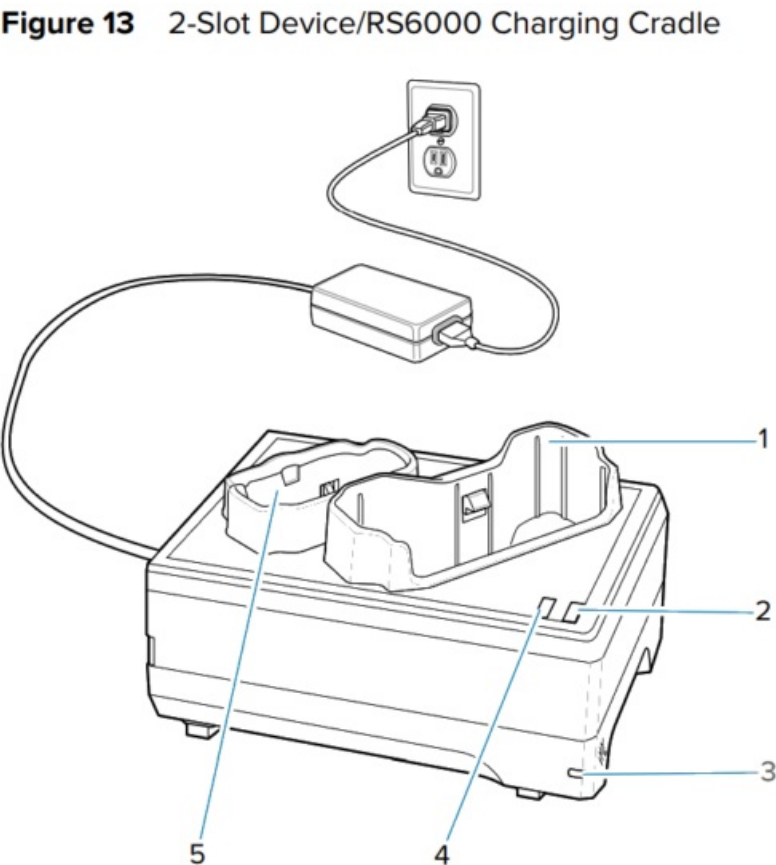

1	Device charging slot
2	Device charging LED
3	Power LED
4	RS6000 charging LED
5	RS6000 charging slot

5-Slot Charge Only Cradle


CAUTION: Ensure that you follow the guidelines for battery safety described in Battery Safety Guidelines on page 4.

The 5-Slot Charge Only Cradle:

- Provides 5.4 VDC (nominal) power for operating up to five devices.

- Simultaneously charges up to five devices.
- Simultaneously charges up to five spare batteries.

 Figure 14 5-Slot Charge Only Cradle

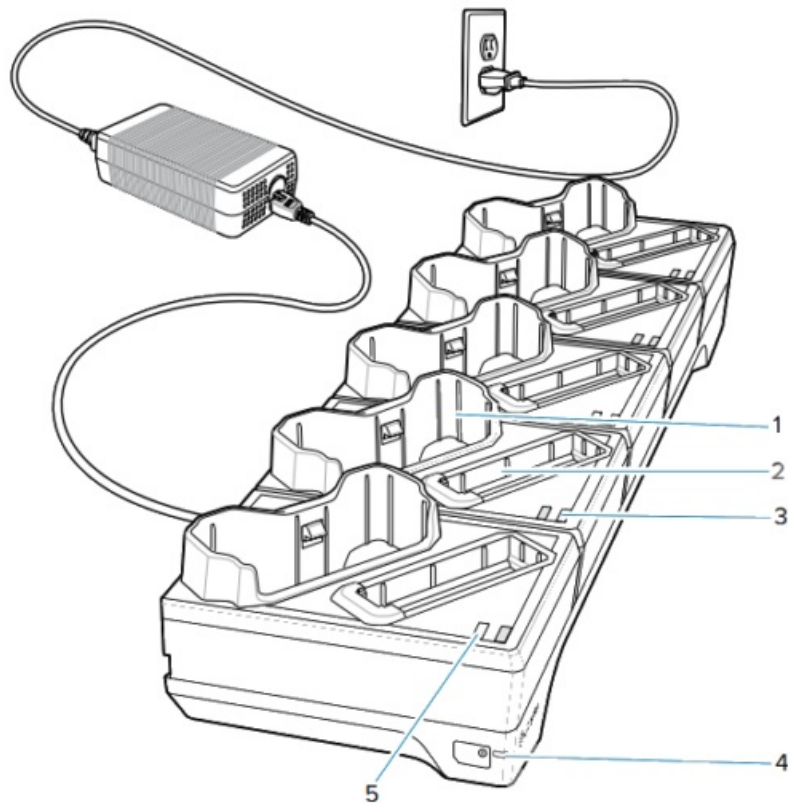

1	Device charging slot
2	Spare battery charging slot
3	Power LED
4	Spare battery charging LED
5	Device charging LED


10-Slot Device/RS6000 Charge Only Cradle

⚠ CAUTION: Ensure that you follow the guidelines for battery safety described in Battery Safety Guidelines on page 4.

The 10-Slot Device/RS6000 Charge Only Cradle:

- Provides 5.4 VDC (nominal) power for operating the device and RS6000.
- Simultaneously charges up to five devices.
- Simultaneously charges up to five RS6000's.

 Figure 15 10-Slot Device/RS6000 Charge Only Cradle

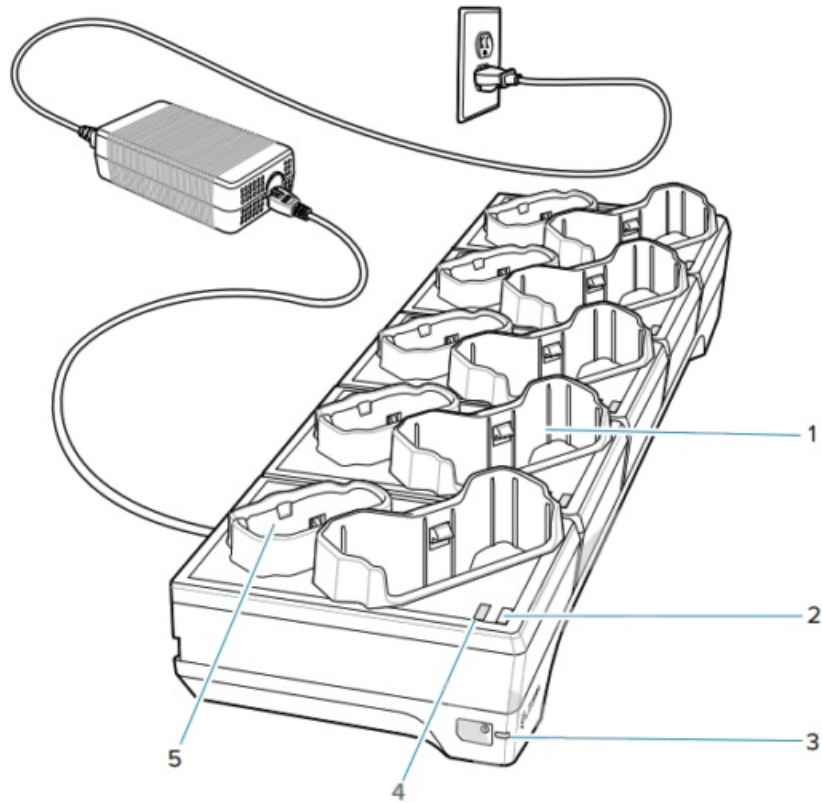

1	Device charging slot
2	Device charging LED
3	Power LED
4	RS6000 charging LED
5	RS6000 charging slot


10-Slot Charge Only Cradle

⚠ CAUTION: Ensure that you follow the guidelines for battery safety described in Battery Safety Guidelines on page 4.

The 10-Slot Charge Only Cradle:

- Provides 5.4 VDC (nominal) power for operating the device.
- Simultaneously charges up to 10 devices.

 Figure 16 10-Slot Charge Only Cradle

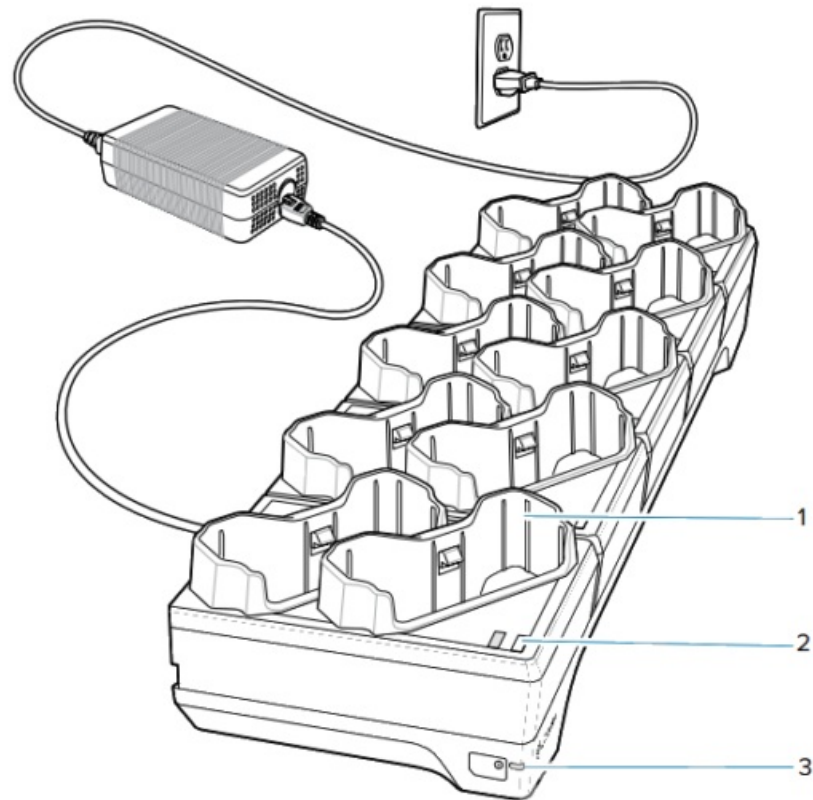

1	Device charging slot
2	Power LED
3	Device charging LEDs


5-Slot Ethernet Cradle

⚠ CAUTION: Ensure that you follow the guidelines for battery safety described in Battery Safety Guidelines on page 4.

The 5-Slot Ethernet Cradle:

- Provides 5.4 VDC (nominal) power for operating the device.
- Connects up to five devices to an Ethernet network.
- Simultaneously charges up to five devices.
- Simultaneously charges up to five spare batteries.

 Figure 17 5-Slot Device Ethernet Cradle

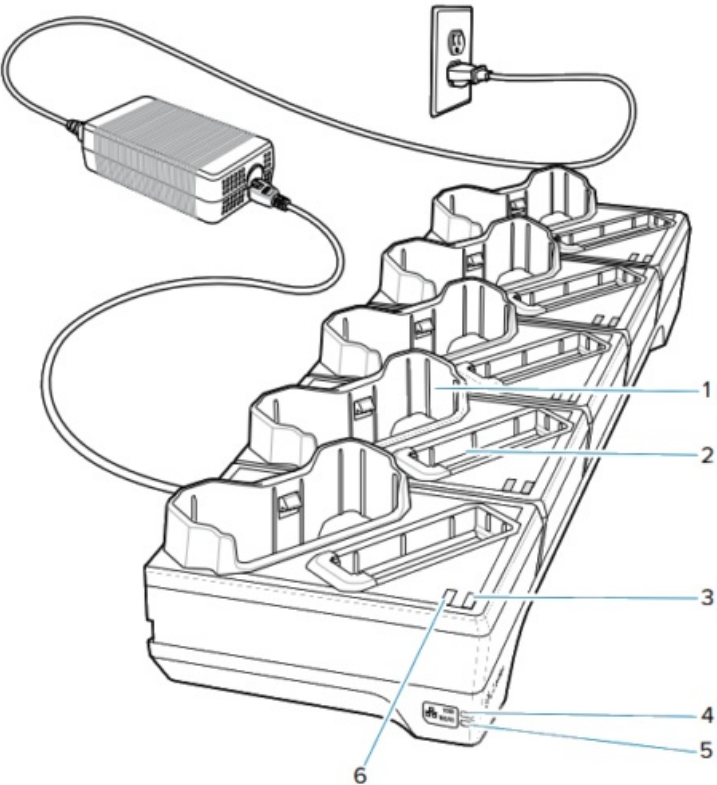


1	Device charging slot
2	Spare battery charging slot
3	1000 LED
4	100/100 LED
5	Spare battery charging LED
6	Device charging LED

4-Slot Battery Charger

The 4-Slot Battery Charger charges up to four spare batteries.

⚠ CAUTION: Ensure that you follow the guidelines for battery safety described in Battery Safety Guidelines on page 4.

 Figure 18 4-Slot Spare Battery Charger

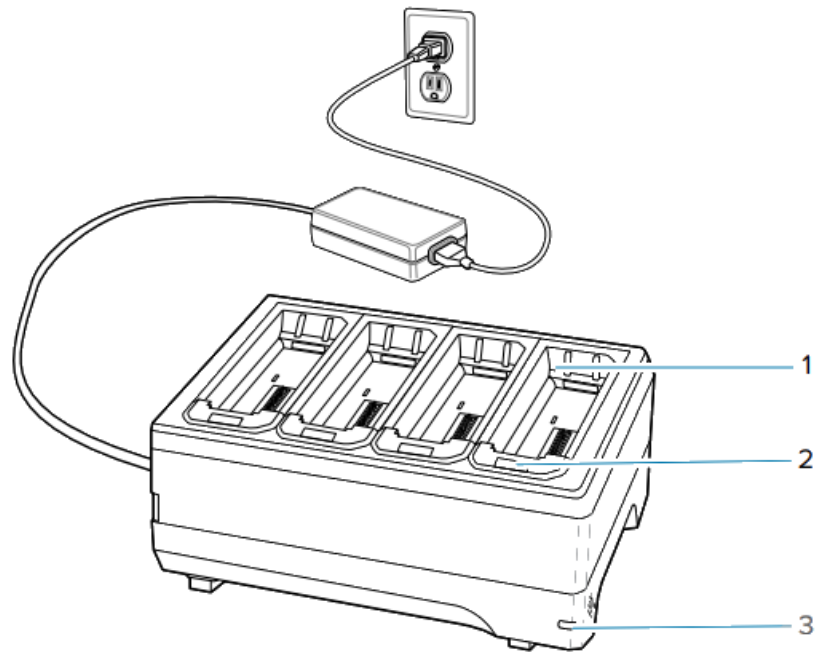


1	Spare battery charging slot
2	Battery charging LEDs (4)
3	Power LED

20-Slot Battery Charger

The 20-Slot Battery Charger charges up to 20 spare batteries.

⚠ CAUTION: Ensure that you follow the guidelines for battery safety described in Battery Safety Guidelines on page 4.

 Figure 19 20-Slot Battery Charger

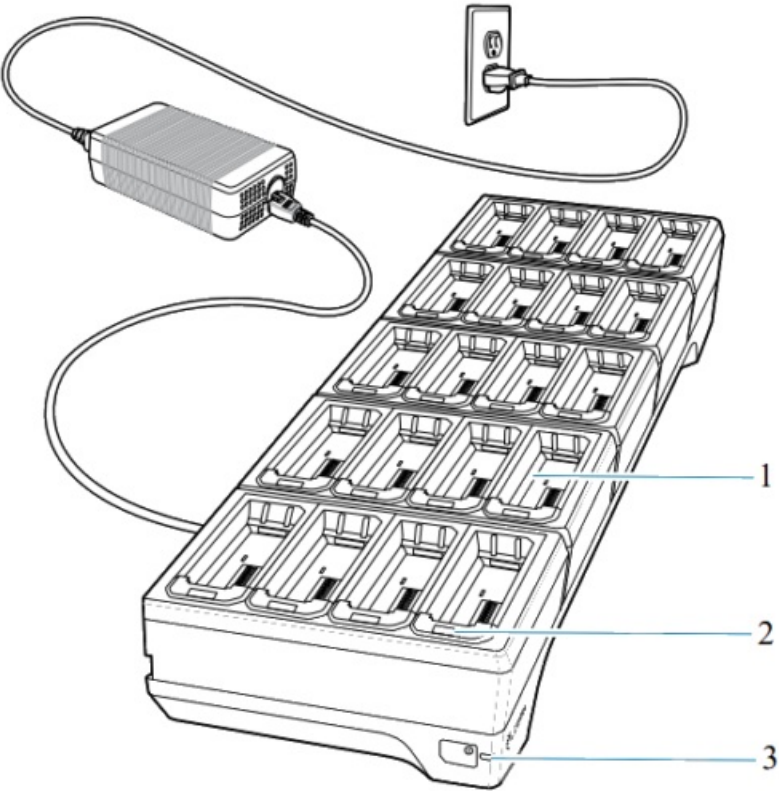


1	Spare battery charging slot
2	Battery charging LEDs (20)
3	Power LED

USB/Charge Cable

⚠ CAUTION: Ensure that you follow the guidelines for battery safety described in Battery Safety Guidelines on page 4.

The USB and Charging cable connects to either interface connector on the device. When attached to the device, allows the device to transfer data to a host computer and provides power for charging the device.

 Figure 20 USB and Charging Cable

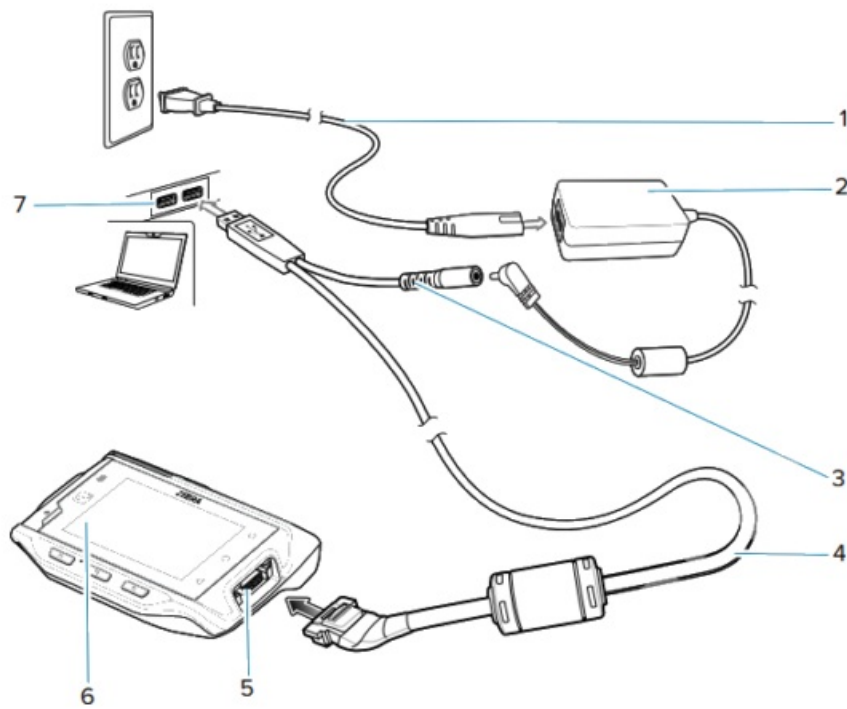

1	USB port
2	AC line cord
3	Power supply
4	USB charge cable
5	Interface connector

Ergonomic Considerations

To avoid or minimize risk of ergonomic injury, follow these recommendations:


- Ensure that users are trained in proper mounting of the device.
- Ensure that the comfort pad is secured to the holder before mounting.
- Ensure that the device is not worn near the wrist joint.
- Ensure that the device is mounted so that the display is oriented towards the user.
- Ensure proper use and maintenance of the adjustable BOA strap.
- Match strap selection to user forearm — Use white coded BOA strap for small to medium forearm size, and use black coded BOA strap for medium to large forearm size.
- Maintain and clean wearable components such as straps and soft goods.
- Reduce or eliminate unnecessary repetitive motion and activation.
- Maintain a neutral posture.
- Reduce or eliminate elevated or raised arm and shoulder postures.
- Reduce or eliminate excessive force.
- Keep objects that are used frequently within easy reach.
- Perform tasks at correct heights.
- Reduce or eliminate direct pressure.

- Provide adequate clearance.
- Provide a suitable working environment.



www.zebra.com

Documents / Resources

	<p>ZEBRA WT0 Wearable Computer [pdf] User Guide WT0, WT0 Wearable Computer, Wearable Computer, Computer</p>
---	---

References

- [User Manual](#)

Manuals+ Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.