



ZEBRA ZD411D Desktop Printer User Guide

[Home](#) » [ZEBRA](#) » ZEBRA ZD411D Desktop Printer User Guide 



ZEBRA

ZD411D Desktop Printer
User Guide



Contents

- 1 Setup
- 2 Remove Packing
- 3 Load Media
- 4 Adjust Sensor
- 5 Close Printer
- 6 Connect Power
- 7 Connect USB
- 8 Power On
- 9 Smart Calibration
- 10 Print Configuration Report
- 11 Support and Information
- 12 Media Out
- 13 Documents / Resources
 - 13.1 References
- 14 Related Posts

Setup

IMPORTANT

Go to zebra.com/setup and install the driver for your printer.



<http://www.zebra.com/setup>



The driver **MUST** be installed before connecting the printer to the computer, or it will cause complications. If your Microsoft Windows-based computer does not have the driver installed for this printer, download it from zebra.com/setup and install it before continuing.

Remove Packing




Slide the release latches (1) to the front to unlock the cover.



Open the printer and remove the packing (1).

Load Media

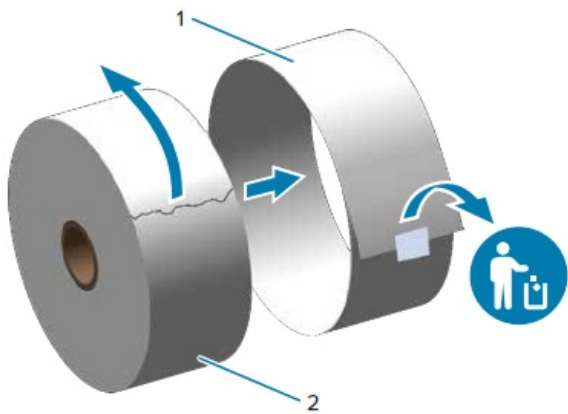

Unroll and discard the outer layer (1) of the media roll (2).

Spread the roll holders (2) open and place the roll (1) into the printer.



Verify the roll spins easily on the holder.

Pull the end of the roll past the front edge of the printer .




Press the media under the guides (1).

Adjust Sensor



Align the sensor (1) to the center of the roll for regular labels and receipts.

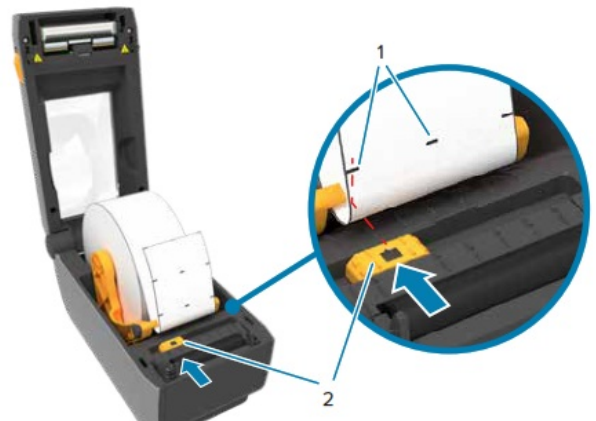


Align the sensor (2) to marks (1) away from the center of the roll for marked labels.

Close Printer




Press down on the front edge of the printer until it locks.

Connect Power

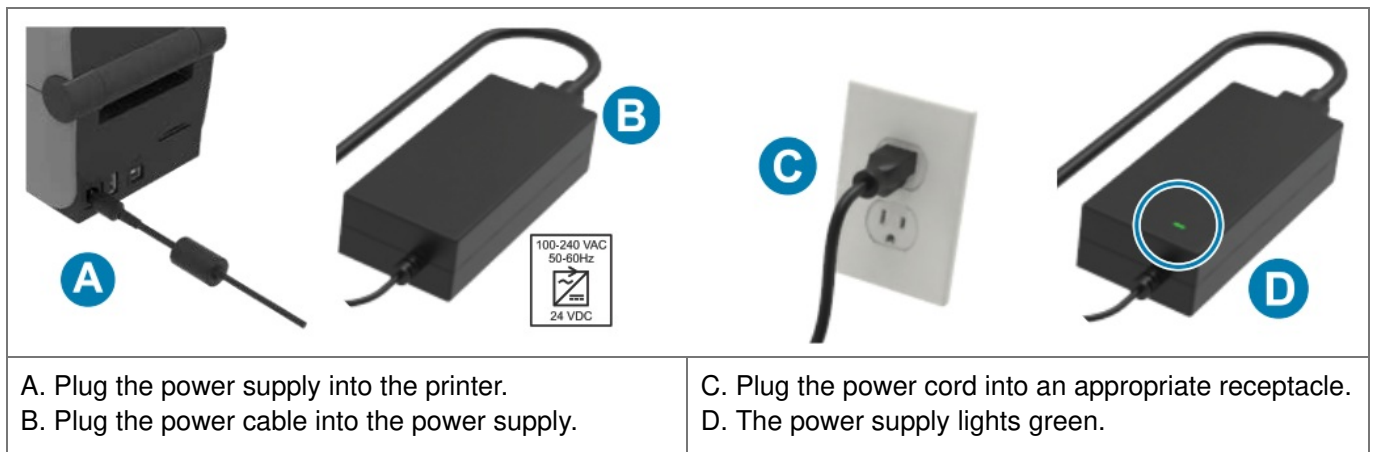

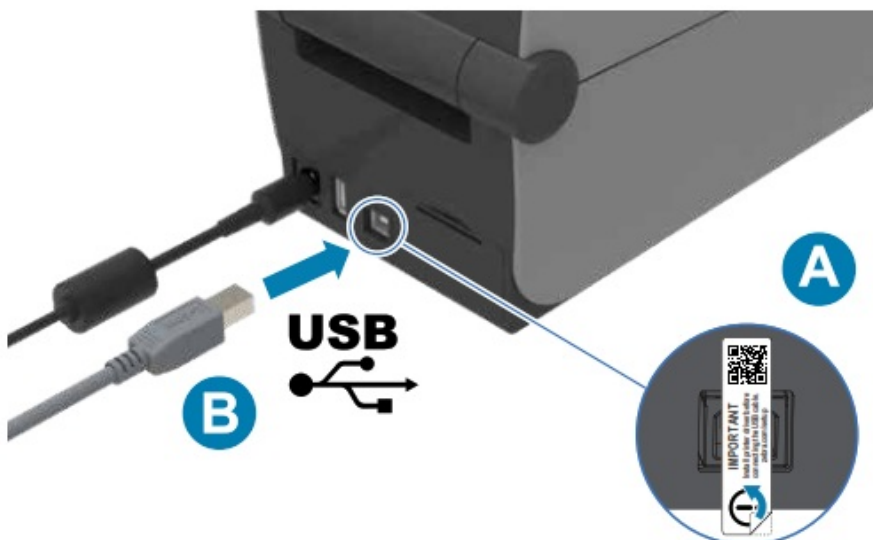

Connect USB



- A. Remove the port blocker label.
- B. Connect the USB cable to the printer and your computer.

Power On

	
<p>Press the power button (1).</p>	<p>When the the printer is ready, the printer status light (1) will turn green.</p>

Smart Calibration



Press and hold the Pause (1) and Cancel (2) buttons for two seconds to line up the labels.


Print Configuration Report




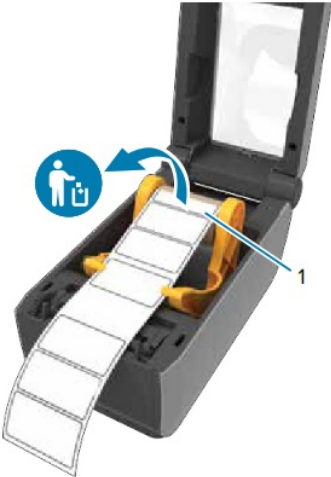
Press and hold the Feed (1) and Cancel (2) buttons for two seconds to print a configuration report.

Support and Information

 View user documentation and how-to videos.	 View Quick Answers and Knowledge Base.
	
zebra.com/zd411d-info	zebra.com/knowledge
 Need to design a label?	 Join Community Connection of Zebra users and ambassadors.
	
zebra.com/zebradesigner	zebra.com/supportcommunity
 Learn about genuine Zebra supplies.	 Contact Zebra about your printer.

	
zebra.com/supplies	zebra.com/contact
 Need to manage your printer?	 Need to secure your printer?
	
zebra.com/ppme	zebra.com/printsecure

Media Out

	
<p>When the media runs out, the printer and media status lights (1) will turn red.</p>	<p>Open the printer and discard the empty roll (1).</p>

Cleaning



Clean printhead (1) with a cleaning pen (2). Clean from the middle to the outside. The cleaning pen is only for cleaning a printhead.



ZEBRA

Zebra Technologies
3 Overlook Point
Lincolnshire, IL 60069 USA

zebra.com

ZEBRA and the stylized Zebra head are trademarks of Zebra Technologies Corp., registered in many jurisdictions worldwide.

All other trademarks are the property of their respective owners.

© 2022 Zebra Technologies Corp. and/or its affiliates. All rights reserved.







P1124844-01NA

Documents / Resources



[ZEBRA ZD411D Desktop Printer](#) [pdf] User Guide
ZD411D Desktop Printer, ZD411D, Desktop Printer, Printer

References

-  [Zebra Technologies | Visible. Connected. Optimized.](#)
-  [Contact Zebra | How to Buy, Support & Repair, Questions](#)
-  [Zebra Customer Community](#)
-  [PrintSecure | Zebra](#)
-  [Zebra Printer Setup Utility Support & Downloads | Zebra](#)
-  [Printing Supplies | Zebra](#)
-  [Zebra Customer Community](#)
-  [ZD411 Desktop Printer Support & Downloads | Zebra](#)
-  [ZebraDesigner | Zebra](#)

Manuals+.