

ZEBRA ZD621D Desktop Printer User Guide



ZEBRA

Contents

1 ZD621D

1.1 Desktop Printer

1.2 Quick Start Guide

1.2.1 1 Setup

1.2.2 2 Remove Packing

1.2.3 3 Load Media

1.2.4 4 Adjust Sensor

1.2.5 5 Close Printer

1.2.6 6 Connect Power

1.2.7 7 Connect USB

1.2.8 8 Power On

1.2.9 9 Smart Calibration

1.2.10 10 Print Configuration

Report

1.2.11 Media Out

1.2.12 Cleaning

1.2.13 Support and Information

2 Documents / Resources

2.1 References

ZD621D

Desktop Printer



Quick Start Guide

1 Setup



zebra.com/setup

Scan the code to download and install Zebra Setup Utilities.

2 Remove Packing




Slide the release latches to the front to unlock the cover.



Open the printer and remove the packing.

3 Load Media

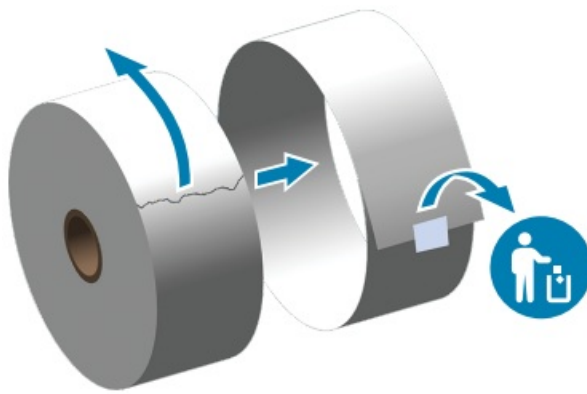

Unroll and discard the outer layer of the media roll.



Spread the roll holders open and place the roll into the printer.



Verify the roll spins easily on the holder.



Pull the end of the roll past the front edge of the printer.



Press the media under the guides.

4 Adjust Sensor



Align the sensor to the center of the roll for regular labels.



Align the sensor to the edge of the roll for marked labels.

5 Close Printer



Press down on the front edge of the printer until it locks.

6 Connect Power




- A. Plug the power supply into the printer.
- B. Plug the power cable into the power supply.



- C. Plug the power cord into an appropriate receptacle.
- D. The power supply lights green.

7 Connect USB

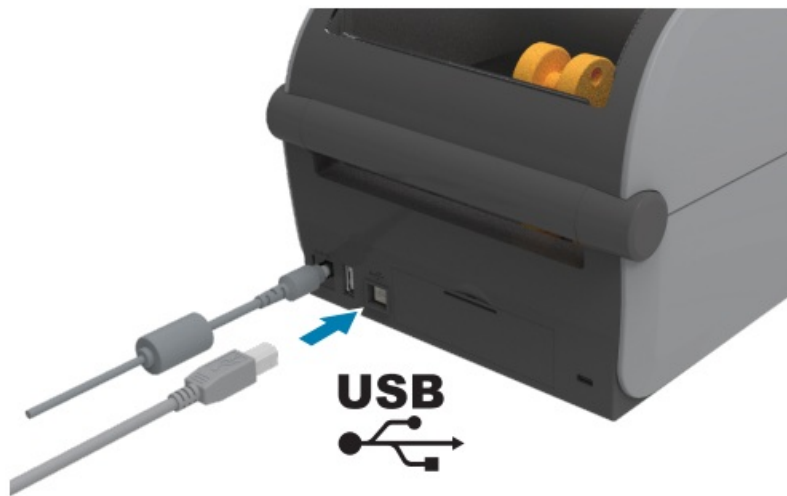

Connect a USB cable to the printer, connect the other end to your computer.

8 Power On



Press the power button.



When the printer is ready, the printer status light will turn green.

9 Smart Calibration



Press and hold the Pause and Cancel buttons for two seconds to line up the labels.

10 Print Configuration Report



Press and hold the Feed and Cancel buttons for two seconds to print a configuration report.



When the ribbon runs out, the printer and ribbon status lights will turn red.



Open the printer and discard the empty cartridge.



Clean printhead with a cleaning pen. Clean from the middle to the outside. Do not use a cleaning pen on the

platen.



Support and Information



Need to design a label?

zebra.com/zebradesigner



Need to manage your printer?

zebra.com/ppme



Need to secure your printer?

zebra.com/printsecure



View user documentation and how-to videos.

zebra.com/zd621d-info



Contact Zebra about your printer.

zebra.com/contact



Learn about genuine Zebra supplies.

zebra.com/supplies



ZEBRA



212397-102

Zebra Technologies | 3 Overlook Point | Lincolnshire, IL 60069 USA — zebra.com

ZEBRA and the stylized Zebra head are trademarks of Zebra Technologies Corp., registered in many jurisdictions worldwide. All other trademarks are the property of their respective owners. © 2020 Zebra Technologies Corp. and/or its affiliates. All rights reserved.



Documents / Resources

	ZEBRA ZD621D Desktop Printer [pdf] User Guide ZD621D Desktop Printer, Desktop Printer, Printer
	ZEBRA ZD621D Desktop Printer [pdf] User Guide ZD621D Desktop Printer, ZD621D, Desktop Printer, Printer

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.