



ZEBRONICS
ZEB-MLS755
Line Interactive
UPS System



ZEBRONICS ZEB-MLS755 Line Interactive UPS System User Manual

[Home](#) » [ZEBRONICS](#) » ZEBRONICS ZEB-MLS755 Line Interactive UPS System User Manual 

Contents

- [1 ZEBRONICS ZEB-MLS755 Line Interactive UPS System](#)
- [2 INTRODUCTION](#)
- [3 Important Safety Instructions](#)
- [4 UPS Installation Procedure](#)
- [5 Product Description](#)
- [6 LED Indication and Alarm](#)
- [7 Features](#)
- [8 Specifications](#)
- [9 Troubleshooting](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)
- [11 Related Posts](#)


ZEBRONICS

ZEBRONICS ZEB-MLS755 Line Interactive UPS System



INTRODUCTION

Dear Customer,

Thank you for purchasing the ZEBMLS755 UPS. Please read the user manual carefully before usage & save it for future reference.

Important Safety Instructions

- The voltages inside UPS may be hazardous. Do not attempt to disassemble the unit. The unit contains no user-serviceable parts. Only factory service personnel may perform repairs.
- The internal battery voltage is 12Vdc. sealed, lead-acid, battery.
- Connection to any other type of socket other than a two-pole, three-wire grounded socket may result in shock hazards as well as violation to local electrical codes.
- In the event of an emergency, press the OFF button and disconnect the power cord from the AC power supply to properly disable the UPS. Do not allow liquids or any external objects to enter the UPS. Do not place beverages or any other liquid-containing vessels on or near the unit.
- This unit is designed for installation in a controlled environment (temperature-controlled, indoor area free of conductive contaminants). Avoid installing the UPS in • Do not attach a power strip or surge suppressor to the UPS.
- Do not connect non-computer-related items, such as medical equipment, lifesupport equipment, microwave ovens, or vacuum cleaners to UPS.
- To reduce the risk of overheating the UPS, do not cover the UPS cooling vents and avoid exposing the unit to direct sunlight or installing the unit near heat-emitting appliances such as air heaters or furnaces.
- Unplug the UPS prior to cleaning and do not use liquid or spray detergent.
- Do not dispose the batteries into fire as they may explode. Do not open or mutilate the battery or batteries. Released electrolytes is harmful to the skin and eyes. It may be toxic.
- A battery can present a risk of electrical shock and high short circuit current. The following precautions should be observed when working on batteries:
 - **a)** Remove watches, rings, or other metal objects from the hands.
 - **b)** Use tools with insulated handles.

- **c)** Wear rubber gloves and boots.
- **d)** Do not lay tools or metal parts on top of batteries.
- Servicing of battery should be performed or supervised by technical and authorized personnel only.
- When replacing battery, replace with the same type of sealed lead-acid battery. The maximum ambient temperature rating is 40°C.

UPS Installation Procedure

- Your new UPS may be used immediately; however recharging the battery for atleast 8hours (no load) is recommended to ensure that the battery maximum charge capacity is achieved.
- Charge loss may occur during shipping and storage. To recharge the battery, simply leave the unit plugged into an AC outlet. The unit will charge in both the on and off position.
- With the UPS unit off and unplugged, connect the computer, monitor, and any externally powered data storage device (Zip drive, Jazz drive, Tape drive, etc.) into the battery power supplied outlets. DO NOT plug laser printer, copier, space heater, vacuum, paper shredder or other large electrical device into the battery power supplied outlets. The power demands of these devices will overload and possibly damage the unit.
- Press the power switch to turn the unit ON. The power on indicator light will illuminate and the unit will “beep”.
- If an overload is detected, an audible alarm will sound and the unit will emit beep once every 0.5 seconds. To correct this turn the UPS off and unplug atleast one piece of equipment from the battery power supplied outlets. Wait 10 seconds Make sure the fuse is normal and then turns the UPS on.
- To maintain optimal battery charge, leave the UPS plugged into an AC outlet at all times.
- To store your UPS for an extended period, cover it and store with the battery fully charged. Recharge the battery every three months to ensure battery life.

Product Description



Front Panel

1. Power Switch
2. LED Indicators

AC Mode: Green LED Glow

Battery Mode: Orange LED blinks

Fault Mode: Red LED Glow

Back Panel:

3. AC input
4. Output Sockets
5. Input Fuse

Power On/Off (AC mode)

To turn on the UPS unit, press the power switch lightly. To turn off the UPS unit, press the power switch again

Power On/Off (Battery mode)

To start the UPS when AC utility power is

LED Indication and Alarm

Condition	Indication	Alarm
Normal	Green LED Glows	
Battery Discharge	Orange LED blinks	Beep once every 10 seconds
Battery Low	Red LED Glow and Orange LED flashing	Beep once every 1 second
Overload	Orange LED flashing	Beep once every 0.5 seconds
Fault	Red LED Glow	Continuous alarm

Features

- Line interactive UPS
- Auto restart while AC is recovering Double Boost
- Automatic Voltage Regulation (AVR) Wide Input Range

Specifications

Capacity	(VA/W)	600VA/360W
Input	Nominal voltage	220-240 VAC
	Voltage range	140-300VAC
	Frequency	50/60 Hz
	Plug type	3 Pin plug
	Input Protection	Internal Fuse
Output	Voltage Range (AC mode)	230VAC \pm 10 %
	Voltage Range (Batt. Mode)	230VAC \pm 10 %
	Frequency Range (Batt. Mode)	50/60Hz \pm 1%
	Transfer time	4-8ms
	Waveform	Simulated Sine Wave
	No. of output sockets	3
	Protections	Overload, Short Circuit, Over Discharge & Over Charge
	Battery type	12V 7Ahx1 nos

Battery	Charging current	1A
	Recharge Time	6-8H to charge 90% (after complete discharge)
Indicators	No. of LEDs	3 LED
	AC mode	Green LED Glows
	Battery mode	Orange LED blinks
	Fault mode	Red LED Glow
Alarm	Battery mode	Beeping every 10 Secs.
	Low battery	Beeping every 1 Sec.
	Overload	Beeping every 0.5 sec.
	Fault	Continuous beeping
Physical details	Dimension	10.5 x 27.6 x 14.4 cm (Wx D x H)
	Net. weight	3.9 kg
	Package dimension	32.6 x 14.2 x 21.3 cm (WxDxH)
Environmental factors	Operational temperature	0-40°C
	Noise level	<45dB

Troubleshooting



Problem	Possible Cause	Solution
No LED Indicator on the front panel	Battery weak	Charge battery up to 8 hours
	Battery defect	Replace with the same type of battery
	Power switch is not pressed	Press the power switch again
Alarm buzzer beeps continuously when AC supply is normal	Overload of the UPS	Verify that the load matches the UPS capability specified in the specs
When power failure, back-up time is shorten	Overload of the UPS	Remove some non-critical load
	Battery voltage is too low	Charge battery 8 hours or more
	Battery defect due to high temperature operation environment, or improper operation to battery	Replace with the same type of battery
Mains normal but Battery Mode indicator orange LED is flashing (for LED model)	Power cord is loose	Reconnect the power cord properly

If any abnormal situations occur that are not listed above, please call service person immediately.

ISO 9001:2015 Certified Company

www.zebronics.com

Documents / Resources

  <p>ZEBRONICS ALWAYS AHEAD Uninterruptible Power Supply MLS755 POWERUP Uninterruptible Power Supply MLS755 User Manual www.zebronics.com</p>	<p>ZEBRONICS ZEB-MLS755 Line Interactive UPS System [pdf] User Manual ZEB-MLS755 Line Interactive UPS System, ZEB-MLS755, Line Interactive UPS System, Interactive UPS System, UPS System</p>
--	---

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.