



Home » ZENDURE » ZENDURE DO Smart Meter User Manual 172



ZENDURE D0 Smart Meter User Manual



Smart Meter D0 User Manual

Please scan the QR code to visit the Zendure Help Center or claim the product warranty.



https://zendure.com/pages/zendure-global-warranty

Scan the QR code to access the complete user manual.



https://zendure.com/pages/zendure-download-center



EU Importer: Zendure DE GmbH

Address: Rheinallee 1,40549 Düsseldorf

E-mail: support@zendure.com

Phone: 0049-800-627-3067

Zendure USA Inc.

ZENDURE TECHNOLOGY CO., LIMITED

Hours: Mon - Fri 9:00 - 17:00 Pacific

Phone: 001-800-991-6148 (US)

0049-800-627-3067 (DE)

Support / Contact:

https://zendure.de/pages/contact

https://eu.zendure.com/pages/contact-us

https://zendure.com/pages/contact

Website:

https://zendure.de

https://eu.zendure.com

https://zendure.com

Manufacturer: Zendure Technology Co., Limited

Address: Office 92, 15th Floor, Lee Garden Two,

28 Yun Ping Road, Causeway Bay, Hong Kong

© 2025 Zendure USA Inc.All Rights Reserved.

Printed on recycled materials. Made in China



Disclaimer

Read all safety guidelines, warnings and other product information in this manual

carefully, and read any labels or stickers attached to the product before using. Users take full responsibility for the safe usage and operation of this product. Familiarize yourself with relevant regulations in your area. You are solely responsible for being aware of all relevant regulations and using Zendure products in a way that is compliant. Keep this manual for future reference.

Contents [hide]

- 1 Safety Instructions
 - 1.1 Usage
 - 1.2 EC DECLARATION OF CONFORMITY
- 2 What's in the Box
 - 2.1 Product Overview
 - 2.2 Reset/Restart
 - 2.3 LED Display
- 3 Installation
- 4 Zendure App Setup
- 5 Technical Specifications
- 6 Documents / Resources
 - 6.1 References

Safety Instructions

Usage

- 1. Before accessing the meter cabinet, carefully inspect the meter and surrounding area for any hazards, such as loose cables, exposed copper, or other objects that could cause electrical shock. If you identify any of these risks, halt the installation of our product immediately and contact a licensed electrician.
- 2. Please check the product for any damage before using. If any issues are found, stop using the product and contact our customer service.
- 3. Do not disassemble the product by yourself. If the product is not functioning properly, please contact our customer service.
- 4. The device is NOT waterproof. If the product accidentally falls into water during use, it should not be used again.

5. The device should be kept out of reach for children and persons with limited perception.

EC DECLARATION OF CONFORMITY

ZENDURE TECHNOLOGY CO., LIMITED declares that the device complies with directive 2014/53/EU (RED), 2011/65/EU(RoHS), 2015/863/EU(RoHS). The full text of the Declaration of Conformity is available at the following web address:

https://zendure.de/pages/download-center



The EU Declaration of Conformity can be requested at this address:

https://zendure.de/pages/download-center




Disposal and Recycling

Disposal of packaging: dispose of the packaging separately by type of material.



negative impact on the environment, electronic devices must be taken to an appropriate collection site. For this reason, electronic devices are marked with the symbol shown to the left.

What's in the Box

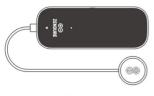

Smart Meter D0 Reader



Smart Meter Bridge



User Manual




2 AA batteries (placed inside the DO Reader)

Product Overview



- 1. Optical port
- 2. USB-C Port
- 3. Indicator
- 4. AA battery compartment
- 5. Indicator of Bridge
- 6. Button
- 7. Bridge Plug

Reset/Restart

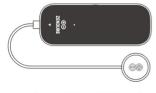

Smart Meter D0 Reader



Smart Meter Bridge



User Manual



2 AA batteries (placed inside the D0 Reader)

LED Display

Product	Signal	Meaning	
D0 Reader	Fast blinking	During startup process and ready to pair with Bridge No signal received from the Linky meter or incorrect signal received.	
	Slow blinking	Correct signal received	
	Light off	Hardware malfunction or no power	
	Green fast blinking	During startup process During network pairing process	
Duidene	Green steady light	Network pairing successful, device working normally	
Bridge	Red fast blinking	Device malfunction, such as connection interruption with router/connection interruption with TIC Reader/operational failure	
	Light off	Hardware malfunctions or there is no power.	


Installation

1. Obtaining the PIN Code of the Electricity Meter

- (1) Check the display screen of the electricity meter. If the real-time power in watts is displayed on the second line, it means the interface is open.
- (2) If this data is not displayed on the screen, you need to obtain a 4-digit PIN code from your electricity meter operator via email or phone (you can find their contact information on your old bill) to activate the optical interface of the electricity meter so that it can transmit real-time active power data.

2. Entering the PIN Code into the Meter

- 1. Confirm the Input Method: Check the meter's surface to identify the PIN entry method (button/optical interface).
 - Meter with a button: Briefly press the button (<2s) to enter the PIN.
 - Meter without a button: Use your phone's flashlight to shine short light pulses (<2s) on the optical interface.

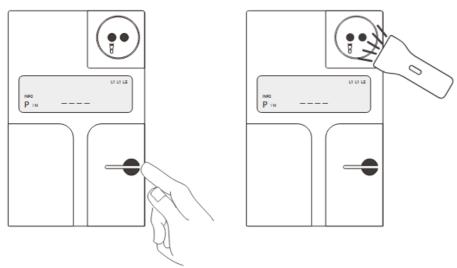


2. Enter PIN input mode: Briefly press the button or send short light pulses (<2s) to access the PIN entry interface.



- 3. Enter the PIN code:
 - The meter will indicate the current input position by displaying "0" or flashing.
 - Each digit must be entered by sending the corresponding number of light pulses or button presses. For example, to enter "3," send 3 short light pulses or

press the button 3 times.


• After entering one digit, wait briefly until the next digit position activates. Then repeat the process for the remaining digits.

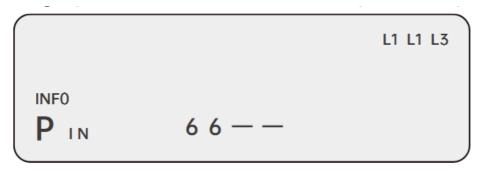

3. Activate the Menu


Once the PIN is successfully entered, the meter's display menu will be activated. Follow these steps to configure the settings:

- 1. Enable the Info Option
 - Use short button presses or brief light pulses (<2s) to navigate the menu until you locate the "Info OFF" option (typically in the bottom-left corner).
 - Switch it to "Info ON" by holding the button or using a prolonged light pulse (>3s).

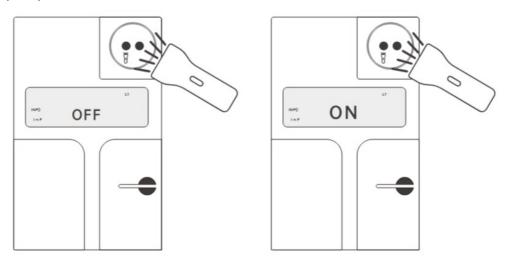

2. Disable PIN Lock

• Find the "PIN ON" option and similarly use a long press or sustained light pulse (>3s) to set it to "PIN OFF".

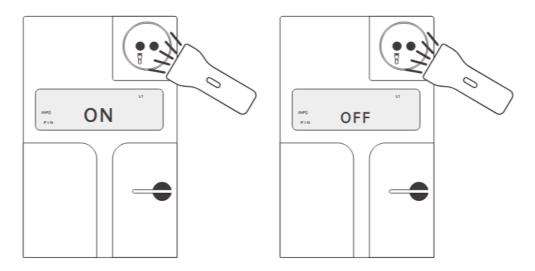

3. Success Verification:


• After completing the setup, the system will return to the main screen. Now, in addition to the meter reading, the second line will display real- time power consumption (in watts).



4. Prepare the Reader

- 1. Open the Reader's top cover and locate the two included AA batteries.
- 2. Remove the protective film from the batteries.

Note: If your meter has a nearby power outlet, we recommend using USB-C to power the Reader to avoid future battery replacements.

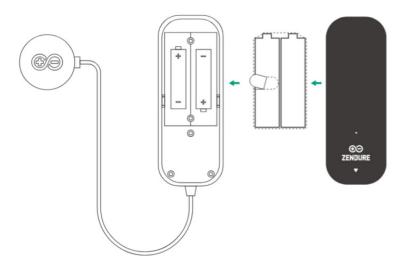


5. Install the D0 Reader

- 1. Align the Optical Interface
 - Position the D0 Reader's optical interface directly onto the meter's optical interface.
 - Note: Improper alignment may prevent data reading. If issues occur, try rotating the optical interface counterclockwise, wait 30 seconds, then recheck the data in the app.

2. Secure the Reader

- Peel off the 3M adhesive backing on the D0 Reader.
- Firmly attach the Reader to the side or top of the meter using the adhesive.

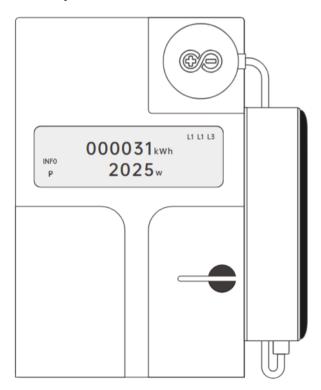

6. Power On the Bridge

- 1. Plug the Bridge into a power socket.
- The LED indicator will flash rapidly, confirming it's in pairing mode.
 Note: For optimal performance, place the Bridge between the P1 Reader and your wireless router to ensure strong signal reception and reliable data forwarding.

Zendure App Setup

- 1. To download the Zendure app, scan the QR code or search "Zendure" in the Apple App Store® or Google Play Store.
- 2. Open the Zendure app. Log In or sign up.

- 3. Follow the in-app instructions to add your device.
- 4. Please update the firmware to the latest version in the settings before using.





https://app.zendure.com/download/

Technical Specifications

Paremeter	Smart Meter D0		
Device Name	D0 Reader	Bridge	
Input Voltage	Input Voltage(USB-C): 5V DC Input Voltage(AA Batteries): 3V DC	AC 100~240V, 50/60Hz	
Rated power	1W Max	3W Max	
Lora	Frequency: 803MHz~930MHz	1	
Lord	Maximum Transmit Power: 20.0 dBm		
	I	Protocol: Bluetooth 5.0	
Bluetooth		Frequency: 2402-2480MHz	
		Maximum Transmit Power: 20.0 dBm	
	1	Protocol: 802.11 b/g/n	
Wi-Fi		Frequency: 2412-2472MHz	
		Maximum Transmit Power: 20.0 dBm	
Operation Temperature		-20°C -50°C	
Product Size	37*98.47*26mm	42.92*42.92*71.49mm	

Documents / Resources



ZENDURE D0 Smart Meter [pdf] User Manual

D0 Smart Meter, Smart Meter, Meter

References

- User Manual
 - D0 Smart Meter, Meter, Smart Meter,
- ZENDURE ZENDURE

Leave a comment

Comment *
Name
Email
Website
website
☐ Save my name, email, and website in this browser for the next time I comment.
Post Comment
Search:
e.g. whirlpool wrf535swhz
Search
Manuals+ Upload Deep Search Privacy Policy @manuals.plus YouTube

Your email address will not be published. Required fields are marked *

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.