

ZEPHYR BWN15C01 AG Brisas By Zephyr Wine Cooler



BWN15C01AG Brisas By Zephyr Wine Cooler Installation Guide

[Home](#) » [ZEPHYR](#) » BWN15C01AG Brisas By Zephyr Wine Cooler Installation Guide 

Contents

- [1 BWN15C01AG Brisas By Zephyr Wine Cooler](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 General Safety](#)
- [5 Frequently Asked Questions](#)
- [6 Safety Information](#)
- [7 Introduction](#)
- [8 List of Materials](#)
- [9 Product Specifications](#)
- [10 Installation Instructions](#)
- [11 Operating Your Appliance](#)
- [12 Care and Maintenance](#)
- [13 Troubleshooting](#)
- [14 Limited Warranty](#)
- [15 Product Registration](#)
- [16 Documents / Resources](#)
 - [16.1 References](#)
- [17 Related Posts](#)

ZEPHYR



Product Information

Specifications

- **Model:** BWN15C01AG
- **Type:** Single Zone Wine Cooler
- **Brand:** Brisa

Product Usage Instructions

Safety Information

It is essential to follow these safety guidelines to ensure the safe operation of the wine cooler.

General Safety

- **DANGER:** Always follow basic precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.
- **WARNING:** Before servicing, unplug the appliance to reduce the risk of fire, electric shock, or personal injury.
- **CAUTION:** Handle the appliance carefully to avoid damage to refrigerant tubing or leaks. Use the appliance only as described in the manual to prevent fire or injury.
- Do not immerse the unit, or cord, or plug in water or any other liquid to prevent electric shock.
- Always unplug the appliance before cleaning or moving it.

Operating Instructions

1. Read all instructions in the manual carefully before using the wine cooler.

2. To disconnect the appliance, grip the plug and pull it from the wall outlet; never pull by the cord.
3. Avoid operating the appliance near explosive or flammable fumes.
4. Keep the appliance away from open flames, cooking appliances, or any heat sources.
5. If the cord or plug is damaged, do not operate the appliance.
6. Do not use attachments not recommended by the manufacturer.
7. Do not operate the appliance if the housing is removed or damaged.
8. Ensure a secure fit between the AC outlet and plug to prevent overheating.

Frequently Asked Questions

Q: Can I use this wine cooler for beverages other than wine?

A: This wine cooler is designed specifically for storing wine at optimal temperatures. It is not recommended for other beverages.

Q: How should I clean the wine cooler?

A: Unplug the appliance before cleaning. Use a mild detergent and a soft cloth to wipe the interior and exterior surfaces. Avoid using abrasive cleaners that may damage the cooler.

Q: What is the recommended temperature setting for storing wine?

A: The ideal temperature for storing wine in this cooler is typically between 45-65°F (7-18°C), depending on the type of wine.

Safety Information

- Your safety and the safety of others are very important.
- We have provided many important safety messages in this manual for your appliance. Always read and obey all safety messages.



- This is the Safety Alert Symbol. This symbol alerts you to potential hazards that can cause severe bodily injury or death. All safety messages will follow the Safety Alert Symbol and either the words “DANGER” “WARNING” or “CAUTION”



- **DANGER** Danger means that failure to heed this safety statement may result in severe injury or death.



- **WARNING** Warning means that failure to heed this safety statement may result in extensive product damage, serious personal injury, or death.



- **CAUTION** Caution means that failure to heed this safety statement may result in minor or moderate personal injury, or property or equipment damage.
- For your safety, read all instructions carefully before operating the appliance.

General Safety

- **DANGER** When using an electrical appliance, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons.
- **WARNING** To reduce the risk of fire, electric shock, or personal injury, unplug or disconnect the appliance from the power supply before servicing.
- **CAUTION** Flammable refrigerant used! When handling, moving, and use of the refrigerator, make sure to avoid either damaging the refrigerant tubing or increasing the risk of a leak.
- Use this appliance only as described in this manual. Other uses not recommended may cause fire, electric shock, or personal injury.
- This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely.
- Young children should be supervised to ensure that they never play with the appliance.
- To protect against the risk of electric shock, NEVER IMMERSE the unit, or cord, plug in water, or spray any other liquid.
- Unplug the appliance from the plug socket when not in use, when moving from one location to another, and before cleaning.
- For your safety, read all instructions carefully before operating the appliance.
- To disconnect the appliance, grip the plug and pull it from the wall outlet. Never pull by the cord.
- Never operate the appliance in the presence of explosive and/or flammable fumes.
- Never place the appliance or any of its parts near an open flame, cooking, or other heating appliance.
- Never operate the appliance with a damaged cord or plug, if the product malfunctions, or if it is dropped or damaged in any manner.
- The use of attachments not recommended by the manufacturer may be hazardous.
- Never operate if the housing is removed or damaged.
- A loose fit between the AC outlet (receptacle) and plug may cause overheating and a distortion of the plug. Contact a qualified electrician to replace loose or worn outlets.
- **WARNING** Prop. 65 Warning for California Residents: This product may contain chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm.
- Locate the unit away from direct sunlight and sources of heat (stove, heater, radiator, etc.).
- This appliance is CFC and HFC-free and contains small quantities of Isobutane (R600a), an environmentally friendly coolant.
- You must ensure that the cooling circuit is undamaged when installing the appliance. However, if it becomes damaged, avoid proximity to open fires and heat sources of all kinds.
- The room in which the appliance is located should be ventilated properly and according to state and local codes.
- Never use an appliance with a damaged circuit.
- Ensure that the ventilation openings to and from a built-in appliance are never blocked or covered.
- No liability will be accepted for any damage caused by misuse of the appliance, or as a result of repairs carried out by an unqualified person. In this case, neither the warranty nor any other liability claims will apply.
- For your safety, read all instructions carefully before operating the appliance.
- **WARNING** Never operate any other electrical appliance inside this appliance.
- Never attempt to repair or replace any part of your appliance unless it is specifically recommended in this manual. All other servicing should be referred to a qualified technician.
- Replace all access panels before operating.

- Use two or more people to move and install the appliance. Failure to do so can result in back or other injury.
- Never clean appliance parts with flammable liquids. These fumes can create a fire hazard or explosion. Never store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- The fumes can create a fire hazard or explosion.
- Never connect or disconnect the electric plug with wet hands.
- It is recommended that a separate circuit, serving only your appliance be provided. Use receptacles that cannot be turned off by a switch or pull chain.
- **WARNING** To reduce the risk of fire, electric shock, or personal injury, unplug or disconnect the appliance from the power supply before servicing.
- For your safety, read all instructions carefully before operating the appliance.

Save These Instructions

- If you are experiencing problems, check the Troubleshooting Guide at the back of this manual. It lists causes of minor operating problems that you can correct yourself.

Disposal of Old Appliance

- Dispose of your appliance packaging properly. Refrigeration equipment must be properly disposed of in a way that protects the environment. This applies to your old appliance and your new unit once it has reached the end of its service life.
- **WARNING** Please ensure that old, worn appliances are rendered unusable before disposal by removing the plug, cutting the power cable, and removing or destroying any snap fastenings or bolts.
- You will thus prevent children from locking themselves in the appliance during play (risk of suffocation) or endangering their lives in any other way.
- The appliance must not be disposed of with normal household waste collection.
- The coolant circuit, particularly the heat exchange at the back/bottom of the unit, must not be damaged.



- The symbol on the product or its packaging indicates that this product is not to be handled as normal household waste but is to be taken to a recycling collection point for electrical and electronic goods.
- By correctly disposing of this product you are contributing to the protection of the environment.
- Improper disposal endangers health and the environment. Further information about the recycling of the product may be obtained from your town hall or local waste collection department.
- For your safety, read all instructions carefully before operating the appliance.

Before Using Your Appliance

- Remove all exterior and interior packing.
- Before connecting the appliance to the power source, let it stand upright for approximately 2 hours.
- This will reduce the possibility of a malfunction in the cooling system caused by handling during transportation.
- Clean the interior surface with warm water using a soft cloth.
- The door on this appliance can be opened from either the left or the right side.
- The unit is delivered with the door opening on the left side. Should you wish to open the door from the right, follow the instructions, "Reversing the Door Swing of your Appliance," listed below.

Installation of Your Appliance

- **WARNING** Do not store or install the appliance outdoors.
- The appliances are designed for either built-in or free-standing installation.
- Place your appliance on a floor that is strong enough to support it when it is fully loaded. To level your appliance, adjust the 4 legs until level.
- Locate the appliance away from direct sunlight and sources of heat (stove, heater, radiator, etc.). Direct sunlight may affect the acrylic coating and heat sources may increase electrical consumption.
- Extreme cold ambient temperatures may also cause the unit not to perform properly.
- Never place the unit in damp areas.
- Plug the appliance into an exclusive, easily accessible electrical socket.
- Any questions concerning power and/or electrical connection should be directed towards a qualified electrician or an authorized products service center.
- The air vent at the front of the appliance must never be covered or blocked in any way.
- For your safety, read all instructions carefully before operating the appliance.
- The appliance must be installed to all electrical connections under state and local codes.
- Use two or more people to move and install the wine cooler. Failure to do so can result in back or other injury.
- The cooler may experience decreased cooling efficiency if the airflow is restricted due to a fully loaded cabinet.
- Install the wine cooler in a well-ventilated area where the ambient temperature is above 50°F and below 90°F.

Attention

- Never overload the cabinet.
- Never open the door unless necessary.
- Never cover shelves with aluminum foil or any other shelf material that may prevent air circulation.
- Should the appliance be left empty for long periods, it is suggested that the appliance be unplugged, and, after careful cleaning, leave the door ajar to allow air to circulate inside the cabinet to avoid possible condensation, mold, or odors from forming.
- For your safety, read all instructions carefully before operating the appliance.

Electrical Connection

- Check that the voltage marked on the product corresponds with your supply voltage.
- **WARNING** Improper use of the grounded plug can result in the risk of electrical shock. If the power cord is damaged, have it replaced by a qualified electrician or an authorized service center.
- This appliance should be properly grounded for your safety. The power cord of this appliance is equipped with a three-pin plug which mates with standard three-pin wall outlets to minimize the possibility of electrical shock.
- Never under any circumstances cut or remove the third ground prong from the power cord supplied. For personal safety, this appliance must be properly grounded.
- Have the wall outlet and circuit checked by a qualified electrician to make sure the outlet is properly grounded.
- When a standard two-pin wall outlet is encountered, it is your responsibility and obligation to have it replaced with a properly grounded three-pin wall outlet.
- To prevent accidental injury, the cord should be secured behind the appliance and not left exposed or dangling.

- The appliance should always be plugged into its own individual electrical outlet which has a voltage rating that matches the rating label on the appliance.
- This provides the best performance and also prevents overloading wiring circuits that could cause a fire hazard from overheating. Never unplug the appliance by pulling the power cord. Always grip the plug firmly and pull straight out from the receptacle.
- Repair or replace immediately all power cords that have become frayed or otherwise damaged. Never use a cord that shows cracks or abrasion damage along its length or at either end. When moving the appliance, be careful not to damage the power cord.
- Never use your appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service person.
- The extension cord must be a UL/CUL-listed, 3-wire grounding extension cord that has a grounding plug and outlet and the electrical rating of the cord is 115 volts and at least 10 amperes.

Introduction

- Thank you for purchasing your Zephyr wine cooler. Zephyr is dedicated to developing products that will enhance your lifestyle with superior quality and distinctive features.
- Please visit www.brisasbyzephyr.com for more information on your product and other Zephyr products.
- This manual contains important information regarding the proper installation, use, and maintenance of your wine cooler. Following this manual will ensure that your product will work at its peak performance and efficiency.










For Your Records

- Please write down the model number and serial number below for future reference. Both numbers are located on the rating label on the back of your unit and are needed to obtain warranty service.
- You may also want to staple your receipt to this manual as it is the proof of your purchase and may also be needed for service under warranty.
- **Model Number:**_____
- **Serial Number:**_____
- **Date of Purchase:**_____

To better serve you, please do the following before contacting customer service:

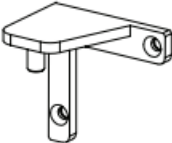- If you received a damaged product, immediately contact the retailer or dealer that sold you the product.
- Read and follow this instruction manual carefully to help you install, use, and maintain your wine cooler.
- Read the troubleshooting section of this manual as it will help you diagnose and solve common issues.
- Visit us on the web at <http://www.brisasbyzephyr.com> to download product guides, additional troubleshooting resources, and up-to-date information.
- If you need warranty service, our friendly customer service representatives are available on our website at <http://brisasbyzephyr.com>.

List of Materials

| Quantity | Part |
|---|---|
|  | Door handle |
|  | Door handle screws (M4*30) (pre-installed) |
|  | Flat washers ($\Phi 4.3 \times \Phi 8 \times 0.5$, M4) (pre-installed) |
|  | Spring washers ($\Phi 4 \times 1.1$, M4) (pre-installed) |
|  | Reversible door hinge bracket |
|  | Screws (M4*12) |
|  | Door stopper |
|  | Self-tapping screws (ST3*16) |
|  | Black decorative covers |

Product Specifications


Product Summary

This appliance requires a standard 115/120 Volt AC~60Hz electrical ground outlet.


| | |
|--|---|
| DESCRIPTION OF PRODUCT | Single Zone Wine Cooler |
| MODEL | BWN15C01AG |
| VOLTAGE/FREQUENCY | AC 115/60Hz |
| AMPERAGE | 1.5A |
| COLOR | Black Cabinet with Stainless Steel Door |
| STORAGE CAPACITY* | (28) 750ml bottles |
| REFRIGERANT | R600a |
| TEMPERATURE RANGE | 40°F – 65°F |
| DIMENSIONS (HxWxD) | 33-7/8" X 15" X 23-3/8" |
| GROSS WEIGHT (lb) | 106lb |
| OPTIONAL PRO HANDLE ACCESSORY | PRHAN-C001 |
| OPTIONAL CONTEMPORARY HANDLE ACCESSORY, BRUSHED GOLD | PRHAN-C102 |
| OPTIONAL CONTEMPORARY HANDLE ACCESSORY, MATTE BLACK | PRHAN-C104 |
| REPLACEMENT CARBON FILTER | Z0F-C004 |

Storage capacity is based on standard 12 oz. cans and 750 ml. Bordeaux-style wine bottles.

 
Internal Storage

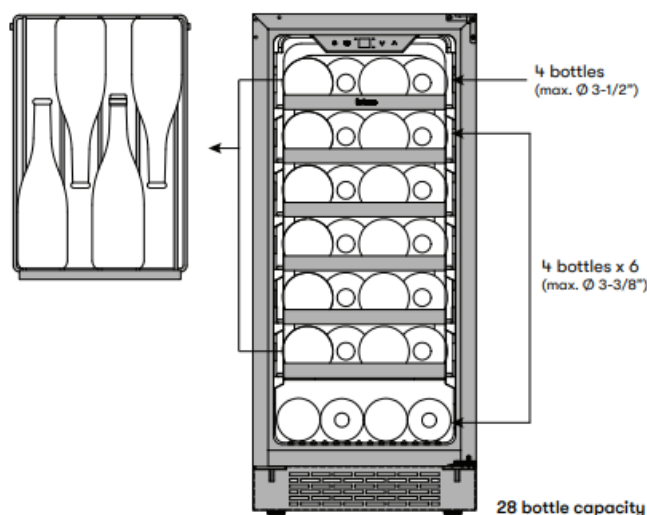

Parts Identification

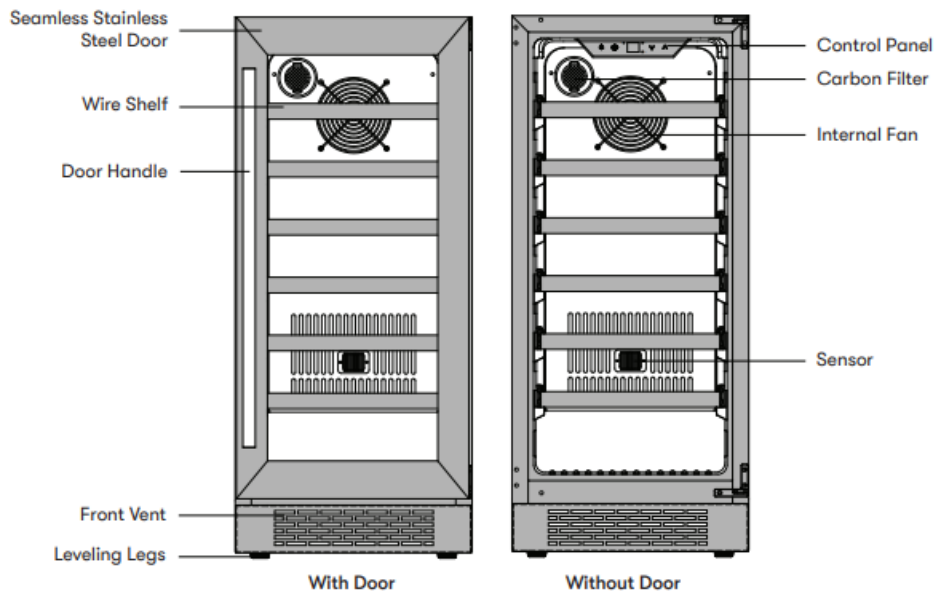 


Dimensions

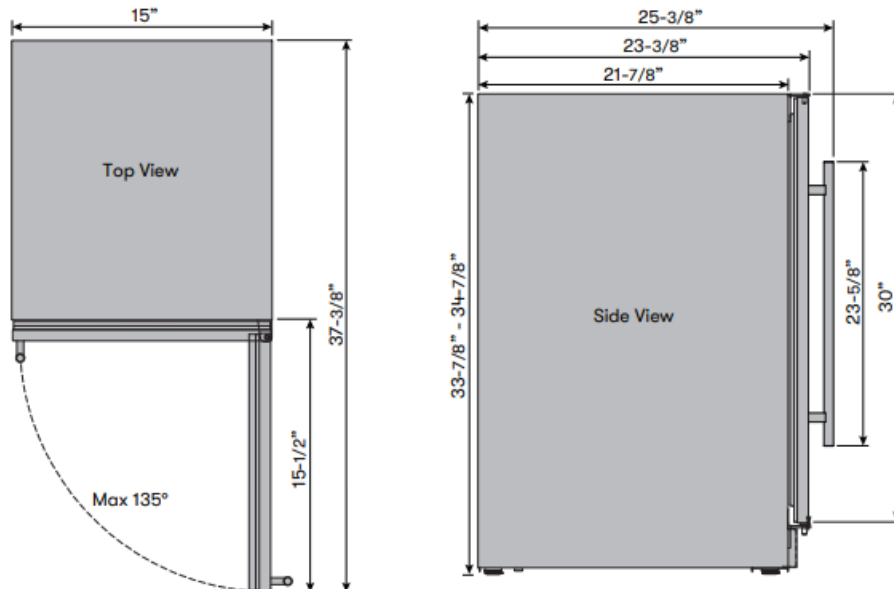 

Installation Instructions

Installation Clearance Requirements

 - When installing the wine cooler under a counter, follow the recommended spacing dimensions shown.
- For proper clearance of the electrical plug, allow at least 1" of clearance at the back as shown in the diagram.
- An installation next to a wall will require a minimum 2-1/4" door clearance to accommodate the Brisas handle.
- The cabinet should allow at least 15-1/8" for the width and 34" for the height to accommodate the wine cooler.
- The power cable is located on the back right of the unit and has a length of 72" to accommodate multiple outlet locations.
- Once you are ready to install the unit, you must adjust the feet to level the wine cooler.
- The installation should allow the unit to be pulled forward for servicing, if necessary.

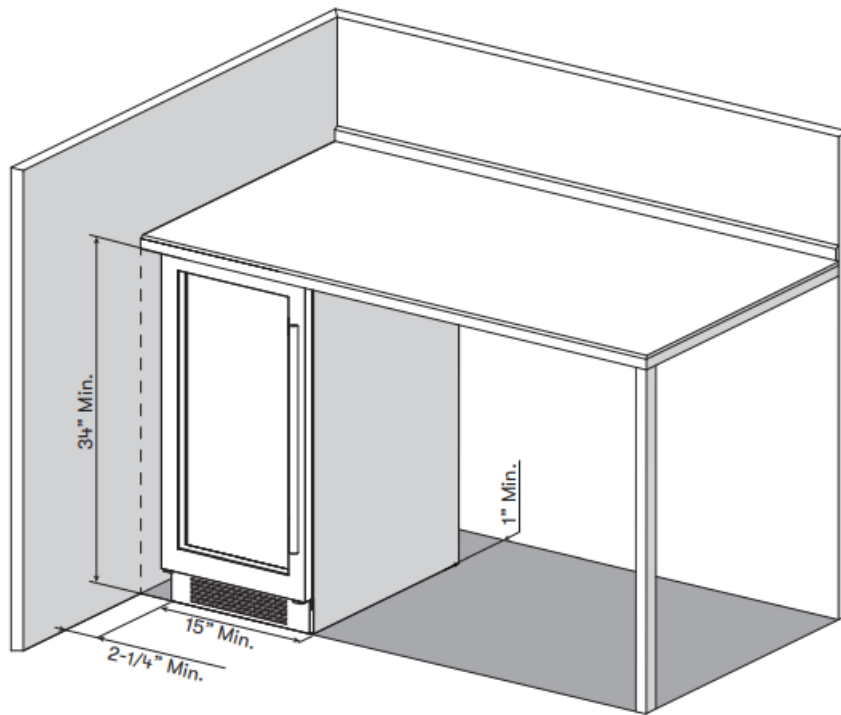


Carbon Filter


- A built-in carbon filter protects your wine by acting as a natural barrier against harmful odors. The carbon filter should be replaced every 3-6 months depending on the unit's exposure level to odor.
- If the unit is placed in a kitchen, regular replacement every three months is ideal.
- Remove the carbon filter by turning counterclockwise to unlock from the rear panel.
- **Carbon Filter Replacement Part #: Z0F-C004**

Installing the Handle

 If a pro handle or different colored contemporary handles are desired, refer below for the handle dimensions and part number.

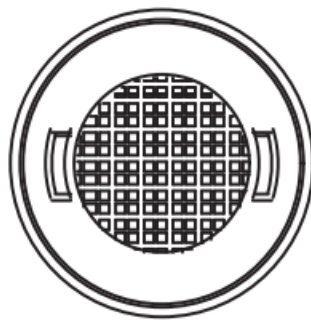


 1. Push aside the door gasket on the side you wish to install the handle. Under the gasket, you will see two designated holes for handle installation and pre-installed screws.
2. Install the handle tightly as shown with two screws, lock washers, and flat washers pre-installed.

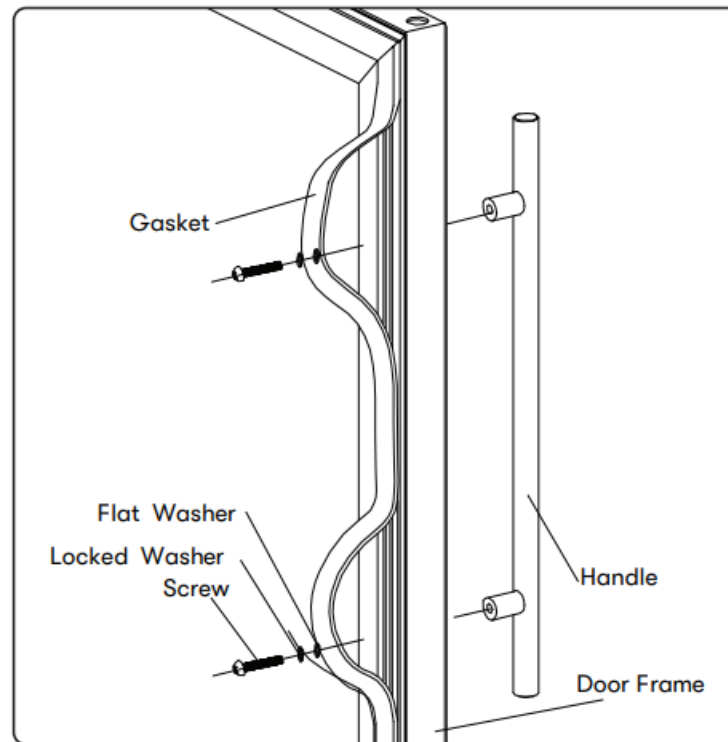


Zephyr Presrv Contemporary Handles

 - **Part #:** PRHAN-C101 Color: Stainless Steel (included)
- **Part #:** PRHAN-C102 Color: Brushed Gold
- **Part #:** PRHAN-C104 Color: Matte Black



Zephyr Presrv Pro Handle

 
- **Part #:** PRHAN-C001 Color: Stainless Steel




Reversing the Door Swing of Your Appliance

Should you desire to reverse the opening direction of the door, please follow the instructions below. Safely reversing the door swing of your appliance should require at least two people.

 
1. Take out the 2 screws from the lower door axis (1), remove the door (2), and the axis plate (1) from the door.

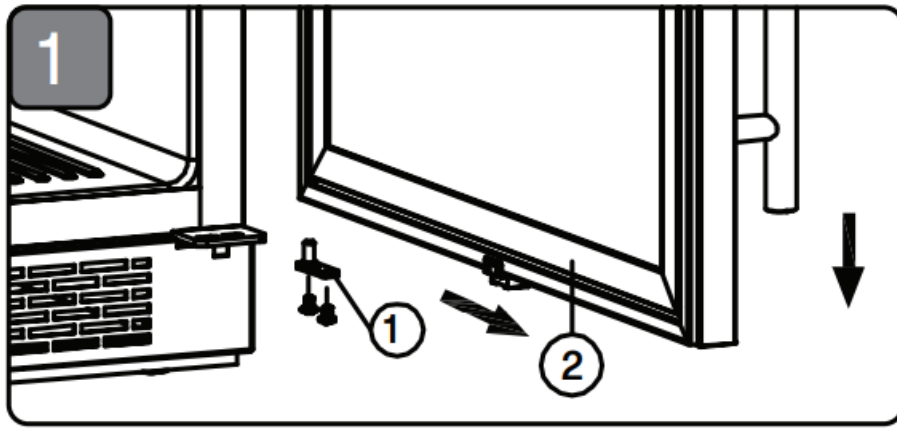

 2. Take out the 3 hinge screws from the top right hinge (3) and remove it.

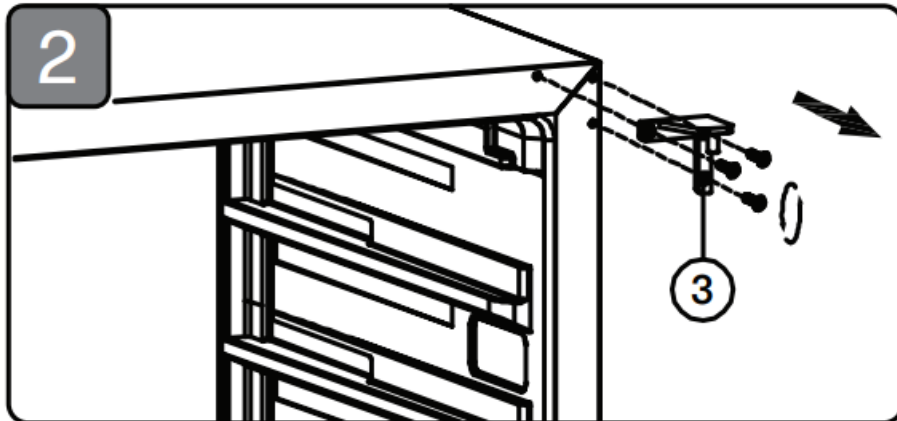


 3. Remove the door magnet (4) and door stopper (5) by 2 screws each. Retrieve the new door stopper (6) from the hardware package. Install the door magnet (4) and new door stopper (6) on the opposite side of the door frame by 2 screws each. Rotate the door 180 degrees.

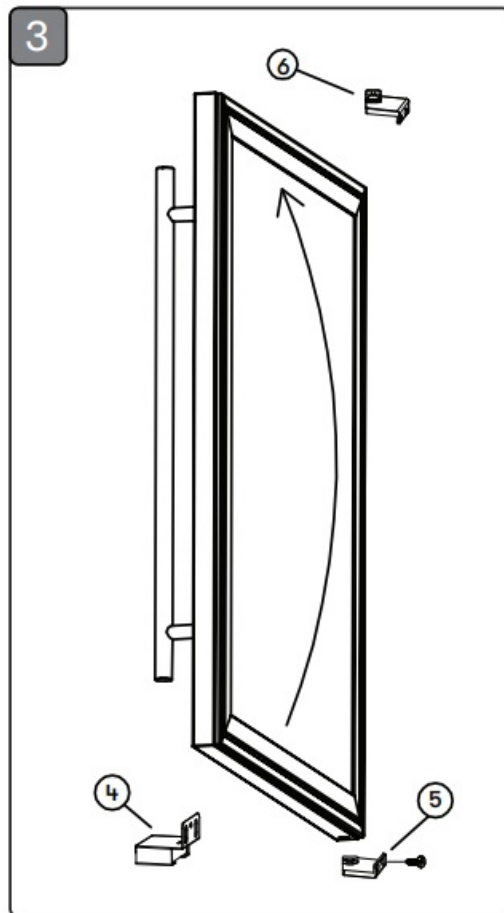


4. Remove the 3 black decorative covers (7) from the top left of the cabinet. Install the black decorative covers to the top right of the cabinet and install the new top hinge (8) from the hardware package at the top left of the

 cabinet with 3 screws.

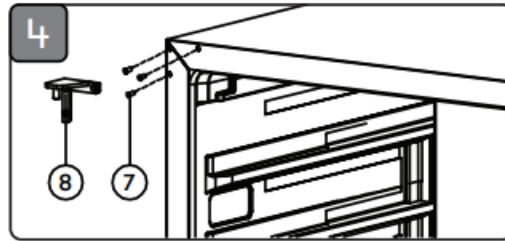

 
5. Install the lower door axis (9) and install the door once correctly aligned.

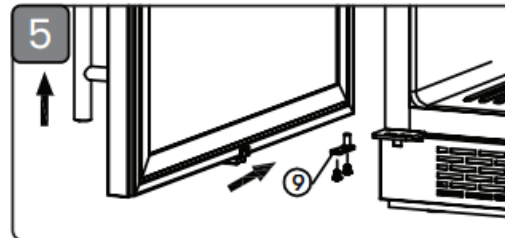

- To prevent damaging the door or door gasket, make sure the door is open at least 90 degrees when pulling shelves out of the rail compartment.
- The door opens to a maximum of 135 degrees with a door stop on the bottom hinge preventing the door from opening further.

Removing the Wire Shelf

 1. Open the door completely.
2. Remove all of the contents loaded on the shelf, if applicable.
3. Make sure the shelf is completely pushed back.
4. Carefully lift either the left or right side of the shelf to create a 45-degree angle from its original position. Do not lift either side of the shelf too hard as it may come in contact with the inner wall mount.
5. Remove the shelf by pulling it outwards. There may be some resistance from the metal guard rail.

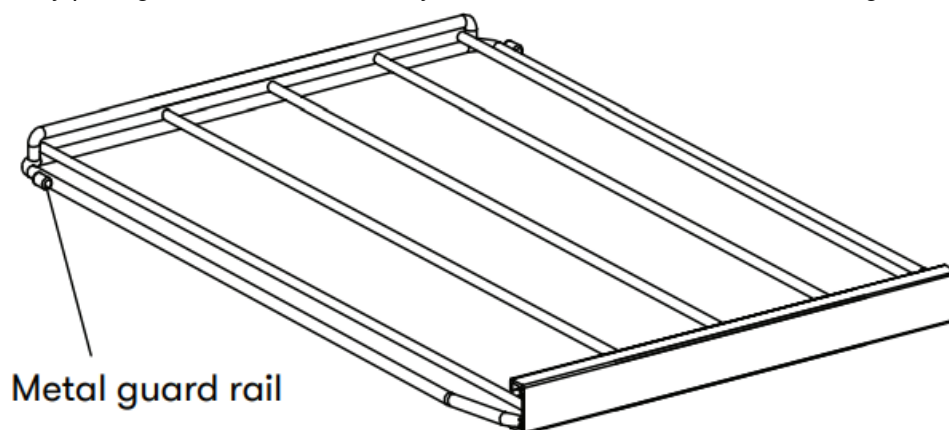

Operating Your Appliance


If the unit is unplugged, power lost, or turned off, you must wait 3 to 5 minutes before restarting the unit. If you attempt to restart before this time delay, the appliance may not start and will not keep the last set temperature.

Using the Control Panel




This wine cooler has a temperature range from 40°F-65°F.


- **Power Button**

-  Press and hold this button for three seconds to power your unit on or off. While the unit is on, the R “Compressor Running” light may illuminate to indicate the internal compressor is active.


- **Interior Light**

-  Press this button to turn the lights on and off. The light color is Deep Blue.

- **Decrease Temperature**

-  Press this button to decrease the temperature by one (1) degree increments. 40°F is the lowest available temperature on this unit.

- **Increase Temperature**

-  Press this button to increase the temperature by one (1) degree increments. 65°F is the highest available temperature on this unit.

- **°F/°C Selector**

- Hold the Increase and Decrease Temperature buttons at the same time to switch the display temperature.

- **NOTE:** The wine cooler is equipped with a temperature memory function. If power is suddenly lost, the previous set temperature will be saved, and the cooler will return to this setting once power is restored.

Internal Light

- This refrigerator is equipped with side internal lights that are lit Deep Blue. Because the unit comes with a glass door, the inside will be seen whether the door is open or closed.
- You can choose to display the internal light in two different modes: Display Mode and Automatic Mode by pressing and holding the Interior Light button for 3 seconds.

Automatic Mode

- The internal lights will illuminate each time the door is opened and fade off after the door is closed. This is the default lighting mode. This feature is triggered by a sensor located on the front vent that recognizes when the door is open or closed.

Display Mode

- The internal lights will remain illuminated whether the door is open or closed. This is a user-enabled lighting mode and will use more energy.

Door Open Alarm

- After 3 minutes of the door being open an alarm will sound and the display will flash with 00.

Sabbath Mode

- Sabbath mode disables system responses to user-initiated activities and all external functions, including lighting, display, and audible alarms. The unit will still maintain internal temperatures and set points.
- To enable or disable Sabbath mode, Press the Power Button and simultaneously press the Increase Temperature Button twice. The interior light and control display will go dark until the user disables Sabbath mode.
- **NOTE:** Although the display will not be visible, the temperature settings will remain active and preserve the internal temperature. Sabbath mode will remain active until it is disabled by the user.

Demonstration Mode

- In this mode, the compressor and fans never turn on but all other functions remain enabled. When in Demonstration Mode, the “R” indicator light will slowly blink indicating it is in Demonstration Mode.
- To enable or disable Demonstration mode, hold the Power Button and tap the Decrease Temperature Button twice.

Temperature Alarm

- If the interior temperature is higher than 73°F (23°C), “HI” is shown on the temperature control panel and the temperature alarm will sound continuously after one hour. This indicates that the inner temperature is too high.
- If the inner temperature is lower than 32°F (0°C), “LO” is shown on the temperature display panel and the temperature alarm will sound continuously after 15 minutes. If one of these situations occurs, please reference the troubleshooting section for support.

Defrosting

- The wine cooler is designed with an automatic defrost system. However, in colder settings, some frost may build up. Additionally, the more humid the ambient conditions, the more frost may build up.
- Keep the door closed as much as possible and avoid opening the door unnecessarily to minimize frost build-up.
- If frost is preventing the door from closing properly, you may need to power the unit off until the frost melts (possibly up to 24 hours). Use a soft absorbent towel to dry the unit.
- **WARNING** Never attempt to remove frost with a sharp object.

Care and Maintenance

Normal Sounds

- Your new wine cooler may make sounds that are not familiar to you. Most of the new sounds are normal. Hard surfaces like the floor or walls can make the sounds seem louder than they are.
- The following describes the kinds of sounds that might be new to you and what may be making them.

- Rattling noises may come from the flow of the refrigerant or the water line.
- Items stored on top of the wine cooler can also make noises.
- The high-efficiency compressor may make a pulsating or high-pitched sound.
- Water running from the evaporator to the water bin may make a splashing sound.
- As each cycle ends, you may hear a gurgling sound due to the refrigerant flowing in your wine cooler.
- You may hear air being forced over the condenser by the condenser fan.

Cleaning the Unit

- Periodic cleaning and proper maintenance will ensure efficiency, top performance, and long life.

Interior Cleaning

1. Disconnect power to the unit.
2. Open the door and remove the contents and shelves.
3. With a clean cloth, wipe down the interior of the unit.
4. Reinsert the shelves and wine.
5. Reconnect power to the unit.

Exterior Cleaning

- The door and cabinet may be cleaned with a mild detergent and lukewarm water solution such as two (2) tablespoons of baking soda to one (1) quart of water. Do not use solvent-based or abrasive cleaners.
- Use a soft sponge and rinse with clean water. Wipe with a soft clean towel to prevent water spotting. If the door panel is stainless steel, it can discolor when exposed to chlorine gas and moisture.
- Clean stainless steel with a cloth dampened with a mild detergent and warm water solution. Never use an abrasive or caustic cleaning agent.

Power Failure

- Most power failures are corrected within a few hours and should not affect the temperature of your appliance if you minimize the number of times the door is opened.
- If the power is going to be off for a longer time, you need to take the proper steps to protect your contents.

Moving Your Wine Cooler

- Remove all items.
- Securely tape down all loose items (shelves) inside your appliance.
- Turn the adjustable leg all the way up (clockwise) to the base to avoid damage.
- Tape the door shut.
- Be sure the appliance stays secure in an upright position during transportation. Also, protect the outside of the appliance with a blanket or similar item.

Energy Saving Tips

- The appliance should be located in the coolest area of the room, away from heat-producing appliances, and out of direct sunlight.
- Ensure that the unit is adequately ventilated. Never cover air vents.
- Only open the door for as long as necessary.

Troubleshooting

| Possible Problem | Possible Cause | Solutions |
|--|--|---|
| The appliance does not operate. | Not plugged in. | Ensure the appliance is plugged in and the power outlet has power. |
| | The appliance is turned off. | Turn on the appliance. |
| | The circuit breaker tripped or has a blown fuse. | Replace the broken fuse or reset the breaker. |
| | Sabbath mode may be enabled. | See the Operating Your Appliance section and verify if Sabbath mode is disabled. |
| The appliance is not cold enough. | The temperature control setting is too high. | Adjust the set temperature. |
| | External environment may require a higher setting. | Keep the appliance away from sunshine or other heat sources. |
| | The door is opened too frequently or for long periods. | Close the door tightly and do not open the door too frequently or for a long period. |
| | The door gasket is not sealed properly. | Ensure the door gasket is not loose. |
| | Demonstration mode may be enabled. | See the Operating Your Appliance section and verify if the Demonstration mode is disabled. |
| | The cooler does not have sufficient ventilation. | Read and follow the "Installation Clearance Requirements" in the Installation Instructions section. |
| | The cooler has restricted airflow due to too much storage. | Open space in the cabinet to allow airflow. |
| The appliance turns on and off frequently. | The room temperature is hotter than normal. | Run the refrigerator at the appropriate ambient temperature. |
| | The door gasket is not sealed properly. | Ensure the door gasket is not loose. |
| | The door is opened too frequently or for long periods. | Close the door tightly and do not open the door too frequently or for a long period. |
| | The cooler does not have sufficient ventilation. | Read and follow the "Installation Clearance Requirements" in the Installation Instructions section. |
| | The door is not closed completely | Make sure the door is completely closed. |
| The body of the appliance is electrified. | The unit is not properly grounded. | Contact your local electrician to test your electrical grounding system. |

| Possible Problem | Possible Cause | Solutions |
|-------------------------------------|---|---|
| Frost is forming in the appliance. | The environment is too humid. | The unit uses an 'auto-defrost' system, under certain conditions, manual defrosting may be required. If frost builds up, you can try running the refrigerator in a warmer temperature setting, minimizing the number of times you open the door, or unplugging the unit to allow the frost to melt. |
| | The ambient temperature is too low. | |
| | The door is being opened too frequently. | |
| The appliance makes too much noise. | The rattling noise may come from the flow of the refrigerant, which is normal. As each cycle ends, you may hear gurgling sounds caused by the flow of refrigerant in the appliance. | It is normal that as each cooling cycle ends, you may hear rattling or gurgling sounds caused by the flow of refrigerant in the appliance. The high-efficiency compressor may make a pulsating or high-pitched sound. |
| | Contraction and expansion of the inside walls may cause popping and cracking noises. | Some popping or cracking noises are normal. They are caused by the expansion and contraction of the inside walls due to temperature changes. |
| | The unit is not level or is touching another appliance. | Check to make sure the cooler is level and that it is not in contact with another appliance or furniture. |
| The door will not close properly. | The appliance is not level. | Make sure the appliance is on a level surface. |
| | The door gasket is not installed correctly. | Make sure the door gasket is properly installed. |
| | The gasket is dirty. | Clean the door gasket. |
| | The shelves are out of position. | Install the shelves correctly. |

Limited Warranty

- Zephyr Ventilation, LLC (referred to herein as “we” or “us”) warrants to the original consumer purchaser (referred to herein as “you” or “your”) of Zephyr products (the “Products”) that such Products will be free from defects in materials or workmanship as follows.
- Five-Year Limited Warranty for Compressor:** For five years from the date of your original purchase of the

Products, we will provide, free of charge, compressor parts to replace those that failed due to manufacturing defects subject to the exclusions and limitations below. We may choose, in our sole discretion, to repair or replace parts before we elect to replace the Products.

- **Two-Year Limited Warranty for Parts:** For two years from the date of your original purchase of the Products, we will provide, free of charge, Products or parts (including LED light bulbs, if applicable) to replace those that failed due to manufacturing defects subject to the exclusions and limitations below. We may choose, in our sole discretion, to repair or replace parts before we elect to replace the Products.
- **One-Year Limited Warranty for Labor:** For one year from the date of your original purchase of the Products, we will provide, free of charge, the labor cost associated with repairing the Products or parts to replace those that failed due to manufacturing defects subject to the exclusions and limitations below. After the first year from the date of your original purchase, you are responsible for all labor costs associated with this warranty.
- **To Obtain Service Under Limited Warranty:** To qualify for warranty service, you must: (a) notify us at the address or telephone number stated below within 60 days of the discovery of the defect; (b) give the model number and serial number; and (c) describe the nature of any defect in the Product or part. At the time of the request for warranty service, you must present evidence of your proof of purchase and proof of the original purchase date. If we determine that the warranty exclusions listed above apply or if you fail to provide the necessary documentation to obtain service, you will be responsible for all shipping, travel, labor, and other costs related to the services. This warranty is not extended or restarted upon warranty repair or replacement.
- **Warranty Exclusions:** This warranty covers only repair or replacement, at our option, of defective Products or parts and does not cover any other costs related to the Products including but not limited to: (a) normal maintenance and service required for the Products and consumable parts such as filters, light bulbs, fuses; (b) any Products or parts which have been subject to freight damage, misuse, negligence, accident, faulty installation or installation contrary to recommended installation instructions, improper maintenance or repair (other than by us); (c) commercial or government use of the Products or use otherwise inconsistent with its intended purpose; (d) natural wear of the finish of the Products or wear caused by improper maintenance, use of corrosive and abrasive cleaning products, pads, and oven cleaner products; (e) chips, dents or cracks caused by abuse or misuse of the Products;
- **(f)** service trips to your home to teach you how to use the Products;
- **(g)** damage to the Products caused by accident, fire, floods, or acts of God; or (h) Custom installations or alterations that impact the serviceability of the Products. (i) Damage to personal property or food spoilage from the use of this product.
- If you are outside our service area, additional charges may apply for shipping costs for warranty repair at our designated service locations and for the travel cost to have a service technician come to your home to repair, remove, or reinstall the Products.
- After the first year from the date of your original purchase, you are also responsible for all labor costs associated with this warranty. All Products must be installed by a qualified professional installer to be eligible for warranty repairs or service.
- **Limitations of Warranty:** OUR OBLIGATION TO REPAIR OR REPLACE, AT OUR OPTION, SHALL BE YOUR SOLE AND EXCLUSIVE REMEDY UNDER THIS WARRANTY. WE SHALL NOT BE LIABLE FOR INCIDENTAL, CONSEQUENTIAL, OR SPECIAL DAMAGES ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THE PRODUCTS. THE EXPRESS WARRANTIES IN THE PRECEDING SECTION ARE EXCLUSIVE AND INSTEAD OF ALL OTHER EXPRESS WARRANTIES. WE HEREBY DISCLAIM AND EXCLUDE ALL OTHER EXPRESS WARRANTIES FOR THE PRODUCTS, AND DISCLAIM AND EXCLUDE ALL WARRANTIES IMPLIED BY LAW, INCLUDING THOSE OF MERCHANTABILITY AND

FITNESS FOR A PARTICULAR PURPOSE. Some states or provinces do not allow limitations on the duration of an implied warranty or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. To the extent that applicable law prohibits the exclusion of implied warranties, the duration of any applicable implied warranty is limited to the same two-year and one-year periods described above if permitted by applicable law. Any oral or written description of the Products is for the sole purpose of identifying the Products and shall not be construed as an express warranty. Before using, implementing, or permitting the use of the Products, you shall determine the suitability of the Products for the intended use, and you shall assume all risk and liability whatsoever in connection with such determination. We reserve the right to use functionally equivalent refurbished or reconditioned parts or Products as warranty replacements or as part of warranty service. This warranty is not transferable from the original purchaser and only applies to the consumer residence where the Product was originally installed located in the United States and Canada. This warranty is not extended to resellers.


Product Registration

- Congratulations on the purchase of your Zephyr product! Please take a moment to register your new Zephyr product at www.zephyronline.com/registration

IT'S IMPORTANT

- Prompt registration helps in more ways than one.
- Ensures warranty coverage should you need service.
- Ownership verification for insurance purposes. Notification of product changes or recalls.
- Zephyr Ventilation 2277 Harbor Bay Pkwy. Alameda, CA 94502
- Please check our website for any additional Product information, www.brisasbyzephyr.com.

Documents / Resources
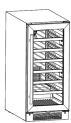
| | |
|--|--|
|  <p>brisas BWN15C01AG Single Zone Wine Cooler (1) Use, Care, and Installation Guide (2) Guide to Features, Dimensions and Certification</p> | <p>ZEPHYR BWN15C01AG Brisas By Zephyr Wine Cooler [pdf] Installation Guide BWN15C01AG, SEP24.0201, BWN15C01AG Brisas By Zephyr Wine Cooler, BWN15C01AG, B risas By Zephyr Wine Cooler, Zephyr Wine Cooler, Wine Cooler, Cooler</p> |
|--|--|

References

- [b Wine & Beverage Coolers | Range Hoods | Brisas By Zephyr](#)
- [🌐 Wine & Beverage Coolers | Range Hoods | Brisas By Zephyr](#)
- [🔗 Login | Zephyr Parts & Accessories Store](#)
- [User Manual](#)