



ZEPHYR LOCK



Work Manual

Fixed Mode (Administrator)

FC ID: 2BG47XLY-9000

Contents [[hide](#)]

- 1 Product Introduction
- 2 Instruction
- 3 Functional Module
- 4 System Parameter Setting
- 5 Operation Setting
- 6 Mode Switching
- 7 Time Period Settings
- 8 Restore Factory
- 9 Account Management
- 10 Product Composition Introduction
- 11 Documents / Resources
 - 11.1 References

Product Introduction

1. The following operations are for administrators only.
2. This operation guide applies to the controller in fixed mode.
3. The operation of this product has a total of 6 functional modules, which will show the operation steps for users according to the user's operation sequence.
4. Because the verification mode is set according to the customer's selection before delivery, the administrator needs to perform operations according to the actual interface

Instruction

Login Action



First, click on the red box in the upper right corner 5 times ➡

 
Secondly, in the login interface, enter the correct account and password ➡

Click to log ➡ in Login successful, can jump to the main interface

- The factory account is: admin, and the factory password is 1234. This account has controller management function, account and password leakage can cause system abnormalities;
- If the first person in charge is the cabinet manufacturer, and the cabinet manufacturer does not add an administrator on the controller side for the customer when selling, so it is necessary to inform the customer that the factory account and password must only be known to senior administrator, to authorize ordinary administrator in other departments, please add corresponding accounts in Account Management.

Functional Module

System Setting

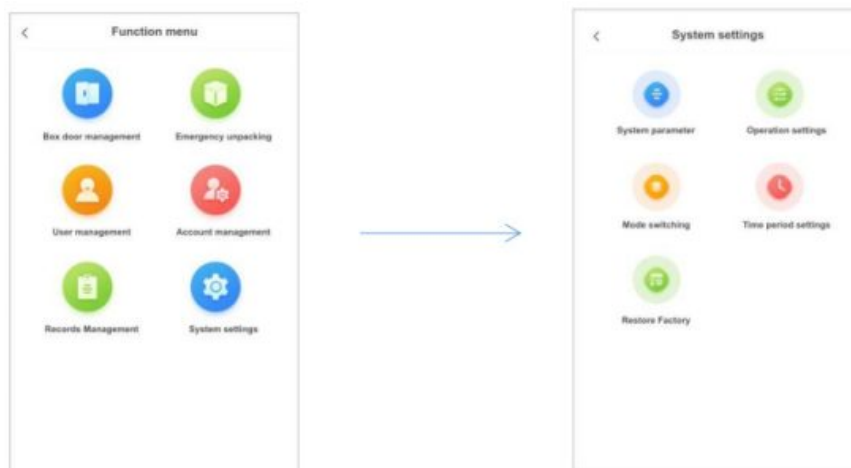


Click on administrator information ➡ Select the administrator to modify ➡ Enter the information you want to modify and click OK


The system setting module is divided into 5 parts, and administrator can modify some parameters.

System Parameter Setting

 Volume setting

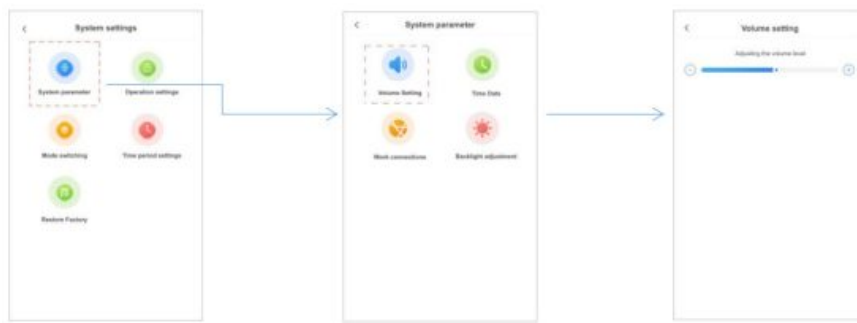

 Click on system device setting ➡ Click on volume setting ➡ Adjusting the volume
 ➡ Click on the volume setting to return to the homepage

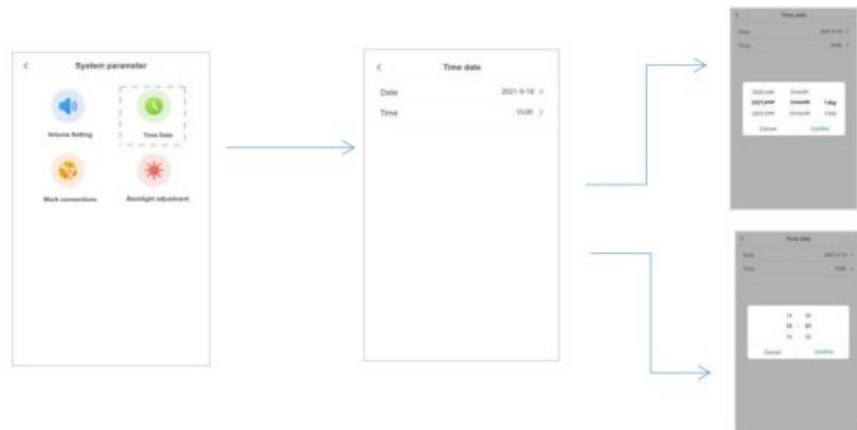

Click on time and date ➡ Modification date and time ➡ Click OK

Network address

 
Network address can be modified according to actual conditions

Backlight adjustment




Click on backlight adjustment to adjust the backlight According to your needs

Operation Setting

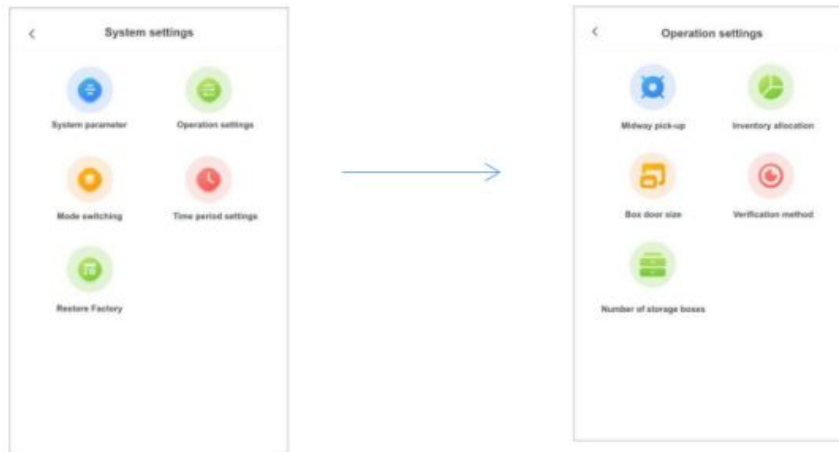

The operation setting module has a total of 5 functional components, which administrators can set according to actual needs.

 Inventory allocation

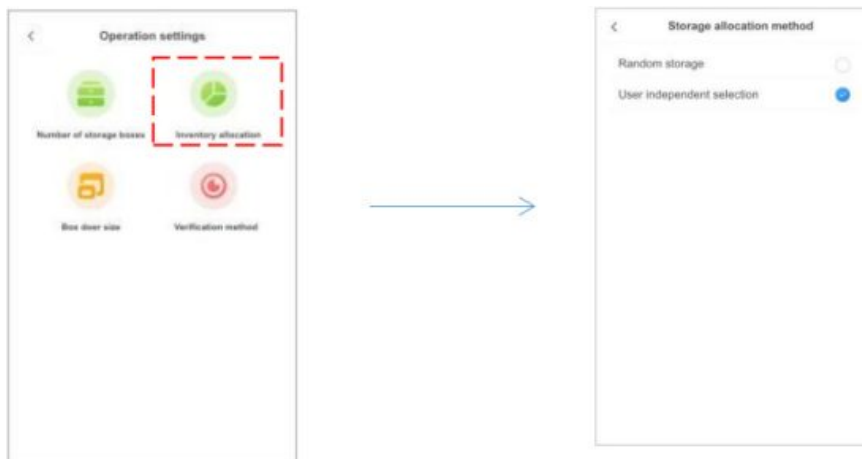

Click on inventory allocation ➡ Choose the desired storage method

- In the storage process, choosing “random storage” means that the box door is directly allocated by the system during storage;
- During the storage process, selecting “user independent selection” means that the user can independently select the box door to open during storage.

 
Box door size



Click on the box door size ➡ Do you need to set the size of the selected box door

- Administrator can choose whether to open the box door size setting based on the actual container.


Unpacking verification method

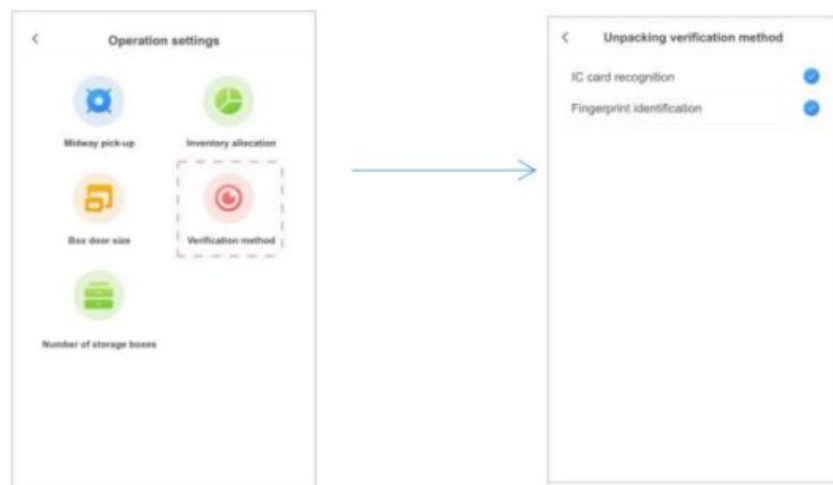

Click on verification method ➡ Select verification method

- Selecting 'Fixed Mode' means that only users who have already been added can be hosted;
- Please note that after mode switching, the controller will restore its factory settings, but does not include administrator information.

 Number of storage boxes

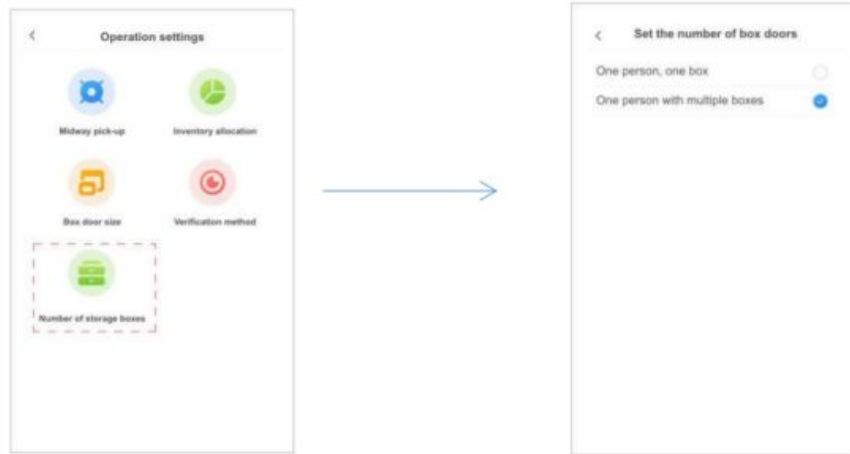

Click on the number of storage boxes ➡ Select the number of box doors that can be opened simultaneously by one person during storage

- Selecting “one person, one box” means that when storing items at a time, one person can only open one box door;
- Selecting “one person with multiple boxes” means that when storing items at a time, one person can only open multiple box doors

Mode Switching



Click on mode switch ➡ Select mode

- Select “sharing mode” to represent temporary users, or they can be hosted;
- In the shared mode, administrators add long-term fixed users on the controller side; It can also be deposited;
- Please note that after mode switching, the controller will restore its factory settings, but does not include administrator information.

Time Period Settings



Click on time period settings ➡ Set access window and cleaning time

 
Restore Factory



Click to restore factory ➡ Reconfirm whether to restore factory settings

Account Management

Increase

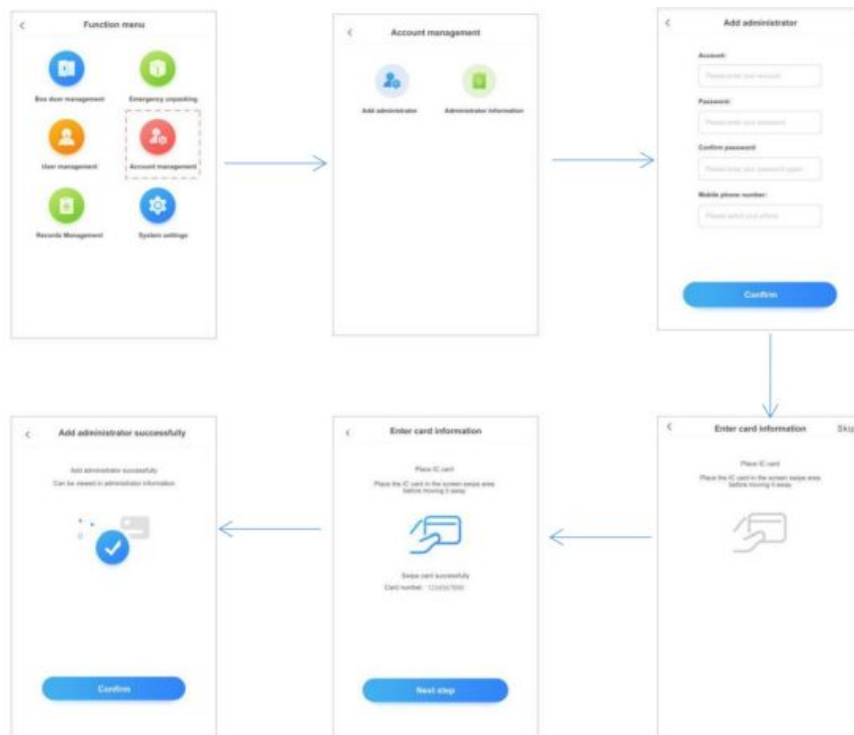


Click on account management ➡ Click to add an administrator ➡ Fill in the newly added administrator information as required ➡ Click OK According to the system prompt, place the card at the swipe identification point.

After the interface prompts that the card has been successfully added, click OK


- When entering a card, if you do not want to enter it, you can choose “Skip” in the upper right corner;
- The account management module adds administrator, and company administrators can add department administrator here;
- When the added administrator logs in to the controller again, they can directly move the added card close to the sensor swipe card, which will directly redirect to the administrator login interface. The administrator account will be automatically filled in, just enter the password, you can log in now;
- Administrator can add multiple at the same time.

 Modification

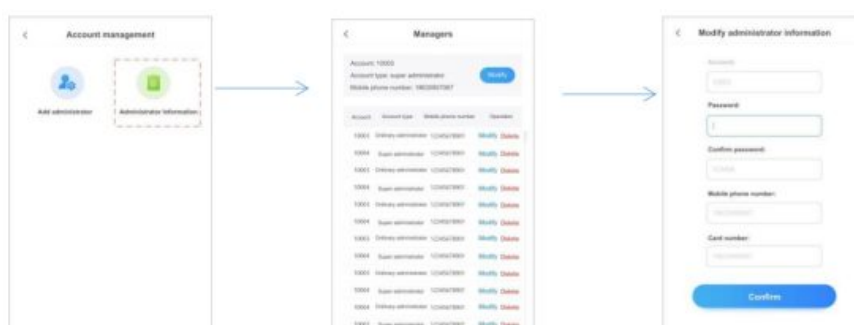

Click on administrator information In the administrator list ➡ Select the administrator you want to modify and click modify ➡ In the pop-up modification interface, you can modify the administrator information again

 Delete

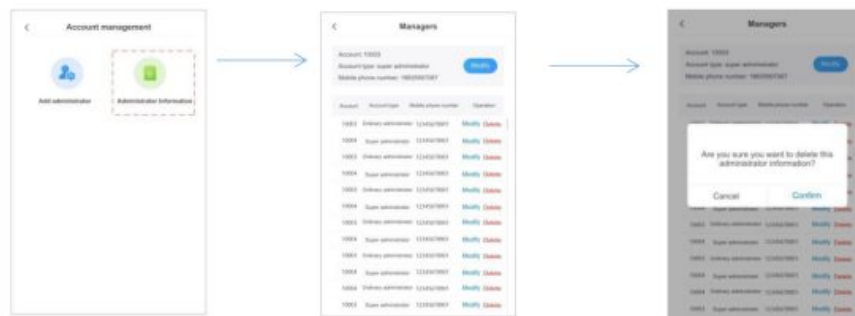


Click on administrator information ➡ In the administrator list ➡ Select the administrator you want to delete and click delete ➡ In the pop-up modification interface, you can confirm again whether to delete the Management

User Management

When the networking version is in fixed mode, the administrator cannot add common users from the controller side, only from the background Add: The controller can view and delete user information

 Modify/Delete

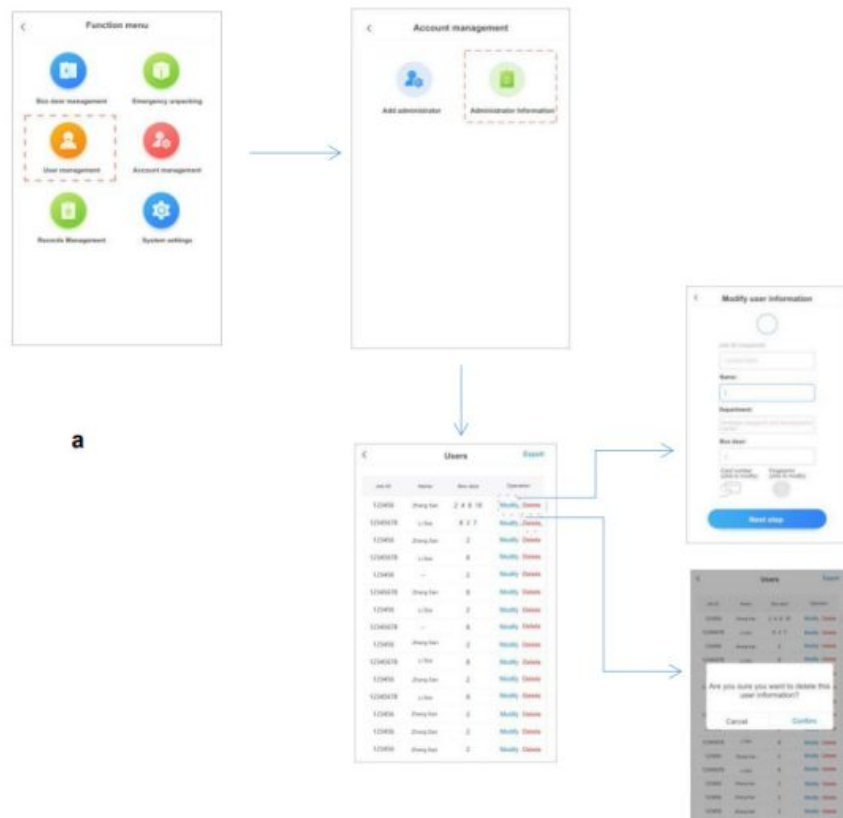


a

Click on user information ➡ In the user list ➡ Choose to modify user information/delete user actions


- The user information list can be exported locally through the “export” button in the upper right corner.

 Box Door Management

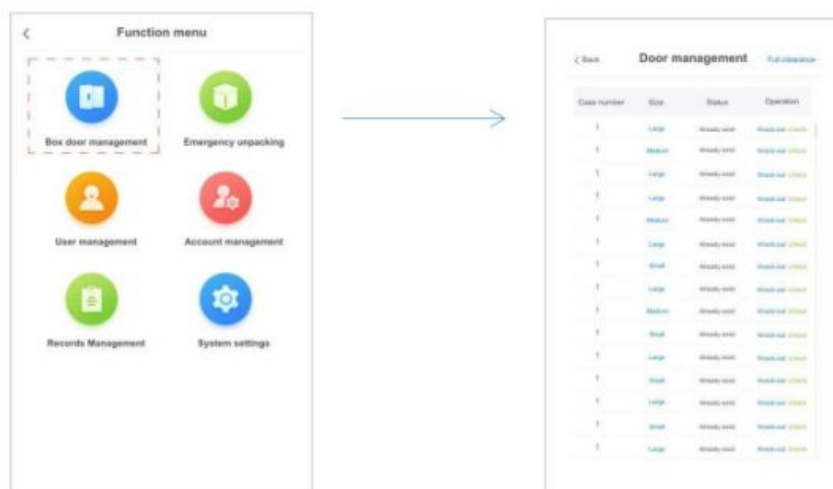

Click on box door management ➡ In the box door list ➡ Can view the status of the box door/remotely operate the box door

 
Mergency Unpacking

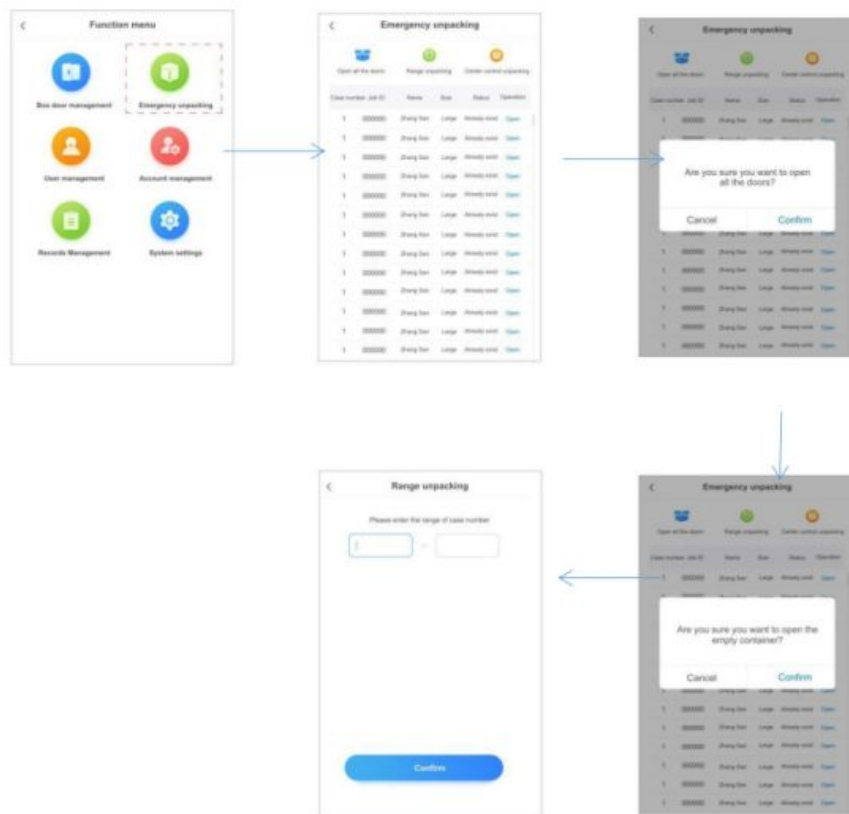


Click on emergency management ➡ List of displayed box door information ➡ Remote operation of the box door

- Select “fully open box door” to represent the box doors connected to this controller, all of which will open;
- Selecting “scope unpacking” means that you can specifically open certain box doors;
- Selecting “central control unpacking” means that the door of the controller’s box will be opened;
- Administrators can also select a single box door to open and directly click on “open box” behind the box door.

 Record Management

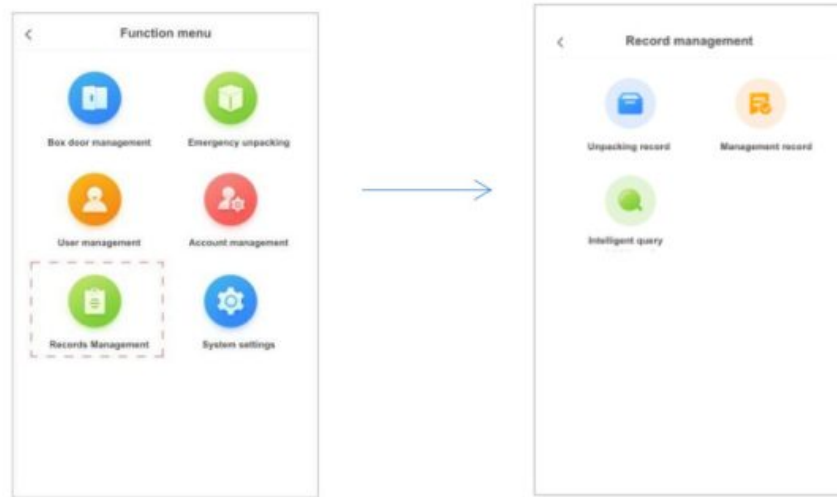

 Click on Record Management ➡ You can view the usage records of the container on this interface

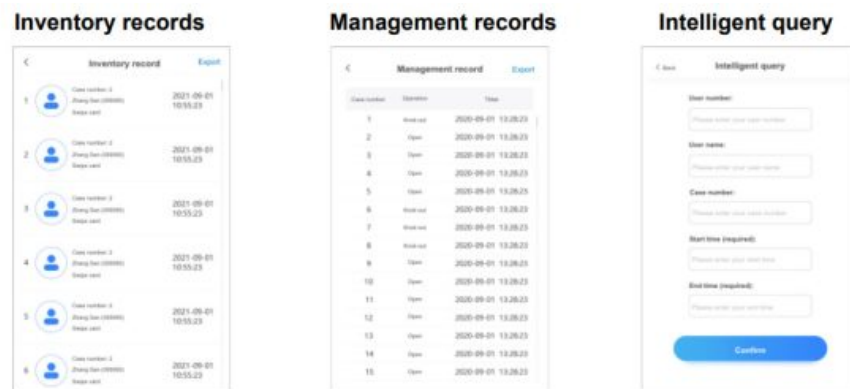


Special Functions

1. Users should pay attention to moisture-proof and sunscreen when using the product, otherwise it will cause the product to not be used properly.
2. Please take attention that changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Product Composition Introduction

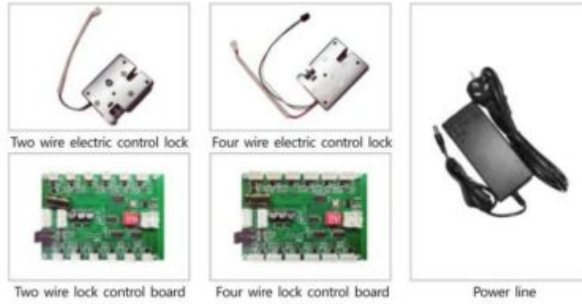


- One controller can control 16 locking boards;
- A lock control board can control 12 locks;
- One power supply (12V-15V, 3A) is recommended to be able to mount 5 locking boards;
- The line needs to be calculated based on the cabinet body.

Product Opening And Installation Display


Unit: mm

Opening for front installation

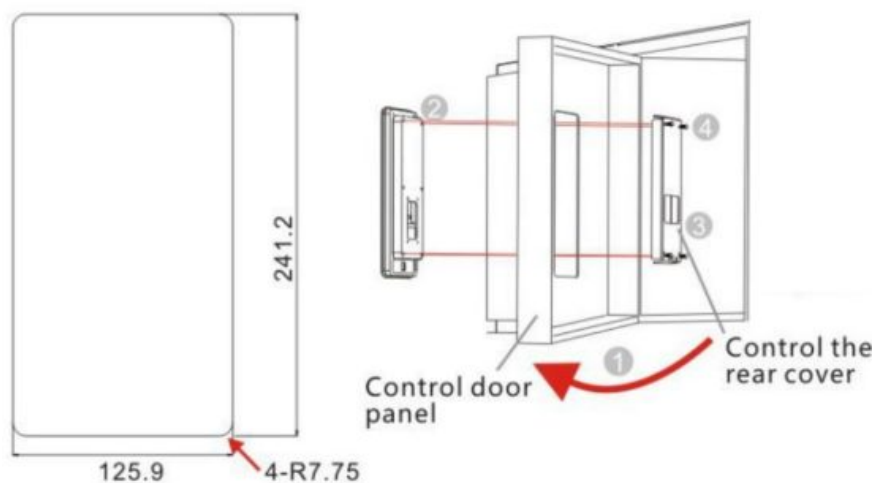

1. Firstly, open the control door of the storage cabinet:
2. Next, place the controller into the installation hole from the front of the door panel;
3. Follow the installation diagram for the control rear cover installation,
4. Tighten the screws.

Opening for rear installation

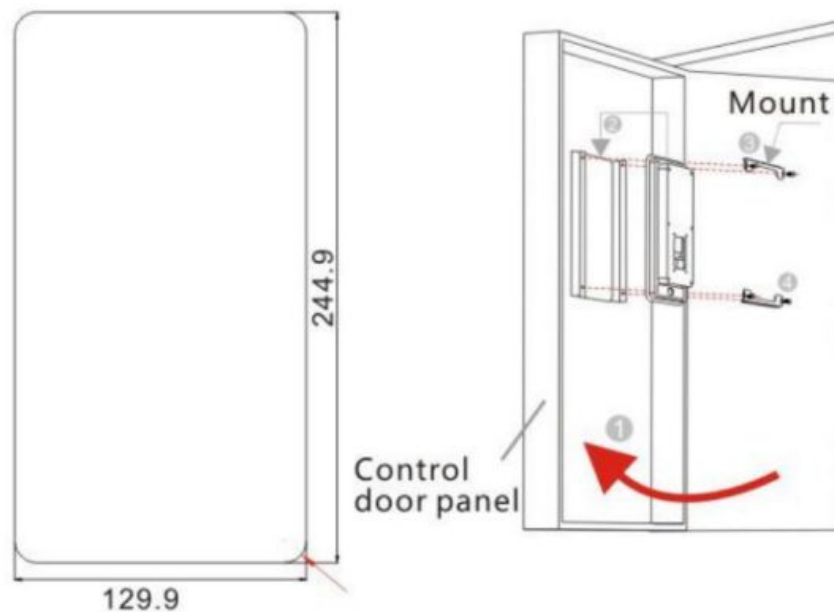

1. Firstly, open the control door of the storage cabinet
2. Next, place the controller theme into the installation hole as shown in Figure 2
3. Align the mounting bracket screws with the door panel mounting screw holes
4. Tighten the screws.

Note: The built-in installation lock frame is a lock accessory provided by the lock manufacturer

ZEPHYR LOCK

Documents / Resources

<p>Work Manual</p> <p>Fixed Mode (Administrator)</p> <p>PC ID: 2B047XLY-9000</p>	<p>Zephyrlock XLY-9000 Electronic Keypad Locker Lock [pdf] Instruction Manual</p> <p>2BG47XLY-9000, 2BG47XLY9000, xly 9000, XLY-9000 Electronic Keypad Locker Lock, XLY-9000, Electronic Keypad Locker Lock, Keypad Locker Lock, Locker Lock</p>
---	--

References

- [User Manual](#)

■ Zephyrlock

🔍 2BG47XLY-9000, 2BG47XLY9000, Electronic Keypad Locker Lock, Keypad Locker Lock, Locker Lock, xly 9000, XLY-9000 Electronic Keypad Locker Lock, Zephyrlock

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.